


INSTALLATION

1. INSTALL NEW SPEED SENSOR


- (a) Clean the contacting surface of the axle hub and a new speed sensor.

NOTICE:

Do not stick any foreign objects to the sensor rotor.

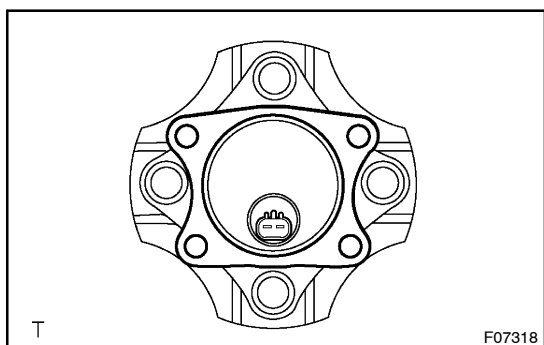

- (b) Place the speed sensor on the axle hub so that the connector makes the most downward position under the on-vehicle condition.

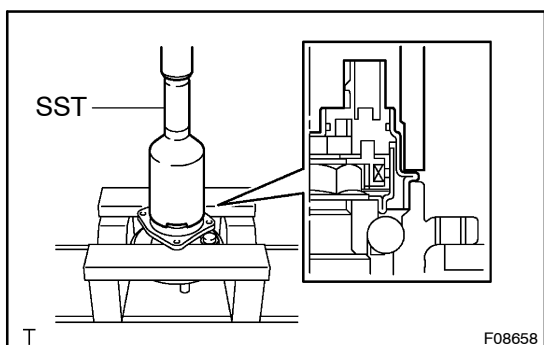

- (c) Using SST and a press, install a new speed sensor to the axle hub.

SST 09214-76011

NOTICE:

- Do not tap the speed sensor with a hammer directly.
 - Check that there should be no foreign objects on the speed sensor detection portion.
 - Press in the speed sensor straight and slowly.
2. INSTALL SPEED SENSOR WITH REAR AXLE
(See page SA-55)
 3. CONNECT SPEED SENSOR CONNECTOR
 4. INSTALL REAR WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
 5. CHECK SPEED SENSOR SIGNAL (See page DI-68)