


DISASSEMBLY

1. REMOVE BOOT AND PUSH ROD

- (a) Pull out the boot with the push rod.
- (b) Remove the boot from the push rod.

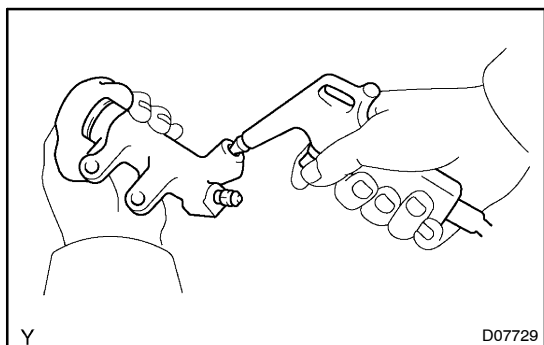

2. REMOVE PISTON AND SPRING

Using compressed air, remove the piston with the spring from the cylinder.

NOTICE:

- **Blowing off the air may cause the piston's jump-out. When removing the piston, hold it with your hand using a waste cloth.**
- **Take care not to splash brake fluid when air-blowing.**

3. REMOVE BLEEDER PLUG