


AUTOMATIC TRANSAXLE

HOW TO PROCEED WITH TROUBLESHOOTING

DI2L4-06

When using hand-held tester, troubleshoot in accordance with the procedure on the following pages.

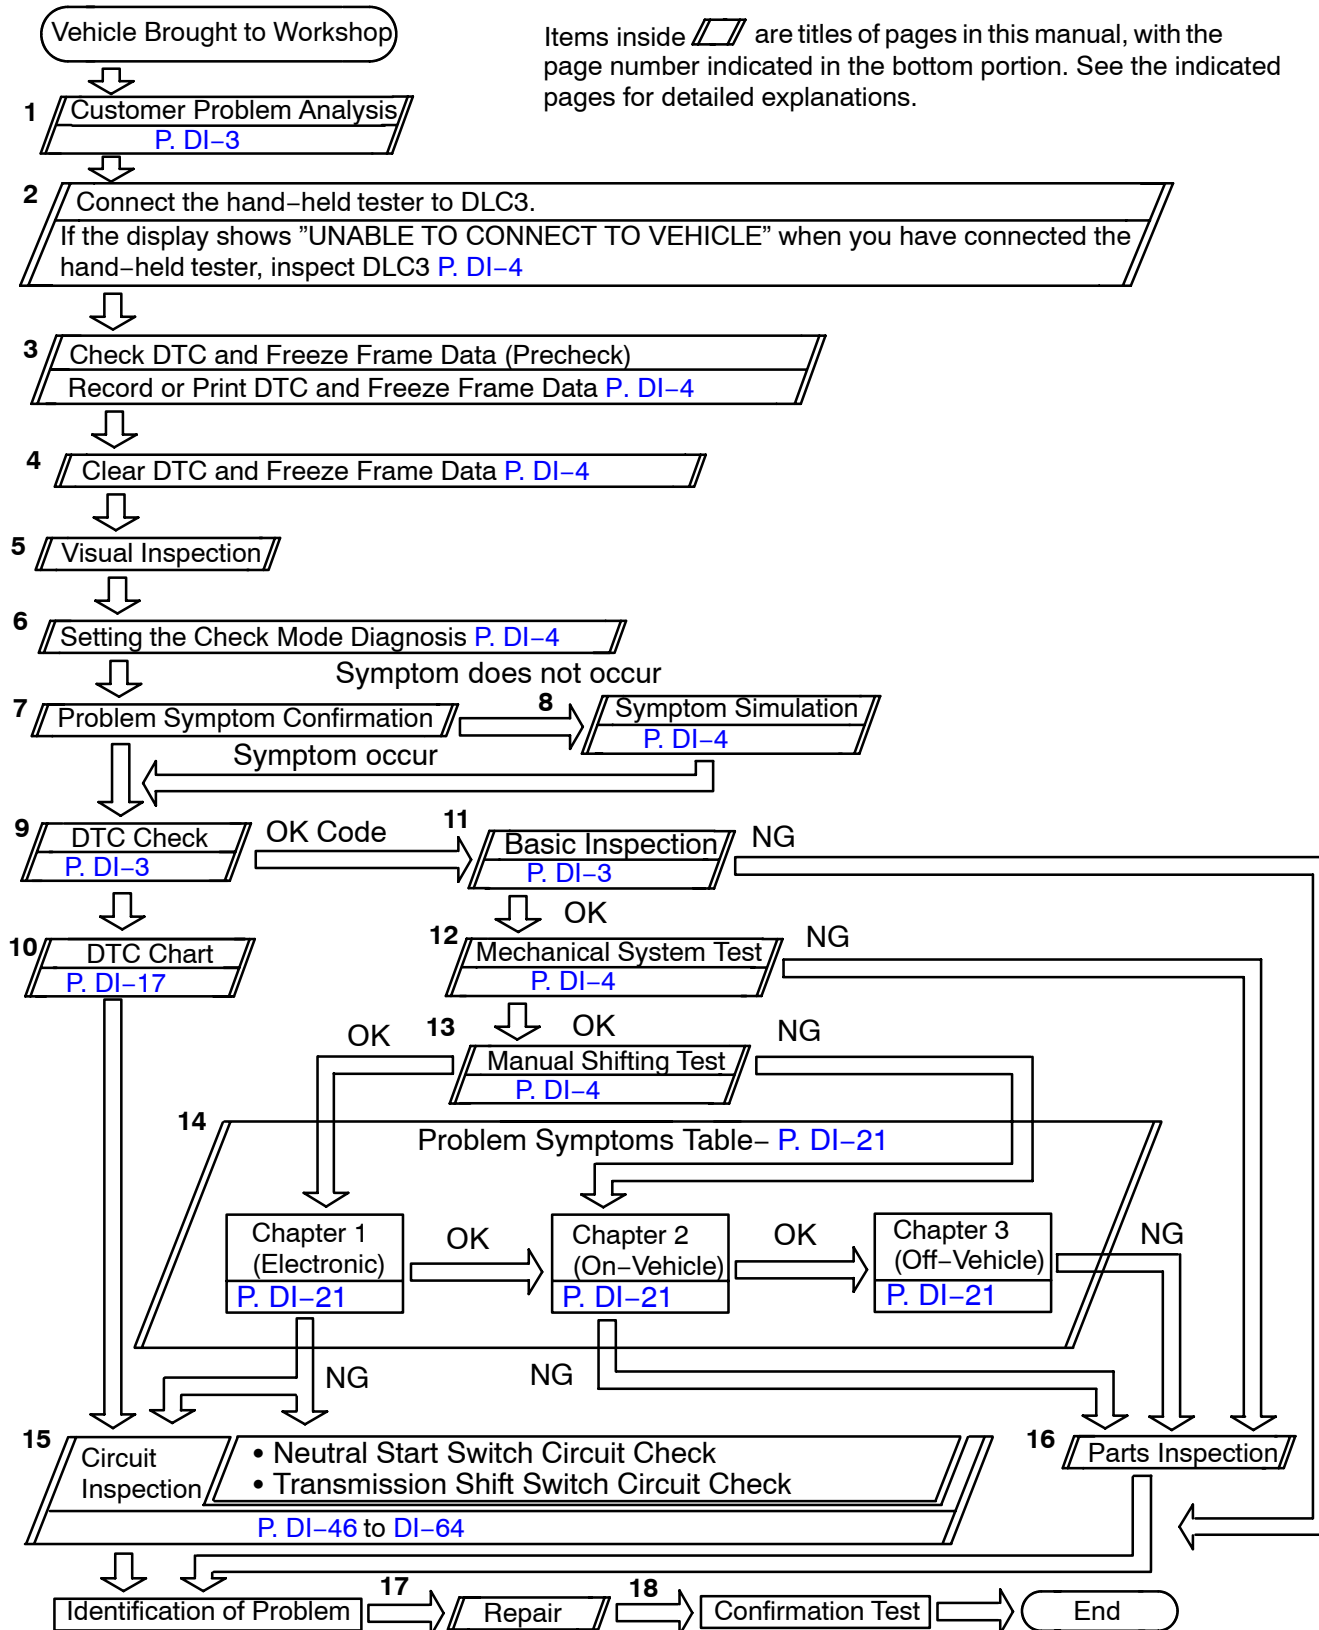

When using hand-held tester, troubleshoot in accordance with the procedure on the following pages.

Items inside  are titles of pages in this manual, with the page number indicated in the bottom portion. See the indicated pages for detailed explanations.

