


Double lock switch circuit (Europe RHD)

CIRCUIT DESCRIPTION

The double lock detection switch is built in the door lock motor assembly. This switch is ON when the double lock is in the unlock position and OFF when the double lock is in the double lock position. The ECU detects the double lock conditions is this circuit.

WIRING DIAGRAM

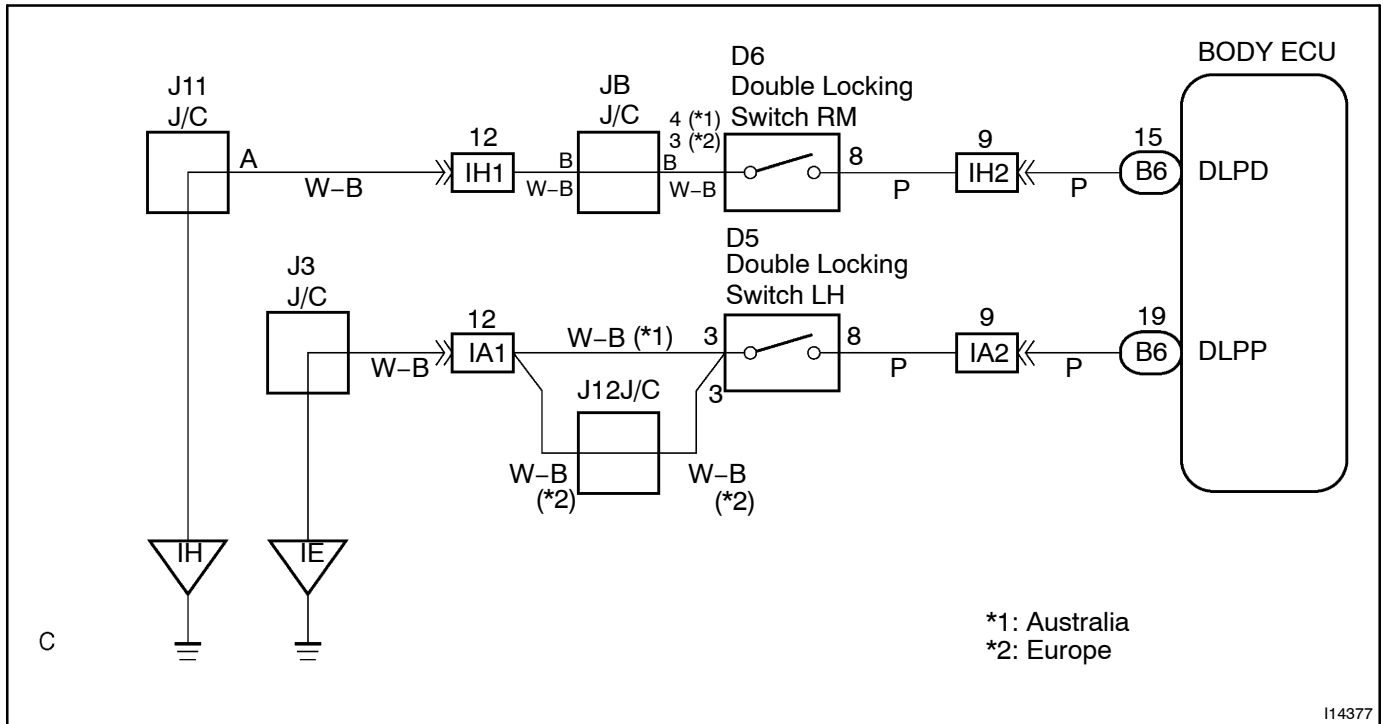

I14377

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check double lock switch (See page XX-XXX). |
|---|---|

NG

Replace the double lock switch.

OK

- | | |
|---|--|
| 2 | Check wireharness and connector between double lock switch and body ECU (See page DI-367). |
|---|--|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-355).
