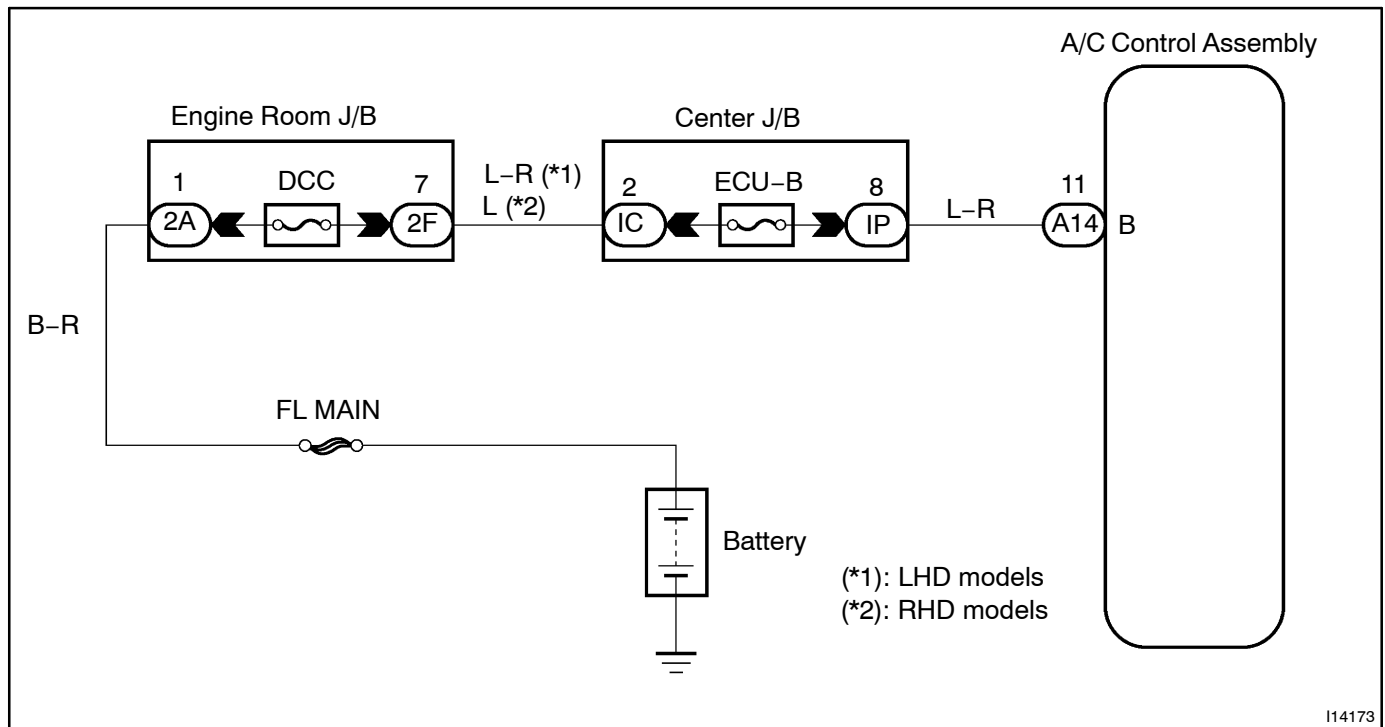


Back Up Power Source Circuit

CIRCUIT DESCRIPTION

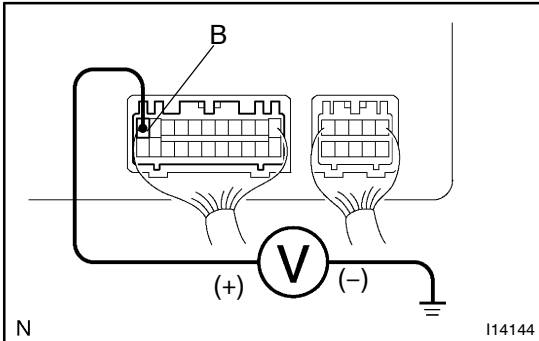
This is the back-up power source for the A/C control assembly. Power is supplied even when the ignition switch is off and is used for DTC memory, etc..

WIRING DIAGRAM



INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Check voltage between terminal B of A/C control assembly connector and body ground. |
|----------|--|

**PREPARATION:**

Remove A/C control assembly with connectors still connected.

CHECK:

Measure voltage between terminal B of A/C control assembly connector and body ground.

OK:

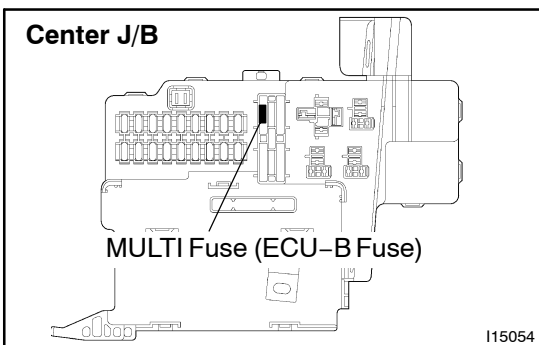
Voltage : 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-432).

NG

- | | |
|----------|--------------------------|
| 2 | Check ECU-B fuse. |
|----------|--------------------------|

**PREPARATION:**

Remove MULTI fuse (ECU-B fuse) from center J/B.

CHECK:

Check continuity of MULTI fuse (ECU-B fuse).

OK:

Continuity exists.

NG

Check for short in all the harness and components connected to the MULTI fuse (ECU-B fuse) (See page DI-473).

OK

Check and repair harness and connector between A/C control assembly and battery.