


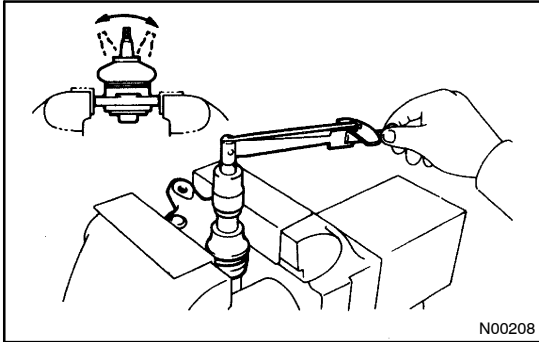

INSPECTION

INSPECT LOWER BALL JOINT FOR ROTATION CONDITION

- (a) As shown in the illustration, flip the ball joint stud back and forth 5 times, before installing the nut.
- (b) Using a torque wrench, turn the nut continuously at a rate of 2 – 4 seconds per 1 turn and take the torque reading on the 5th turn.

Turning torque:

1.0 – 4.9 N·m (10 – 50 kgf·cm, 8.7 – 43 in·lbf)