


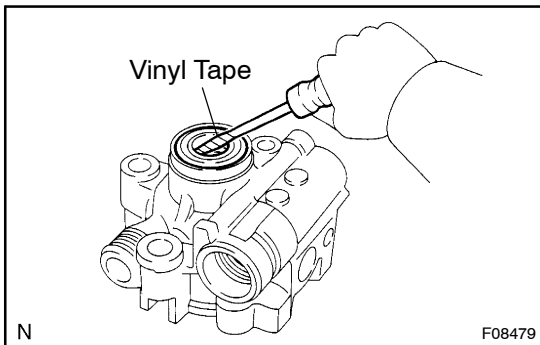

## REPLACEMENT

### NOTICE:


**When using a vise, do not overtighten it.**

### IF NECESSARY, REPLACE OIL SEAL

- (a) Using a screwdriver with vinyl tape wound around its tip, remove the oil seal.

### NOTICE:

**Be careful not to damage the bushing of the front housing.**

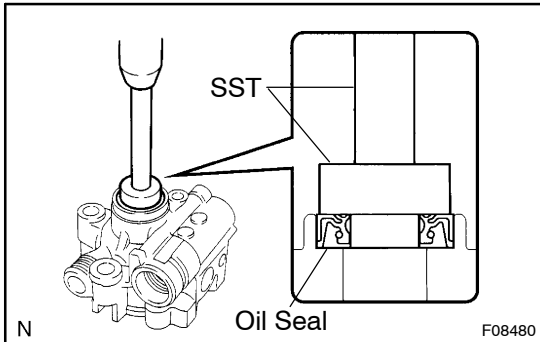

- (b) Coat a new oil seal lip with power steering fluid.

- (c) Using SST, press in the oil seal.

SST 09950-60010 (09951-00280),  
09950-70010 (09951-07100)

### NOTICE:

**Make sure that the oil seal is installed facing in the correct direction.**