


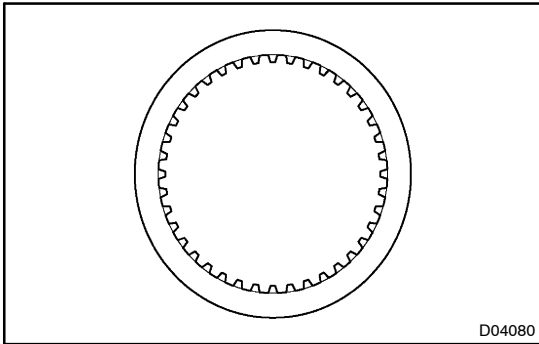

INSPECTION


1. INSPECT DISC, PLATE AND FLANGE

Check to see if the sliding surface of the disc, plate and flange are worn or burnt.

If necessary, replace them.

HINT:

- If the lining of the disc is peeling off or discolored, or even if a part of the printed mark is defaced, replace all discs.
- Before assembling new discs, soak them in ATF for at least 15 minutes.

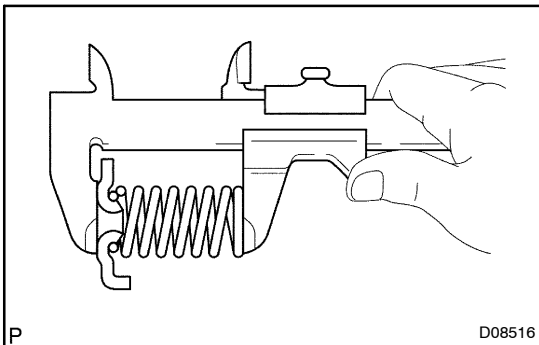

2. CHECK FORWARD CLUTCH PISTON RETURN SPRING

Using a vernier caripers, measure the free length of the spring together with the spring seat.

Standard free length: 21.69 mm (0.8540 in.)