


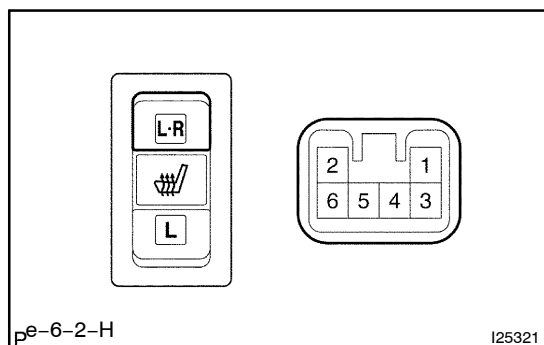


INSPECTION

1. INSPECT SEAT HEATER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Right and left side	2 – 3 – 4 – 6	Continuity
OFF	–	No continuity
Left side	3 – 4 – 6	Continuity
Illumination circuit	1 – 5	Continuity


If continuity is not as specified, replace the switch.

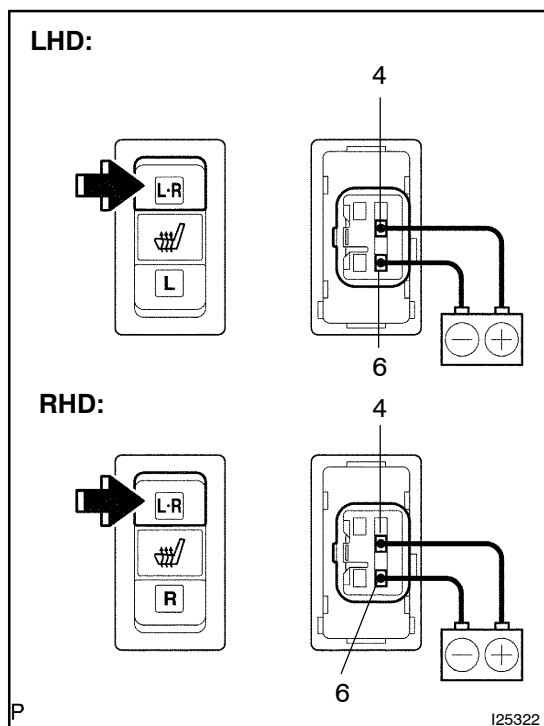

2. INSPECT SEAT HEATER INDICATOR LIGHT OPERATION

- Connect the battery positive (+) lead to terminal 4 and the battery negative (–) lead to terminal 6.
- Push the each switch on the seat heater switch and check that the indicator light comes on.

If operation is not as specified, replace the switch and inspect the circuits connected to other parts.

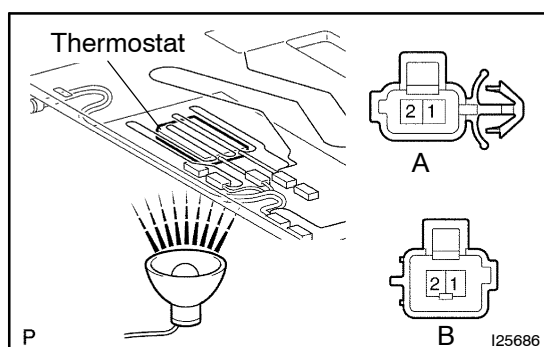

3. INSPECT SEAT CUSHION HEATER CONTINUITY


- Heat the thermostat with a light.
- Inspect the seat heater cushion continuity between terminals as shown in the table below.

HINT:

Connector A of the seat heater cushion is on the body side, and connector B of the seat heater cushion is on the seatback heater side.

Tester connection	Condition	Specified condition
A2 – B1	Always	Continuity
B1 – B2	Seat heater temperature below 25 °C (77 °F)	Continuity
B1 – B2	Seat heater temperature above 44 °C (112 °F)	No continuity
A1 – A2	Constant	Continuity

If continuity is not as specified, replace the seat cushion pad.

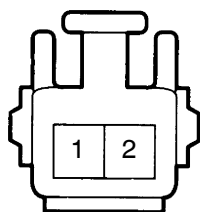Wire Harness Side

e-2-1


I01824

4. INSPECT SEAT CUSHION HEATER CIRCUIT

Disconnect the connector from the seatback heater, and inspect the connector on the wire harness.

Tester connection	Condition	Specified condition
1 – Body ground	Seat heater switch ON	Battery positive voltage

If the circuit is not as specified, inspect the circuits connected to other parts.

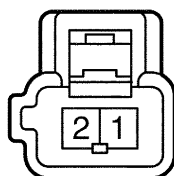

P

I25323

5. INSPECT SEATBACK HEATER CONTINUITY

Inspect the seatback heater continuity between terminals as shown in the table below.

Tester connection	Condition	Specified condition
1 – 2	Constant	Continuity

If continuity is not as specified, replace the seatback pad.