27.Trailer Hitch

A: REMOVAL

1) Remove the spare tire hoist. <Ref. to WT-13, REMOVAL, Spare Tire Hoist.>
2) Remove the bolt, and then detach the main frame.

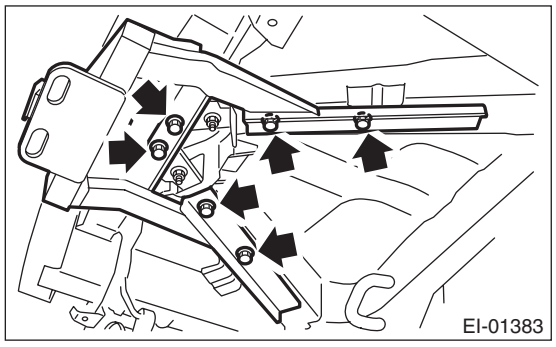

CAUTION:
The trailer hitch main frame is heavy. Be careful when removing.
3) Remove the bolts, and then remove the center frame.

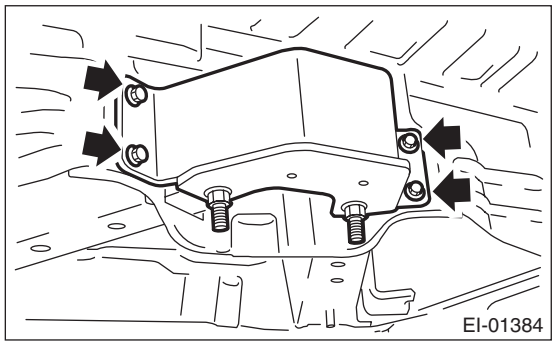

4) Remove the side frame from the vehicle.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:
Refer to "COMPONENT" of "General Description".
<Ref. to EI-17, TRAILER HITCH, COMPONENT, General Description.>

EXTERIOR BODY PANELS

EB

Page

1. General Description 2
2. Front Hood 12
3. Front Fender 14
4. Front Door 15
5. Front Sealing Cover 17
6. Rear Door 18
7. Rear Sealing Cover 20
8. Rear Gate 21