47.Combination Meter System

A: WIRING DIAGRAM

METER-01

METER-01

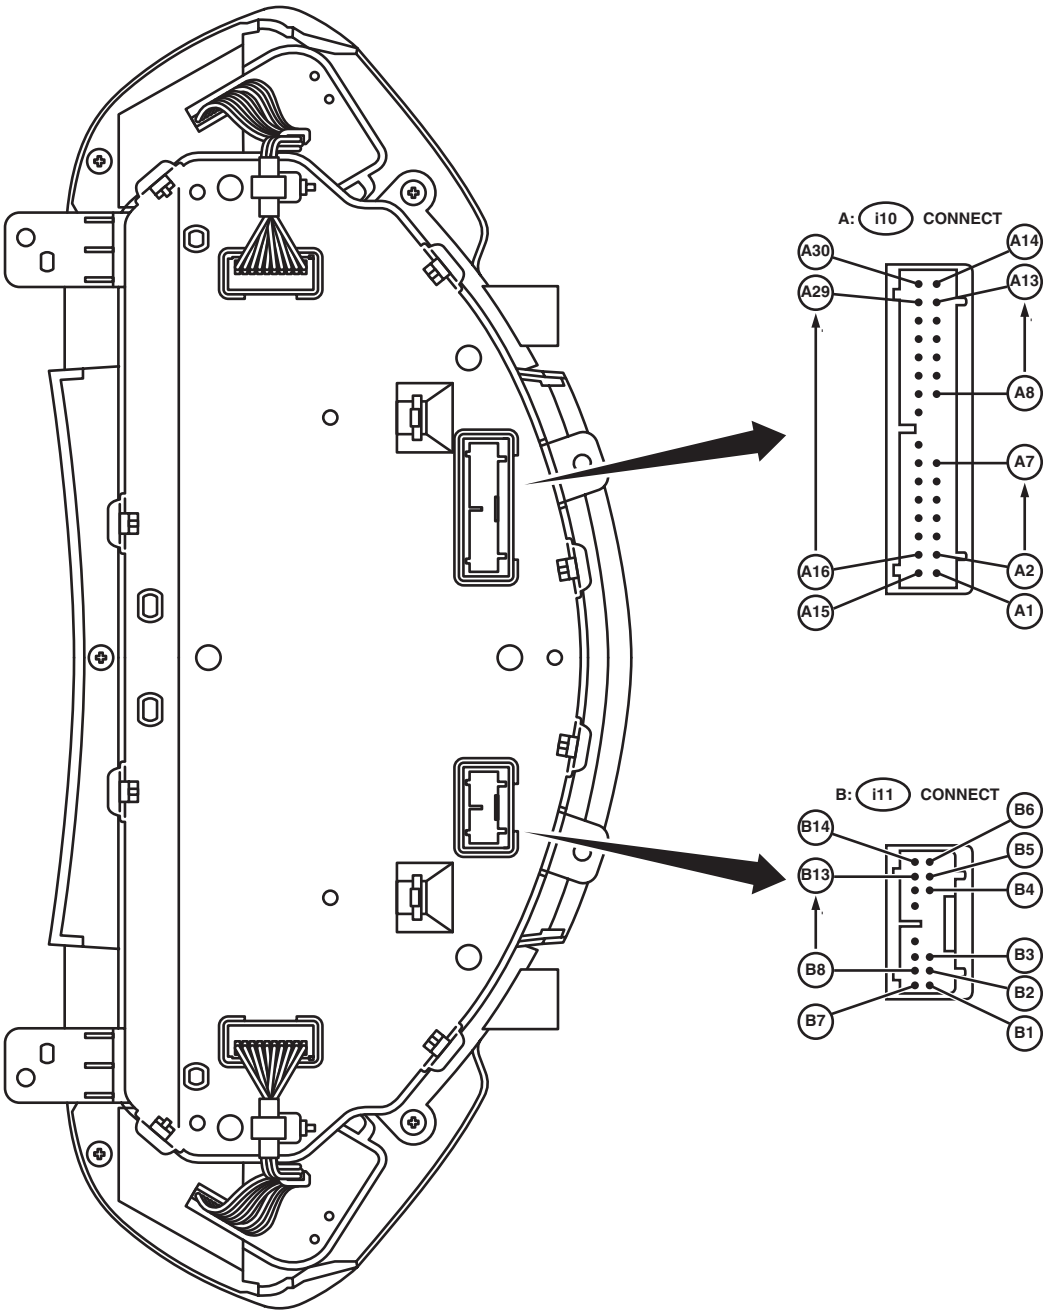

WI-11750

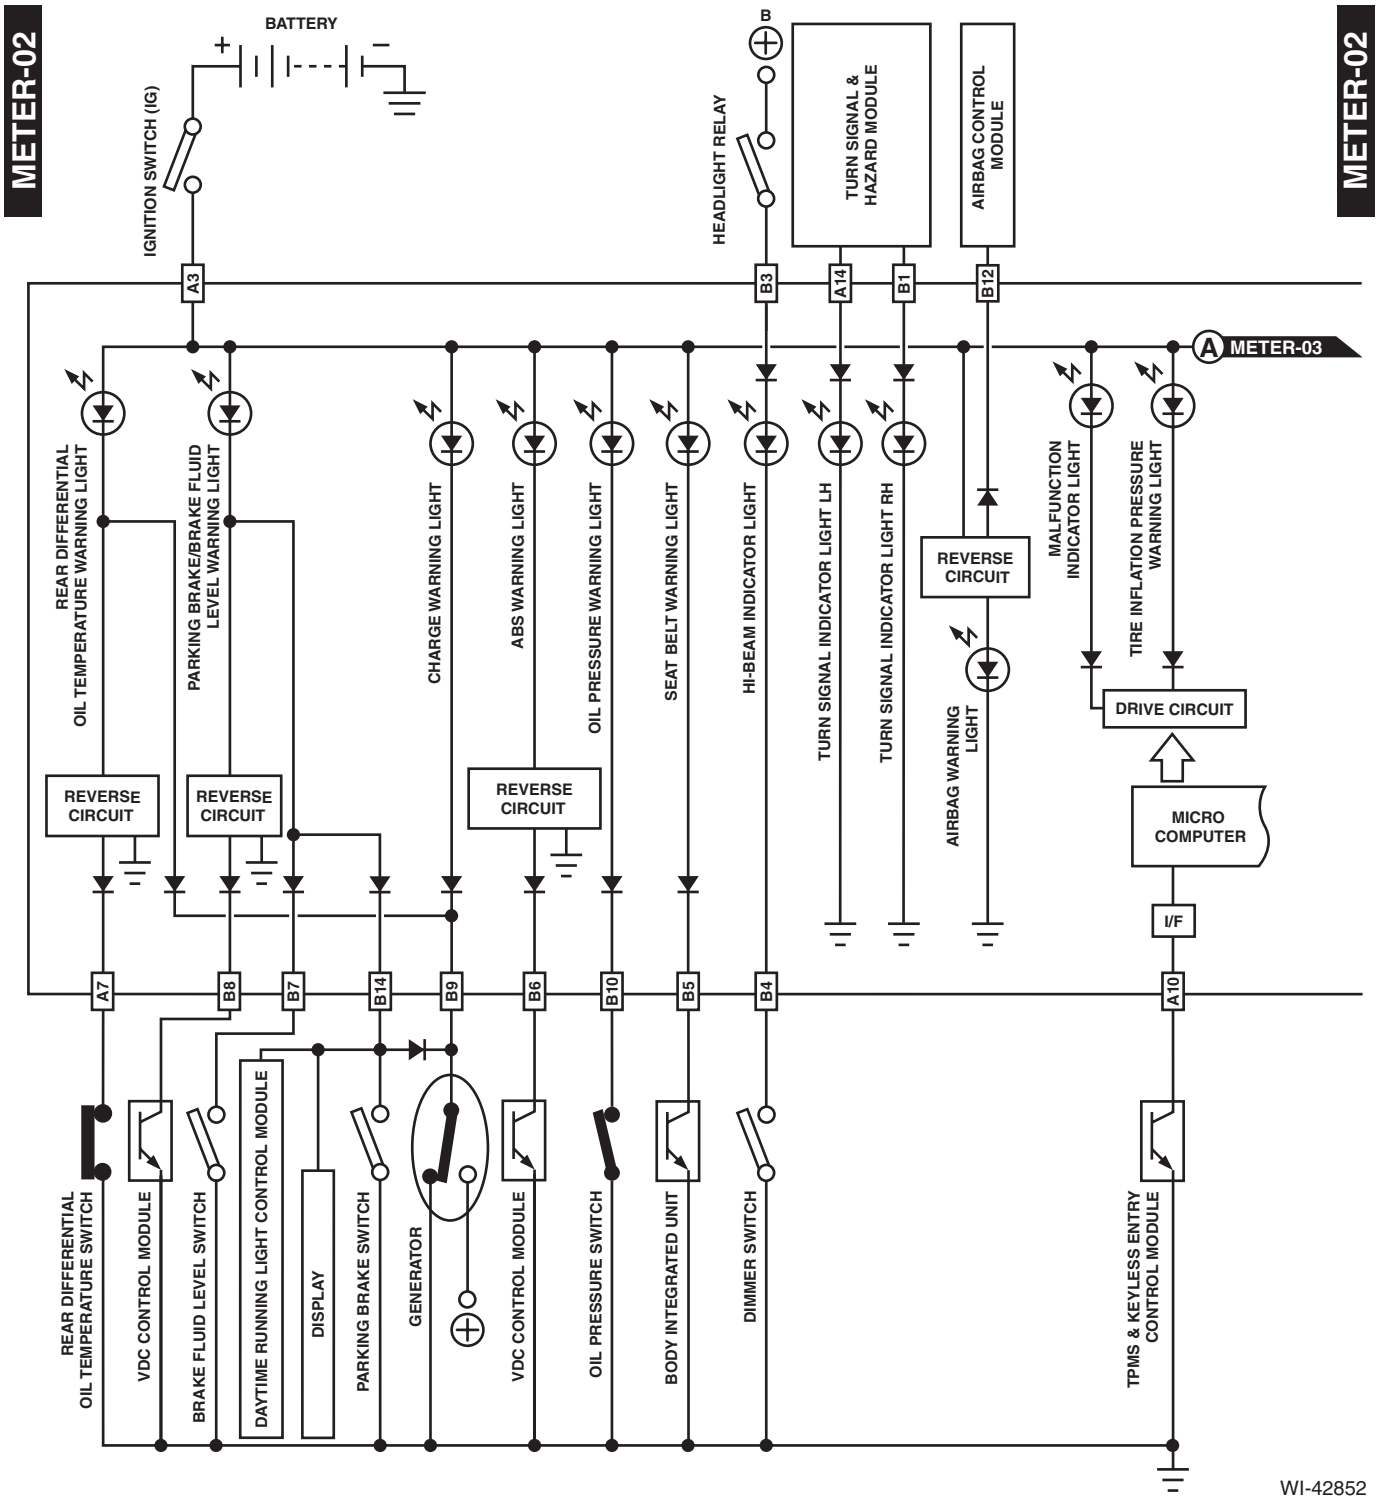
METER-02
METER-02
BATTERY
IGNITION SWITCH (IG)
HEADLIGHT RELAY
TURN SIGNAL & HAZARD MODULE
AIRBAG CONTROL MODULE
A3
B3
A14
B1
B12
A METER-03
REAR DIFFERENTIAL OIL TEMPERATURE WARNING LIGHT
PARKING BRAKE/BRAKE FLUID LEVEL WARNING LIGHT
CHARGE WARNING LIGHT
ABS WARNING LIGHT
OIL PRESSURE WARNING LIGHT
SEAT BELT WARNING LIGHT
HI-BEAM INDICATOR LIGHT
TURN SIGNAL INDICATOR LIGHT LH
TURN SIGNAL INDICATOR LIGHT RH
REVERSE CIRCUIT
AIRBAG WARNING LIGHT
MALFUNCTION INDICATOR LIGHT
TIRE INFLATION PRESSURE WARNING LIGHT
DRIVE CIRCUIT
MICRO COMPUTER
I/F
REVERSE CIRCUIT
REVERSE CIRCUIT
REVERSE CIRCUIT
A7
B8
B7
B14
B9
B6
B10
B5
B4
A10
REAR DIFFERENTIAL OIL TEMPERATURE SWITCH
VDC CONTROL MODULE
BRAKE FLUID LEVEL SWITCH
DAYTIME RUNNING LIGHT CONTROL MODULE
DISPLAY
PARKING BRAKE SWITCH
GENERATOR
VDC CONTROL MODULE
OIL PRESSURE SWITCH
BODY INTEGRATED UNIT
DIMMER SWITCH
TPMS & KEYLESS ENTRY CONTROL MODULE
WI-42852

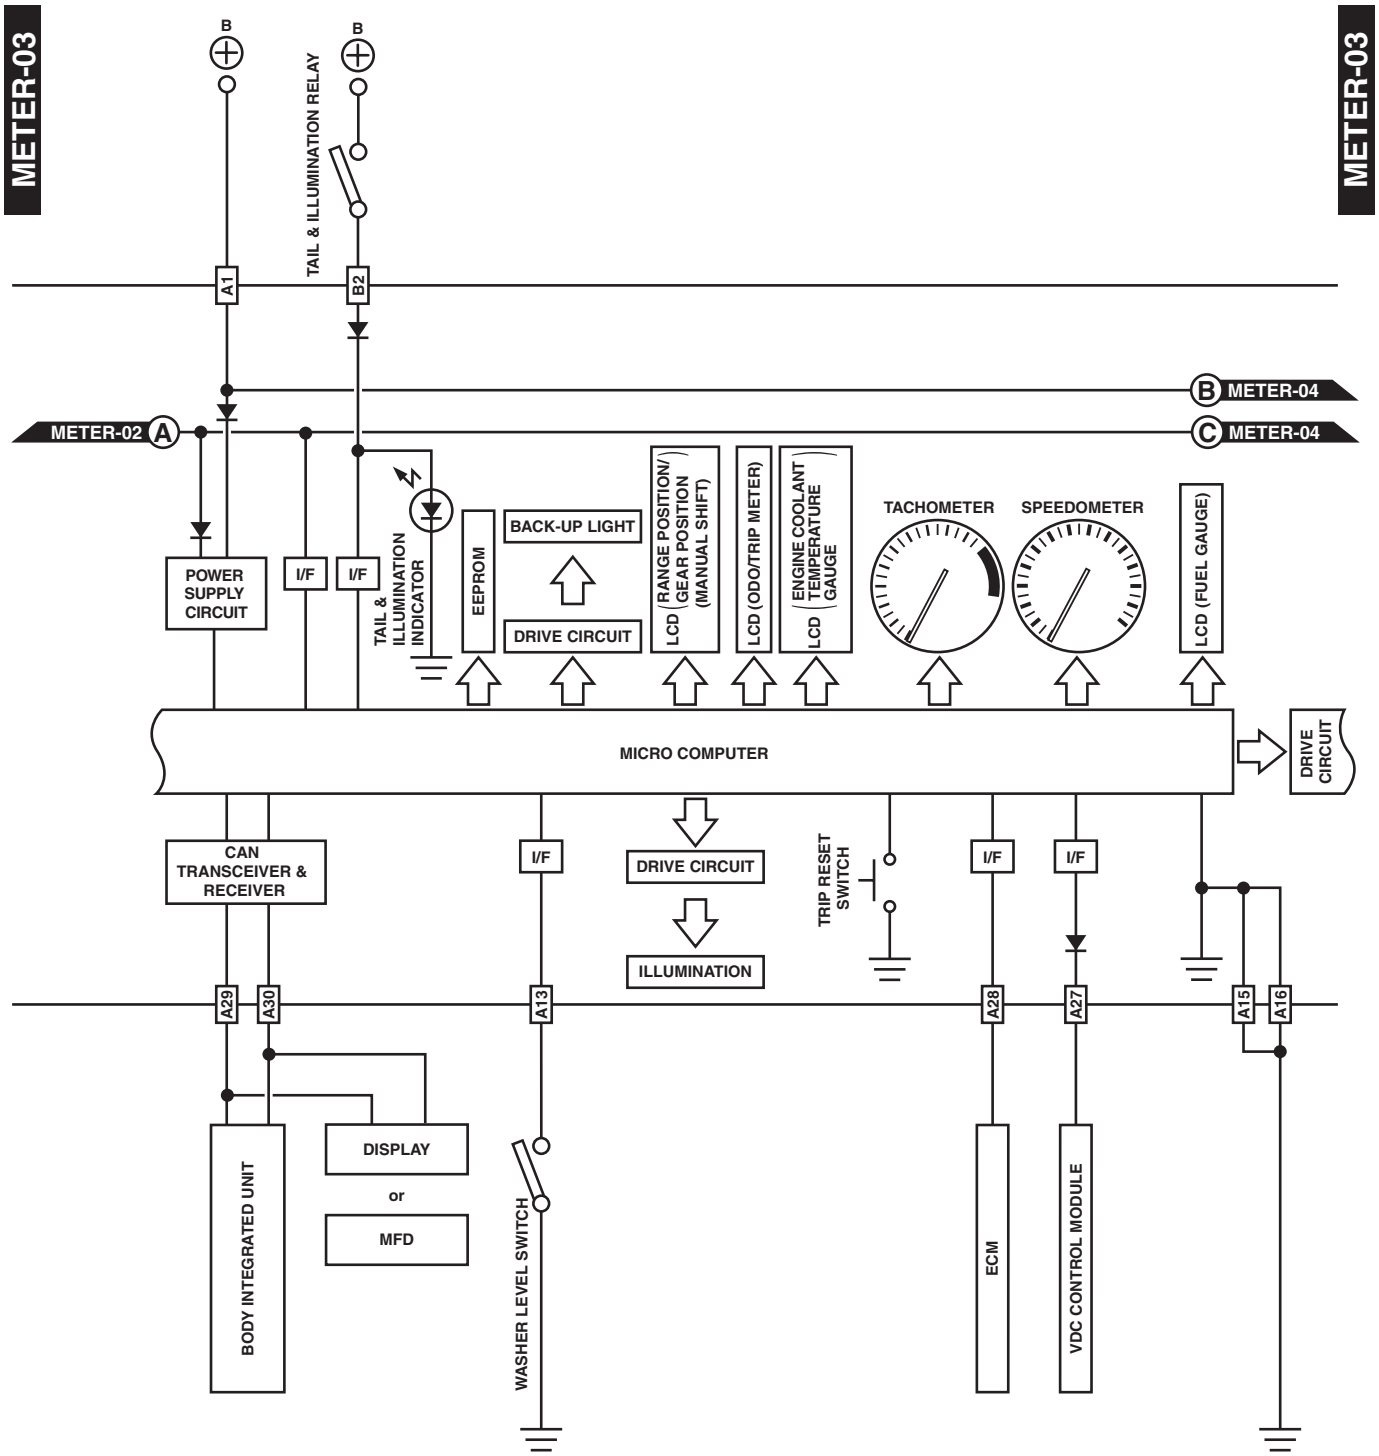
METER-03
METER-03
B
B
TAIL & ILLUMINATION RELAY
A1
B2
B METER-04
C METER-04
METER-02 A
POWER SUPPLY CIRCUIT
I/F
I/F
TAIL & ILLUMINATION INDICATOR
EEPROM
BACK-UP LIGHT
DRIVE CIRCUIT
LCD (RANGE POSITION/ GEAR POSITION (MANUAL SHIFT)
LCD (ODO/TRIP METER)
LCD (ENGINE COOLANT TEMPERATURE GAUGE)
TACHOMETER
SPEEDOMETER
LCD (FUEL GAUGE)
MICRO COMPUTER
DRIVE CIRCUIT
CAN TRANSCEIVER & RECEIVER
I/F
DRIVE CIRCUIT
ILLUMINATION
TRIP RESET SWITCH
I/F
I/F
A29
A30
A13
A28
A27
A15
A16
BODY INTEGRATED UNIT
DISPLAY
or
MFD
WASHER LEVEL SWITCH
ECM
VDC CONTROL MODULE

WI-34405

METER-04

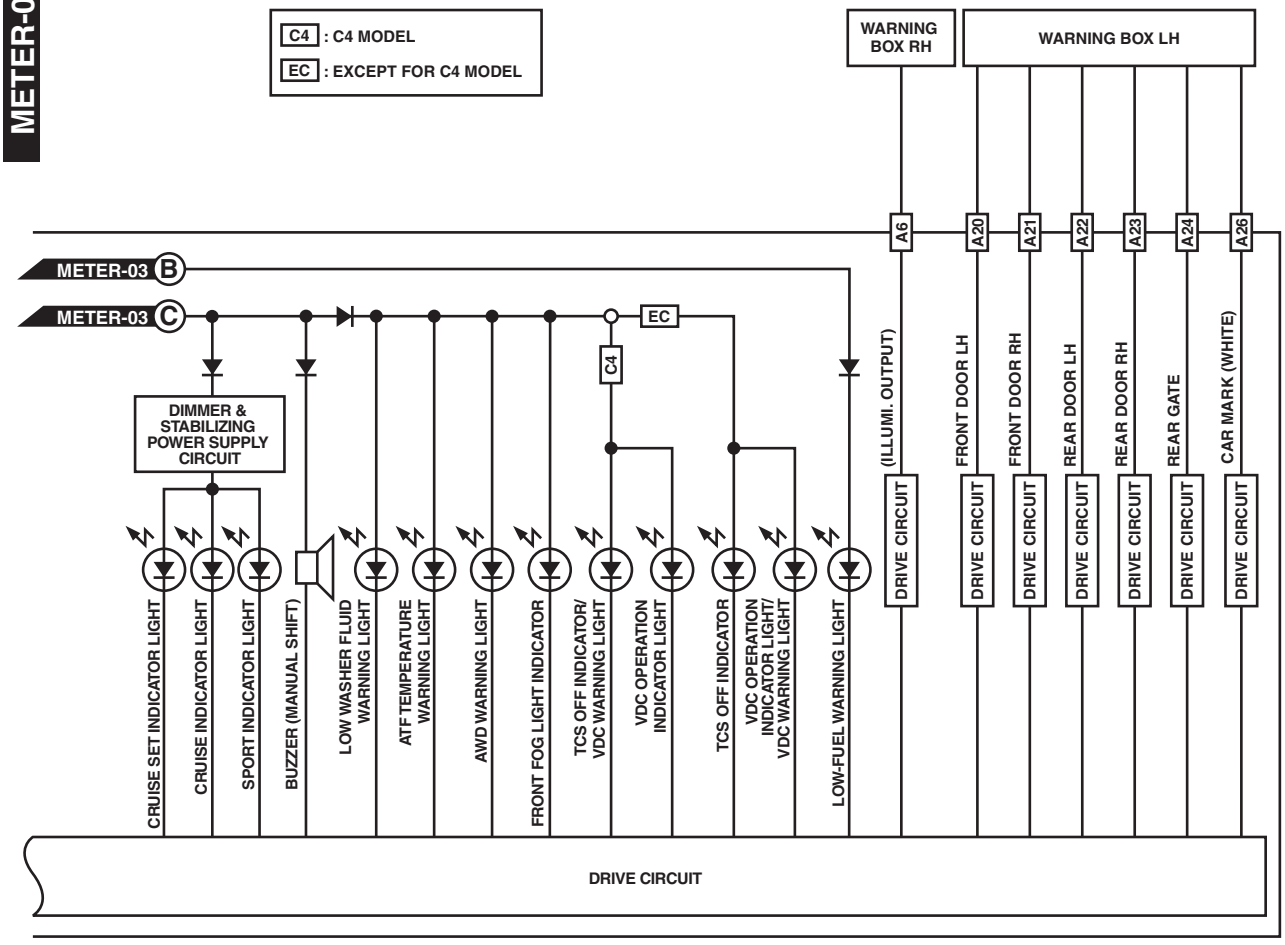

WI-34406