Inspection

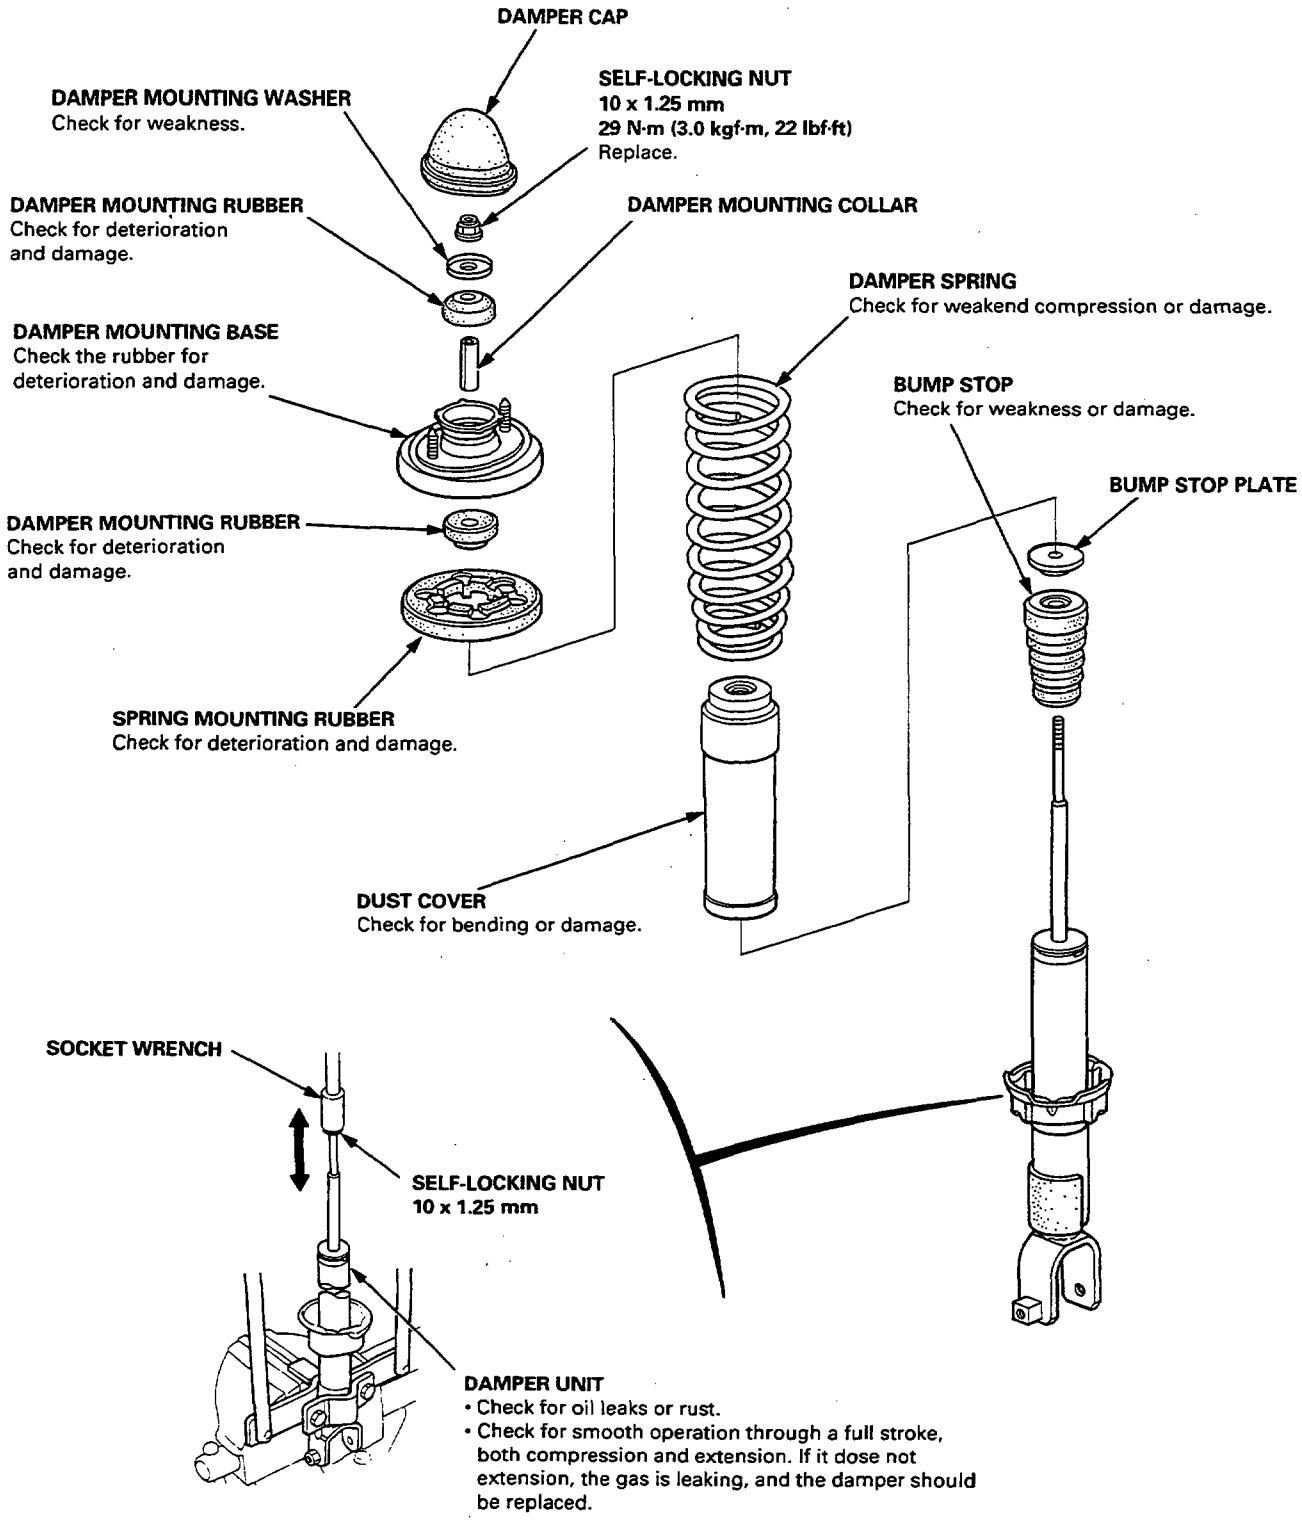
DAMPER CAP
SELF-LOCKING NUT
10 x 1.25 mm
29 N·m (3.0 kgf·m, 22 lbf·ft)
Replace.
DAMPER MOUNTING WASHER
Check for weakness.
DAMPER MOUNTING RUBBER
Check for deterioration and damage.
DAMPER MOUNTING COLLAR
DAMPER SPRING
Check for weakend compression or damage.
DAMPER MOUNTING BASE
Check the rubber for deterioration and damage.
BUMP STOP
Check for weakness or damage.
BUMP STOP PLATE
DAMPER MOUNTING RUBBER
Check for deterioration and damage.
SPRING MOUNTING RUBBER
Check for deterioration and damage.
DUST COVER
Check for bending or damage.
SOCKET WRENCH
SELF-LOCKING NUT
10 x 1.25 mm
DAMPER UNIT
• Check for oil leaks or rust.
• Check for smooth operation through a full stroke, both compression and extension. If it dose not extension, the gas is leaking, and the damper should be replaced.