The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

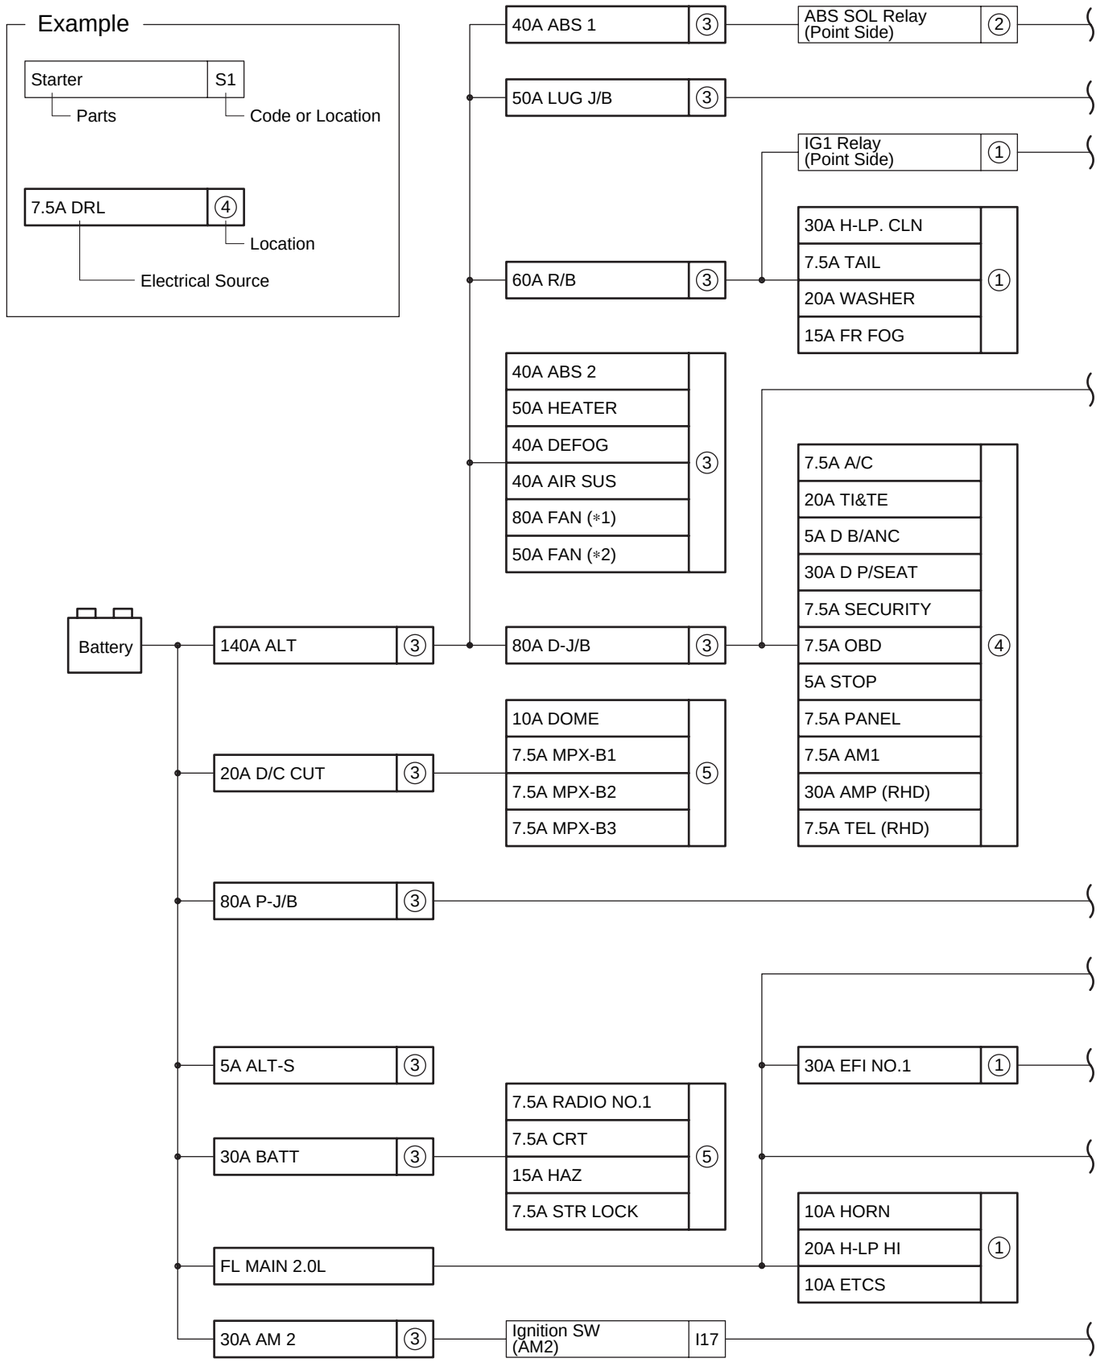

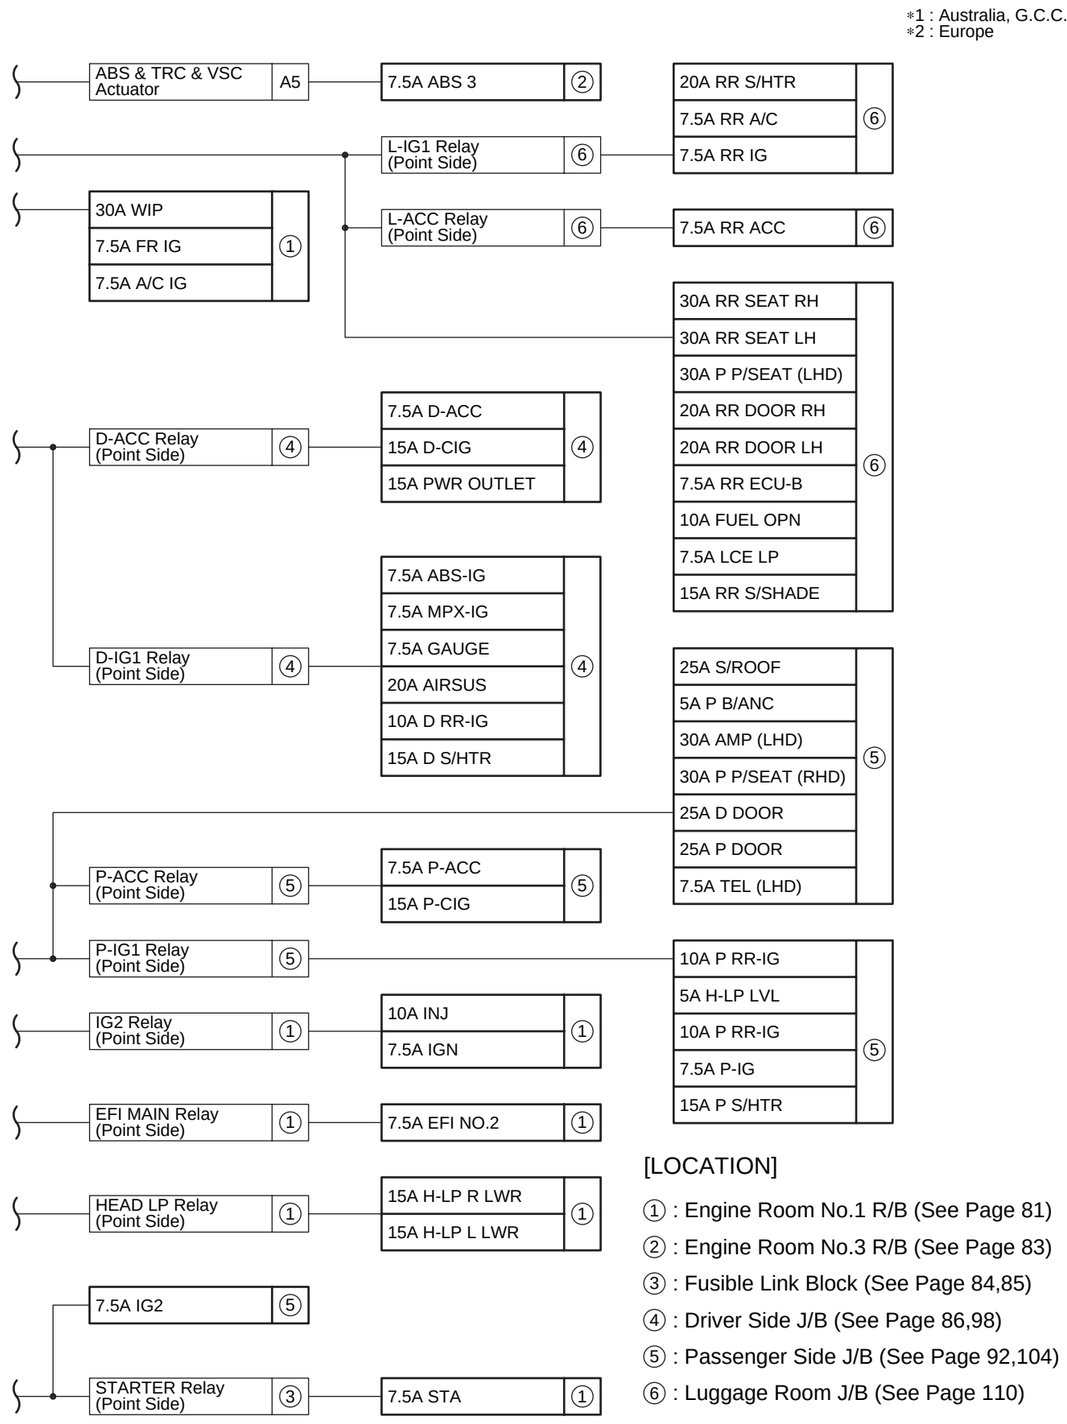

[LOCATION]

① : Engine Room No.1 R/B (See Page 81)
② : Engine Room No.3 R/B (See Page 83)
③ : Fusible Link Block (See Page 84,85)
④ : Driver Side J/B (See Page 86,98)
⑤ : Passenger Side J/B (See Page 92,104)
⑥ : Luggage Room J/B (See Page 110)