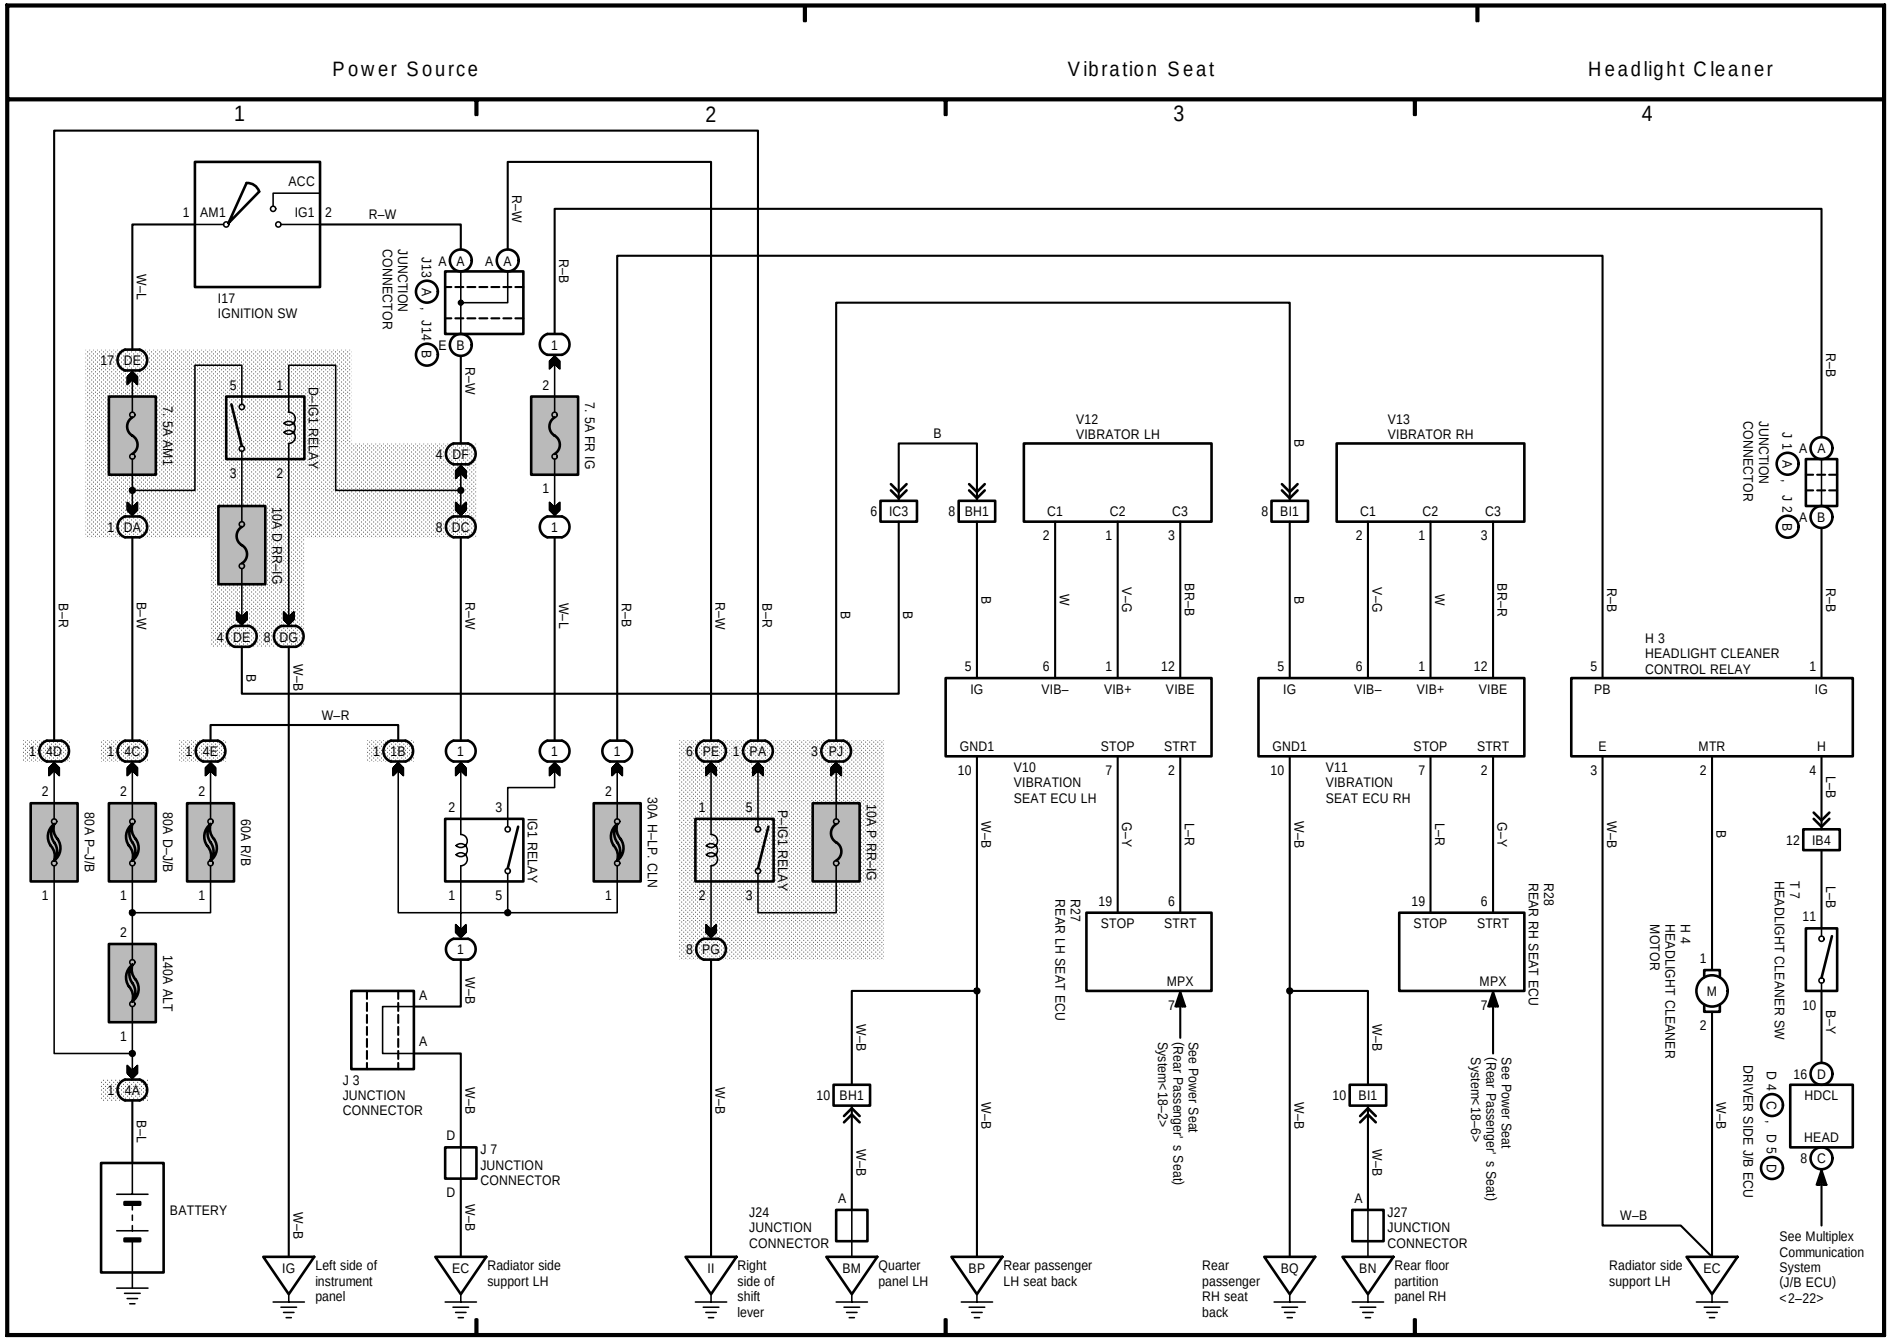
Power Source
Vibration Seat
Headlight Cleaner
1
2
3
4
I17
IGNITION SW
ACC
AM1
IG1
JUNCTION CONNECTOR
J13, J14
7. 5A AM1
D-IG1 RELAY
10A D RR-IG
7. 5A FR IG
80A P-J/B
80A D-J/B
60A R/B
140A ALT
BATTERY
IG1 RELAY
30A H-LP. CLN
P-IG1 RELAY
10A P RR-IG
J 3 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
J24 JUNCTION CONNECTOR
V12 VIBRATOR LH
V13 VIBRATOR RH
V10 VIBRATION SEAT ECU LH
V11 VIBRATION SEAT ECU RH
R27 REAR LH SEAT ECU
R28 REAR RH SEAT ECU
See Power Seat (Rear Passenger's Seat) System<18-2>
See Power Seat (Rear Passenger's Seat) System<18-6>
J27 JUNCTION CONNECTOR
H 3 HEADLIGHT CLEANER CONTROL RELAY
H 4 HEADLIGHT CLEANER MOTOR
T 7 HEADLIGHT CLEANER SW
DRIVER SIDE J/B ECU
See Multiplex Communication System (J/B ECU) <2-22>
Left side of instrument panel
Radiator side support LH
Right side of shift lever
Quarter panel LH
Rear passenger LH seat back
Rear passenger RH seat back
Rear floor partition panel RH