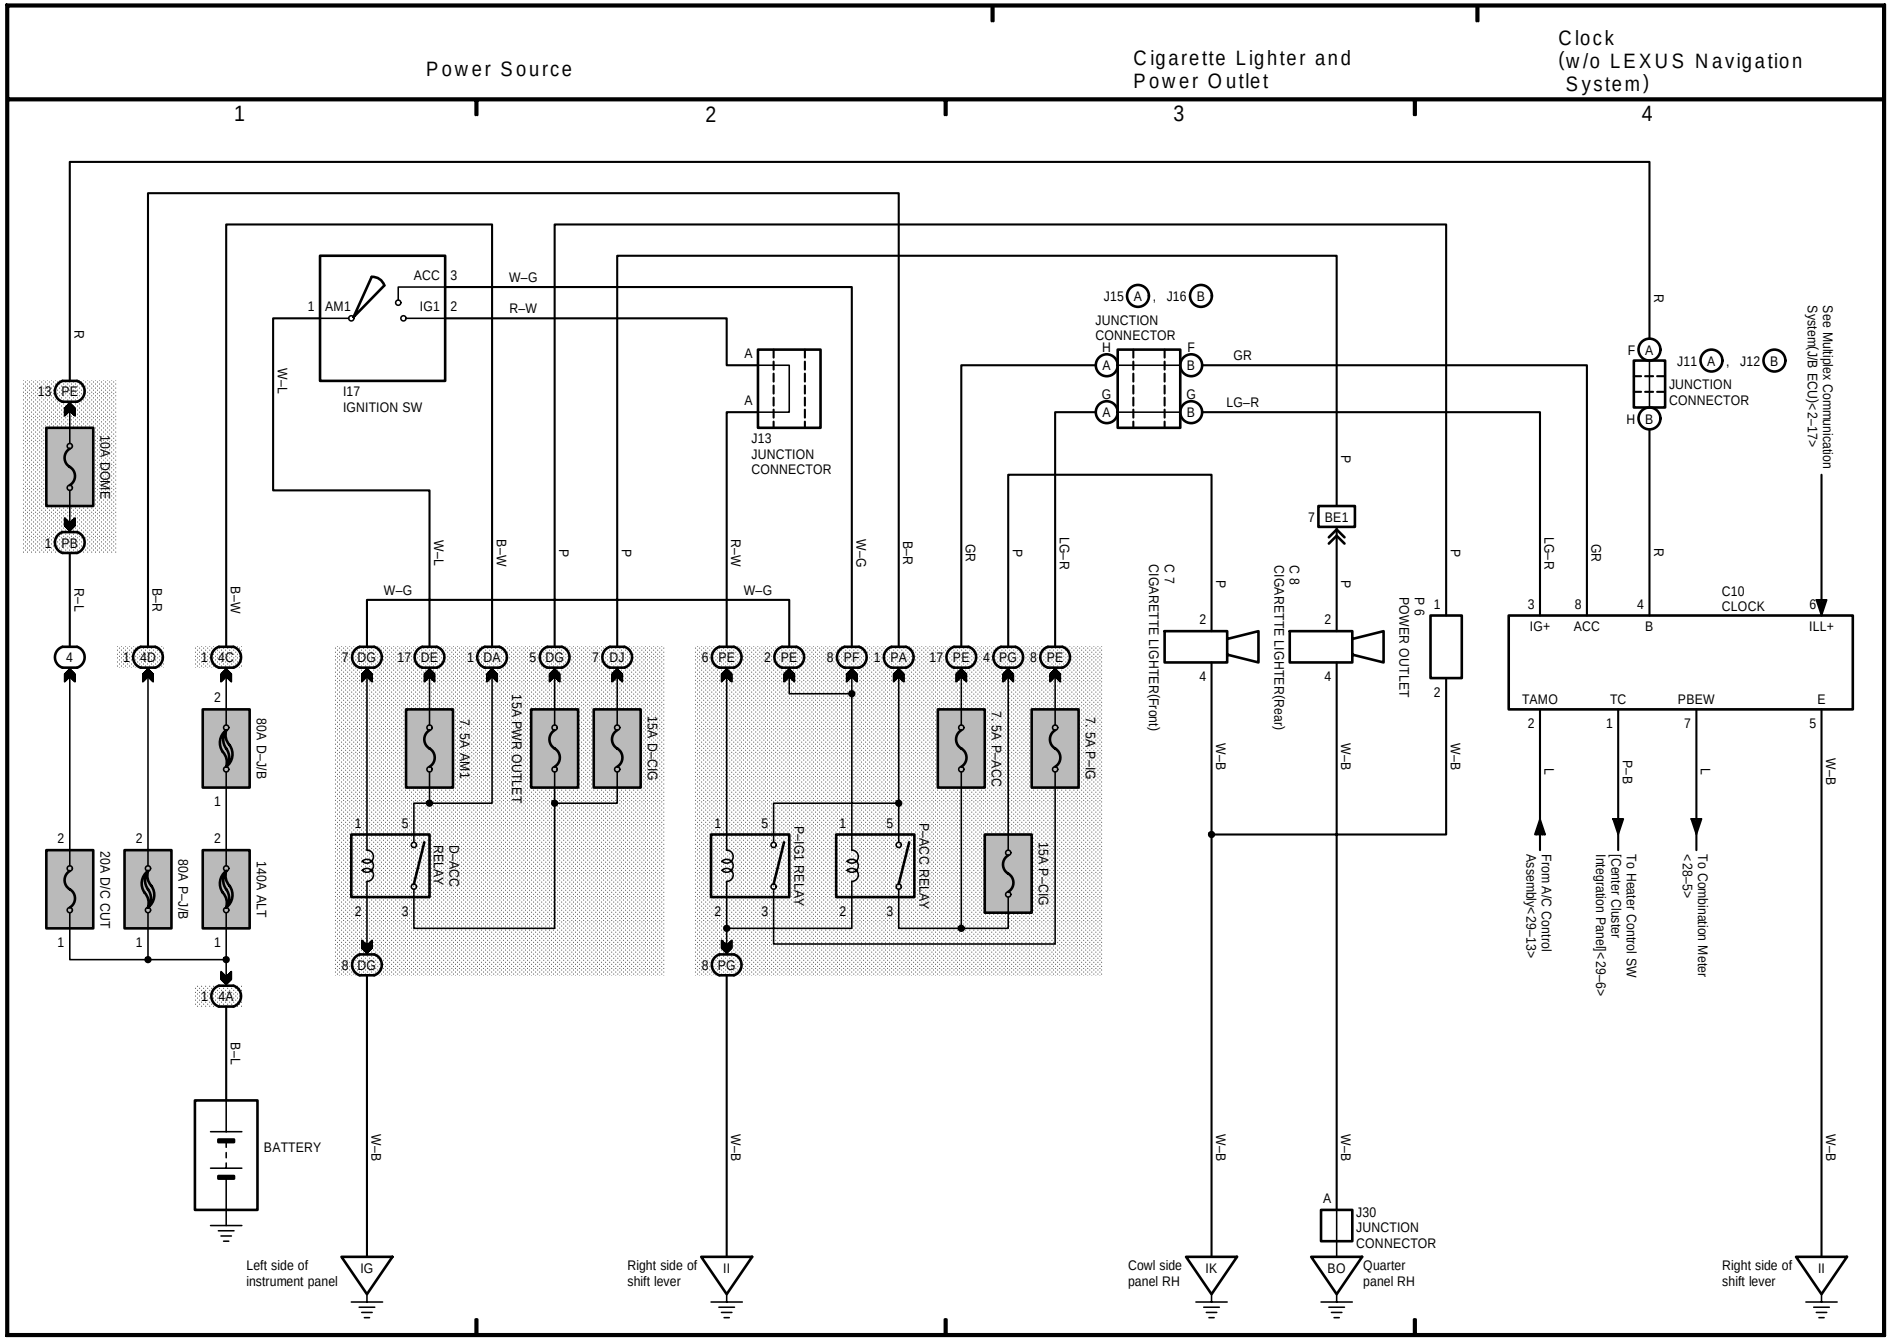
Power Source
Cigarette Lighter and Power Outlet
Clock (w/o LEXUS Navigation System)
1
2
3
4
10A DOME
I17 IGNITION SW
ACC
AM1
IG1
W–G
R–W
J13 JUNCTION CONNECTOR
J15 , J16
JUNCTION CONNECTOR
GR
LG–R
J11 , J12
JUNCTION CONNECTOR
See Multiplex Communication System(J/B ECU)<2–17>
BE1
C 7 CIGARETTE LIGHTER(Front)
C 8 CIGARETTE LIGHTER(Rear)
P 6 POWER OUTLET
C10 CLOCK
IG+
ACC
B
ILL+
TAMO
TC
PBEW
E
From A/C Control Assembly<29–13>
To Heater Control SW [Center Cluster Integration Panel]<29–6>
To Combination Meter <28–5>
80A D–J/B
80A P–J/B
140A ALT
20A D/C CUT
BATTERY
7.5A AM1
15A PWR OUTLET
15A D–CIG
D–ACC RELAY
P–IGI RELAY
P–ACC RELAY
7.5A P–ACC
7.5A P–IG
15A P–CIG
J30 JUNCTION CONNECTOR
Left side of instrument panel
Right side of shift lever
Cowl side panel RH
Quarter panel RH
Right side of shift lever