15 LS 430 (RHD)

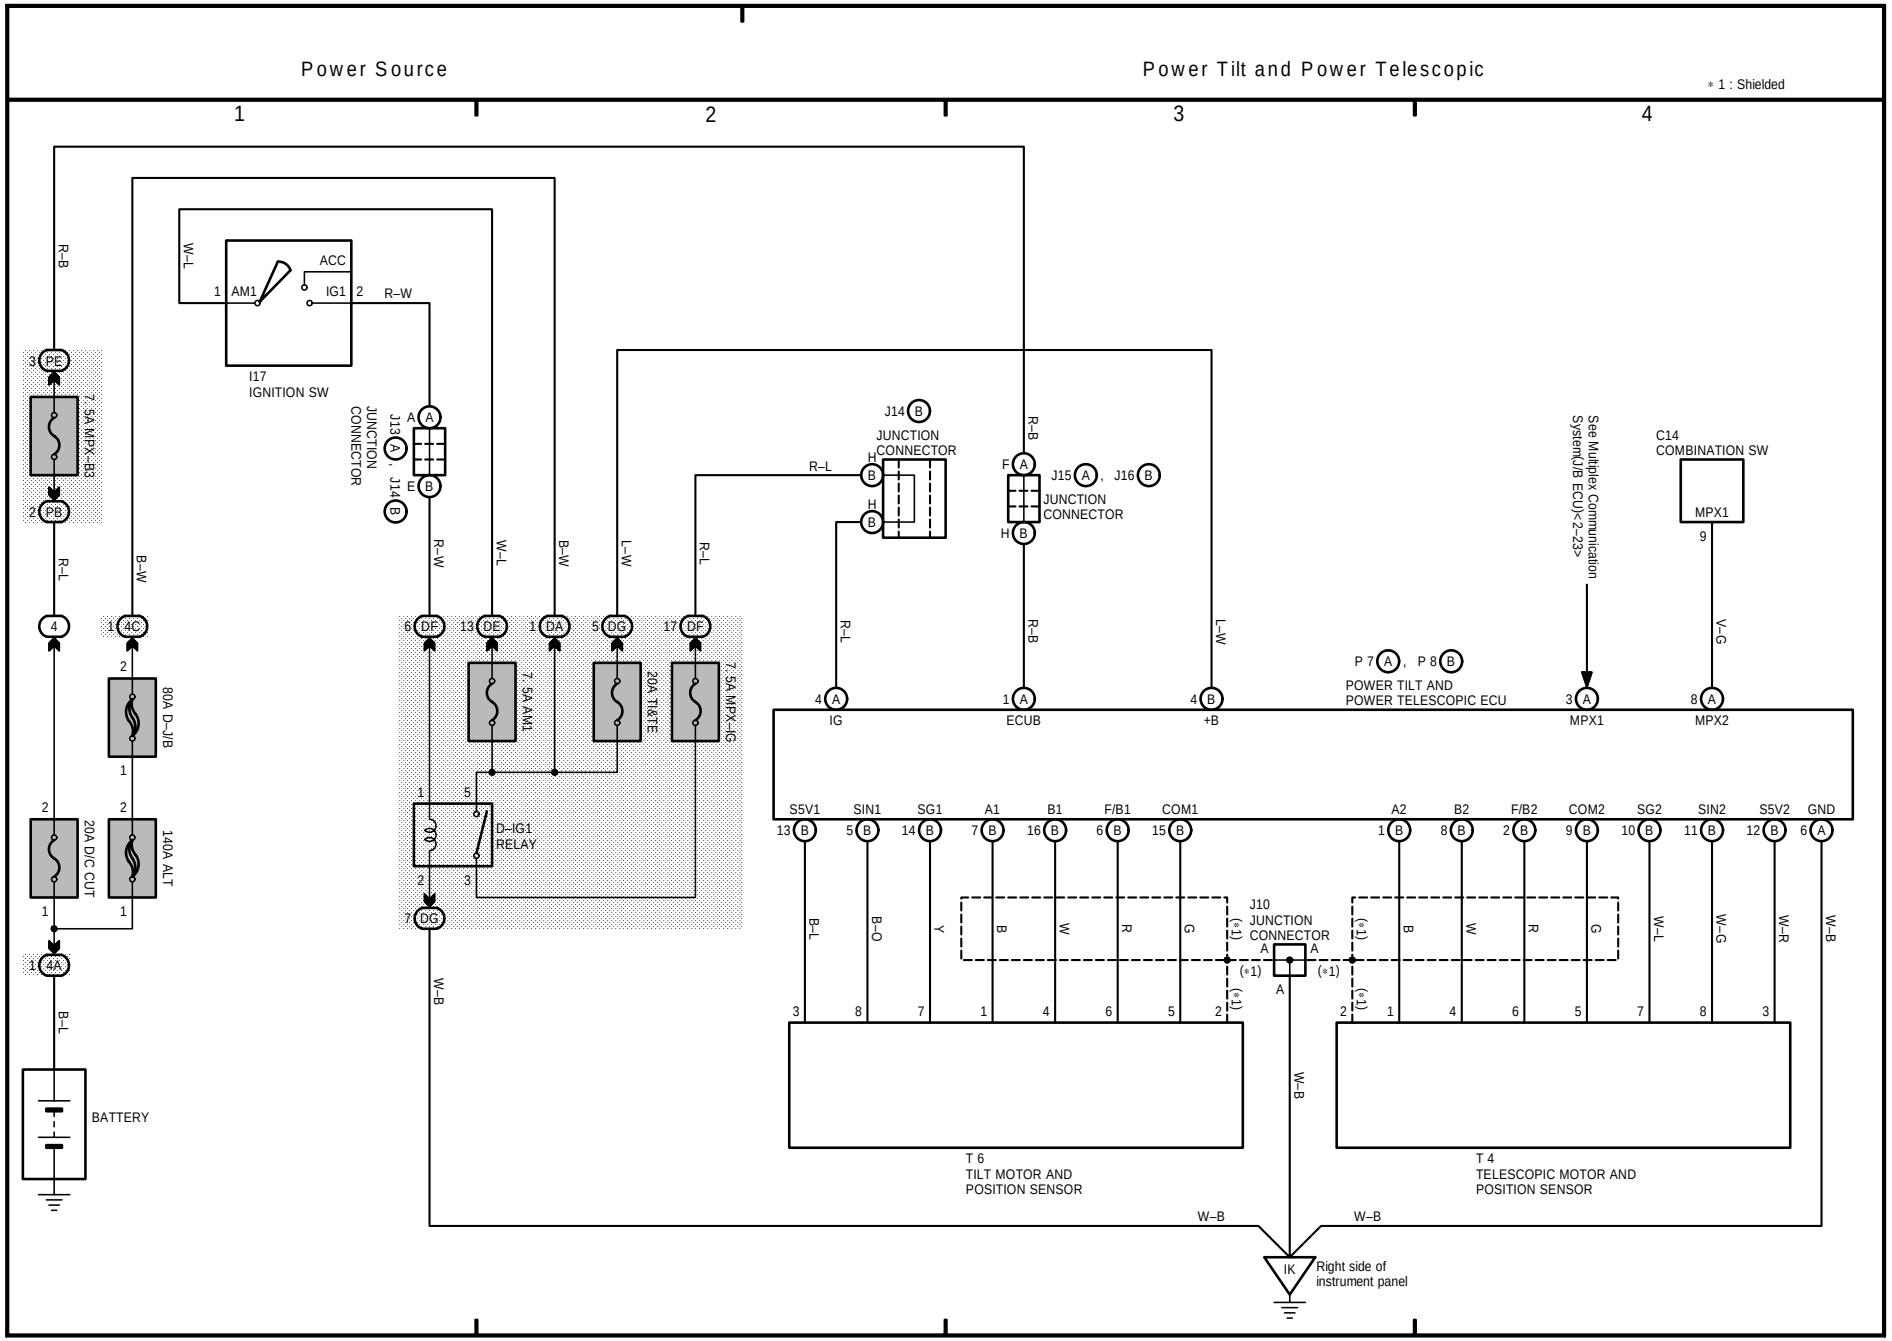
Power Source
Power Tilt and Power Telescopic
* 1 : Shielded
1
2
3
4
I17
IGNITION SW
ACC
AM1
IG1
R–W
W–L
R–B
B–W
L–W
R–L
B–L
W–B
7.5A MPX–B3
80A D–J/B
20A D/C CUT
140A ALT
BATTERY
J13 A, J14 B
JUNCTION CONNECTOR
7.5A AM1
20A TI&TE
7.5A MPX–IG
D–IG1 RELAY
J14 B
JUNCTION CONNECTOR
J15 A, J16 B
JUNCTION CONNECTOR
See Multiplex Communication System(J/B ECU)<2–23>
C14
COMBINATION SW
MPX1
V–G
P 7 A, P 8 B
POWER TILT AND POWER TELESCOPIC ECU
IG
ECUB
+B
MPX1
MPX2
S5V1
SIN1
SG1
A1
B1
F/B1
COM1
A2
B2
F/B2
COM2
SG2
SIN2
S5V2
GND
J10
JUNCTION CONNECTOR
(*1)
T 6
TILT MOTOR AND POSITION SENSOR
T 4
TELESCOPIC MOTOR AND POSITION SENSOR
IK
Right side of instrument panel