19 LS 430 (RHD)

(Cont. next page)

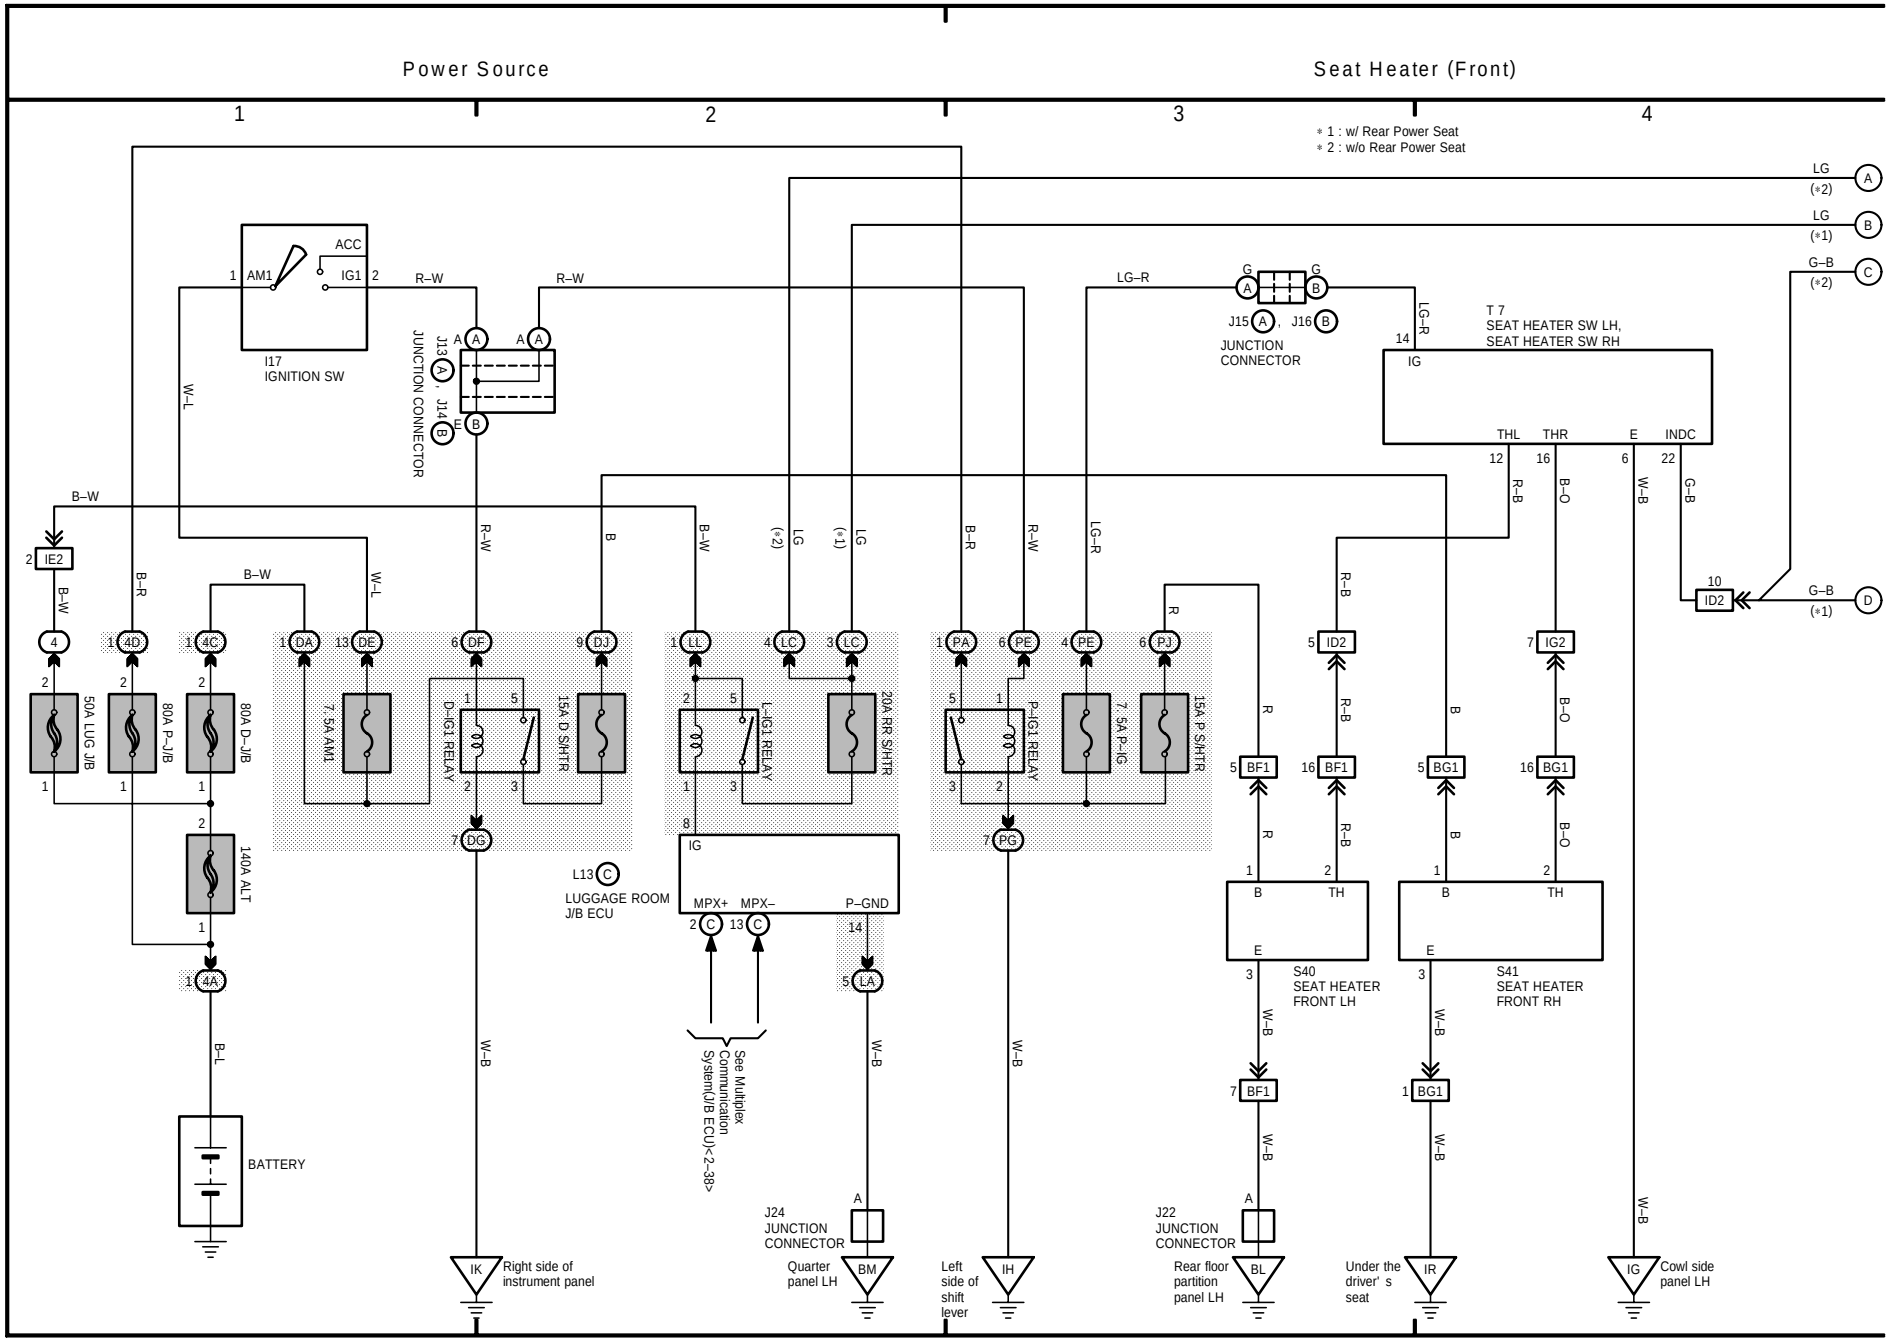

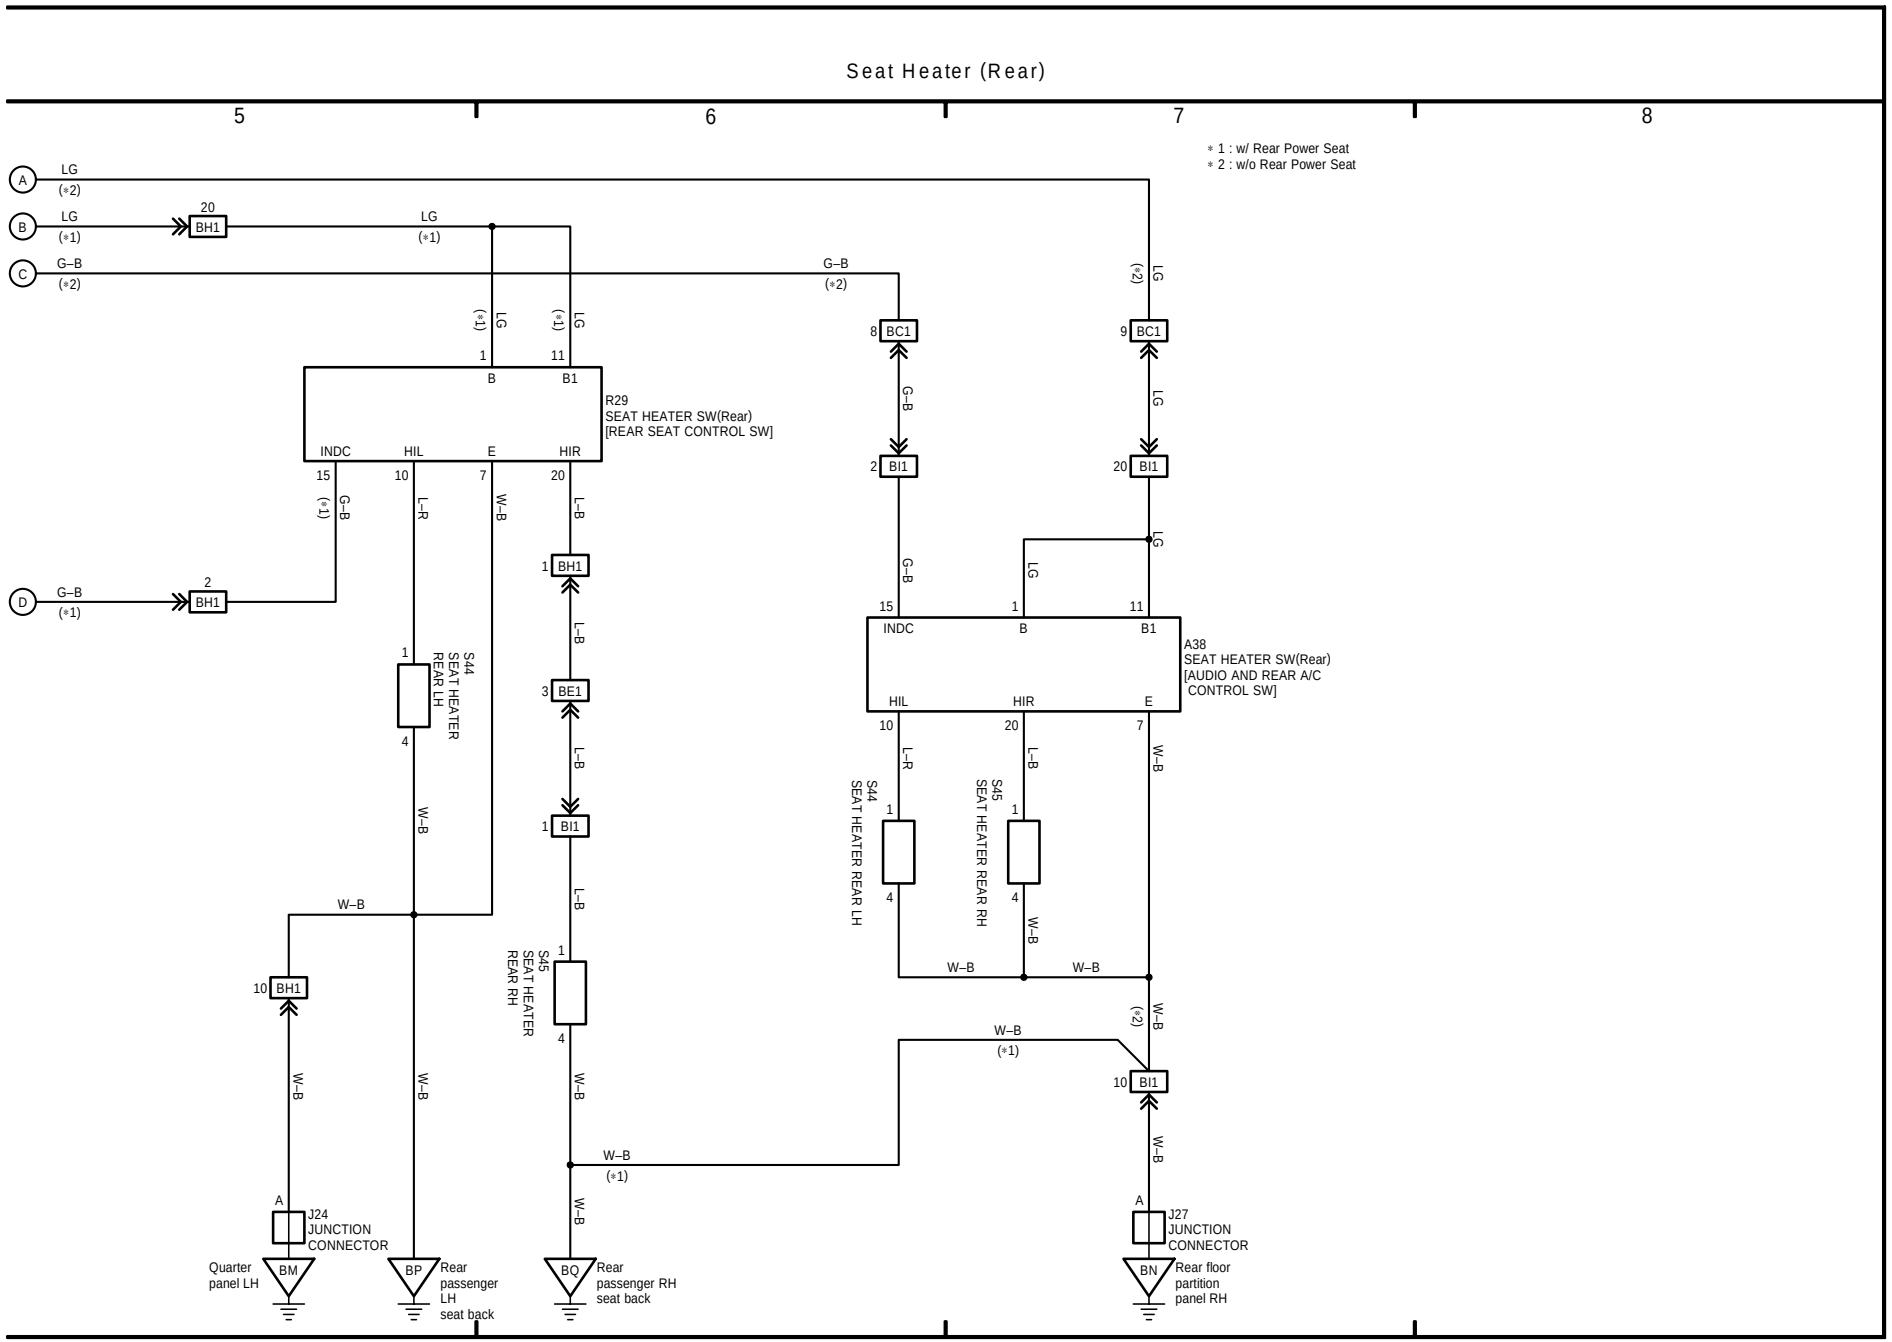
Seat Heater (Rear)
5
6
7
8
* 1 : w/ Rear Power Seat
* 2 : w/o Rear Power Seat
A
B
C
D
LG
(*2)
LG
(*1)
G–B
(*2)
G–B
(*1)
20
BH1
2
BH1
LG
(*1)
G–B
(*2)
8
BC1
9
BC1
2
BI1
20
BI1
R29
SEAT HEATER SW(Rear)
[REAR SEAT CONTROL SW]
INDC
HIL
E
HIR
B
B1
A38
SEAT HEATER SW(Rear)
[AUDIO AND REAR A/C
CONTROL SW]
S44
SEAT HEATER
REAR LH
S45
SEAT HEATER
REAR RH
BH1
BE1
BI1
10
BH1
10
BI1
W–B
(*1)
W–B
(*1)
J24
JUNCTION
CONNECTOR
J27
JUNCTION
CONNECTOR
Quarter
panel LH
BM
BP
Rear
passenger
LH
seat back
BQ
Rear
passenger RH
seat back
BN
Rear floor
partition
panel RH