N OVERALL ELECTRICAL WIRING DIAGRAM

29 LS 430 (RHD)

(Cont. next page)

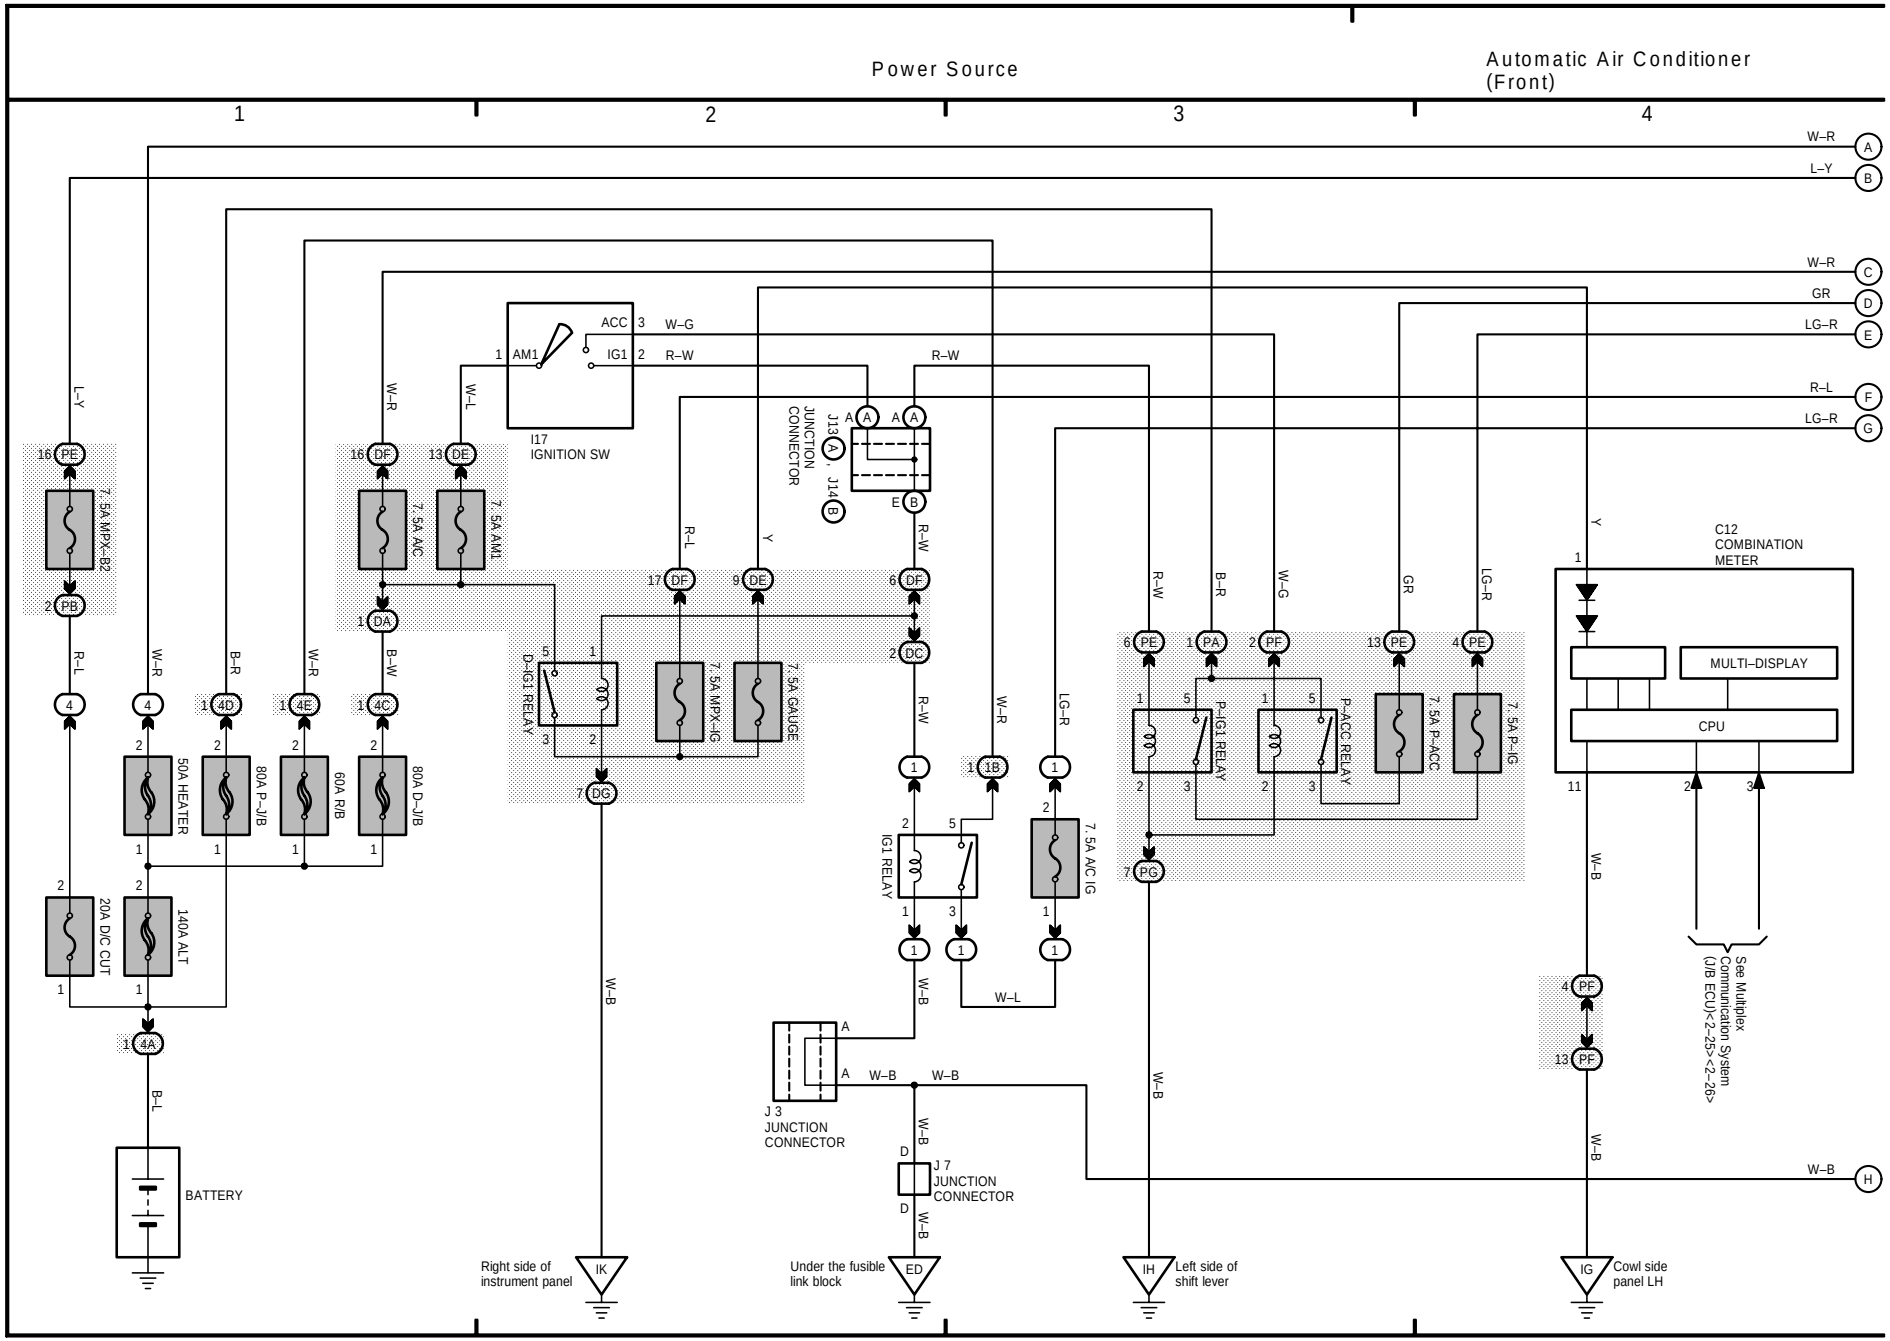

(Cont. next page)

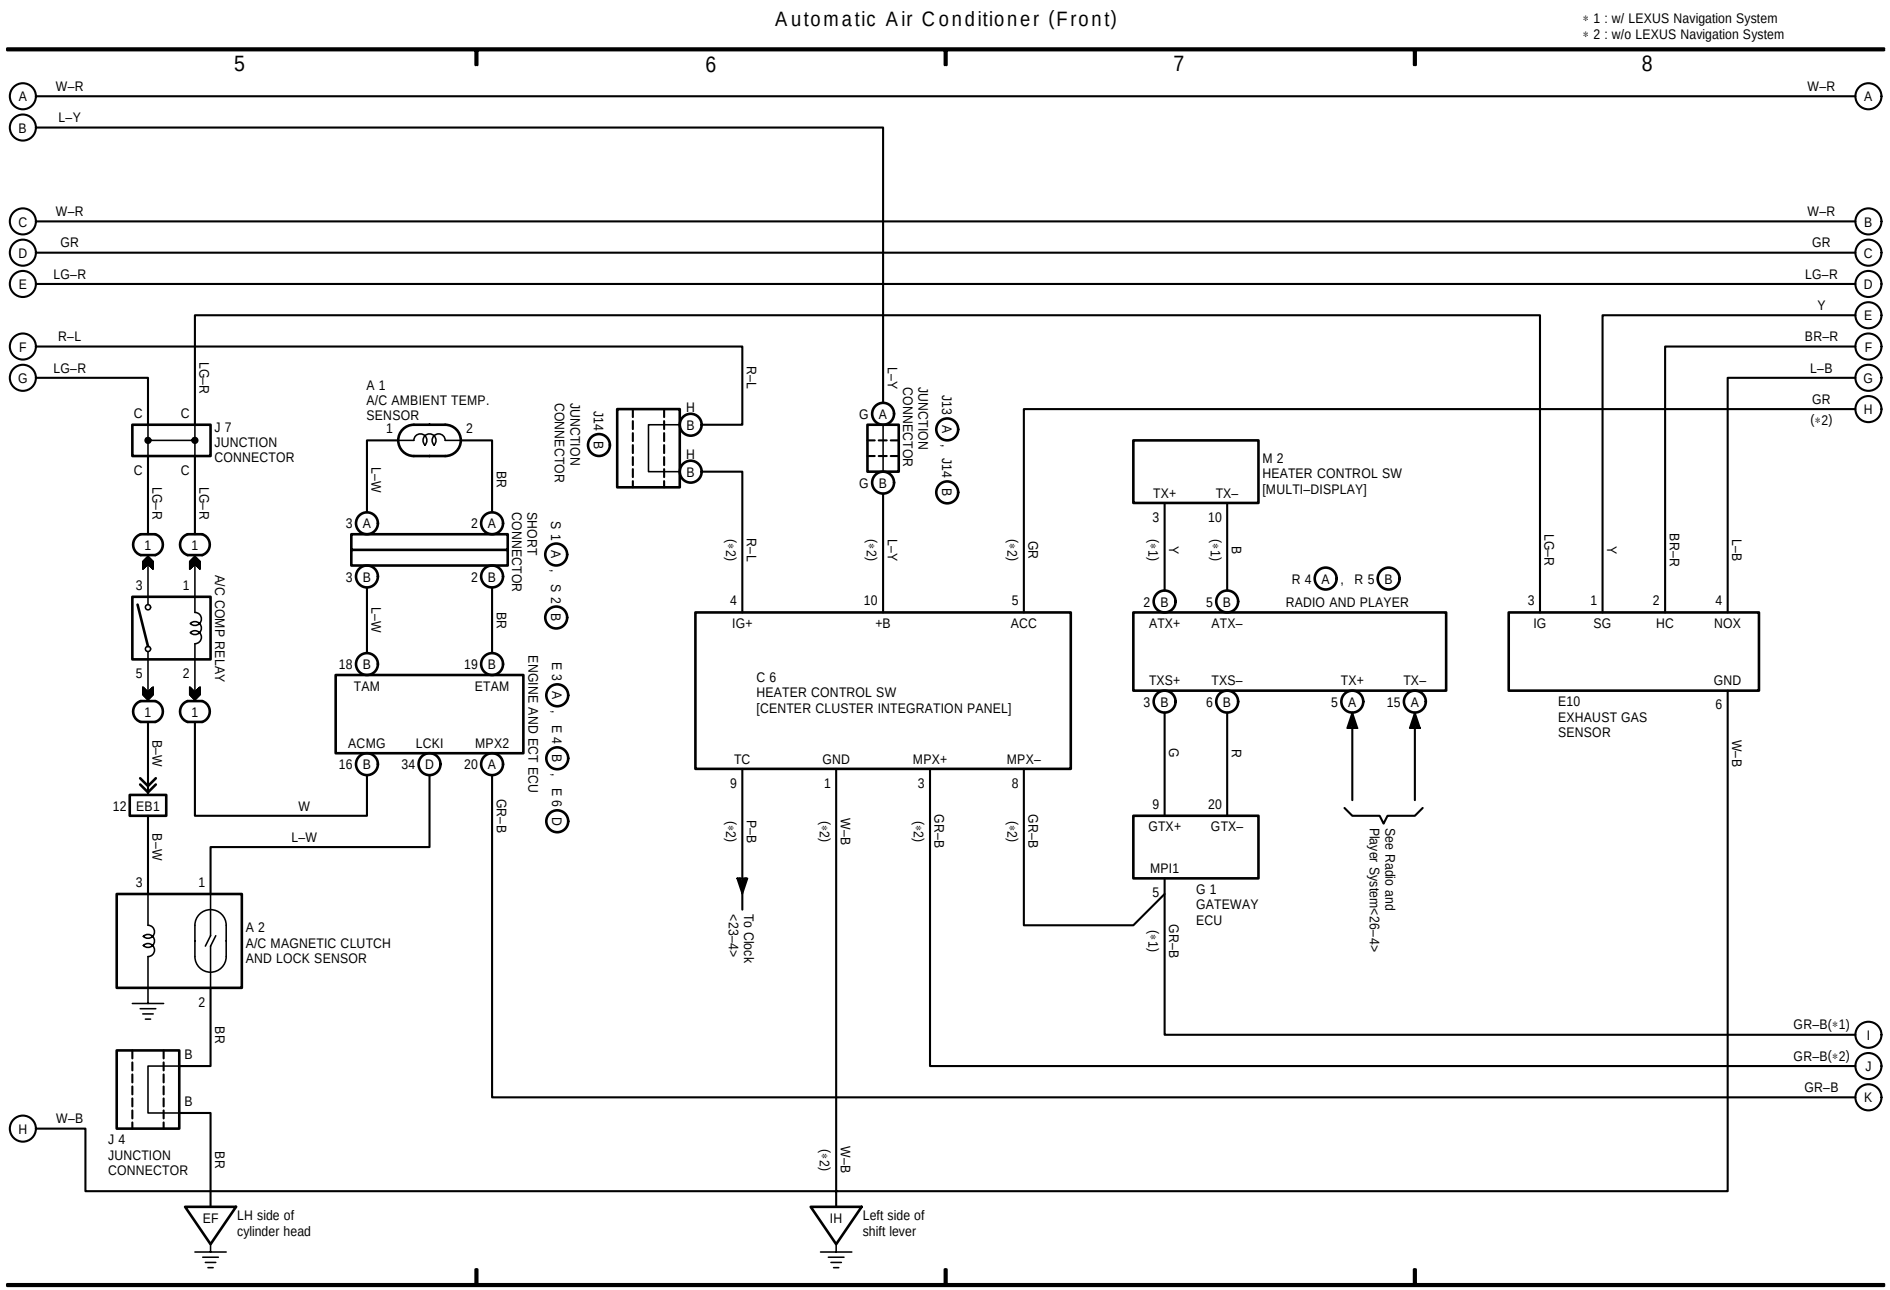

29 LS 430 (RHD) (Cont' d)

(Cont. next page)

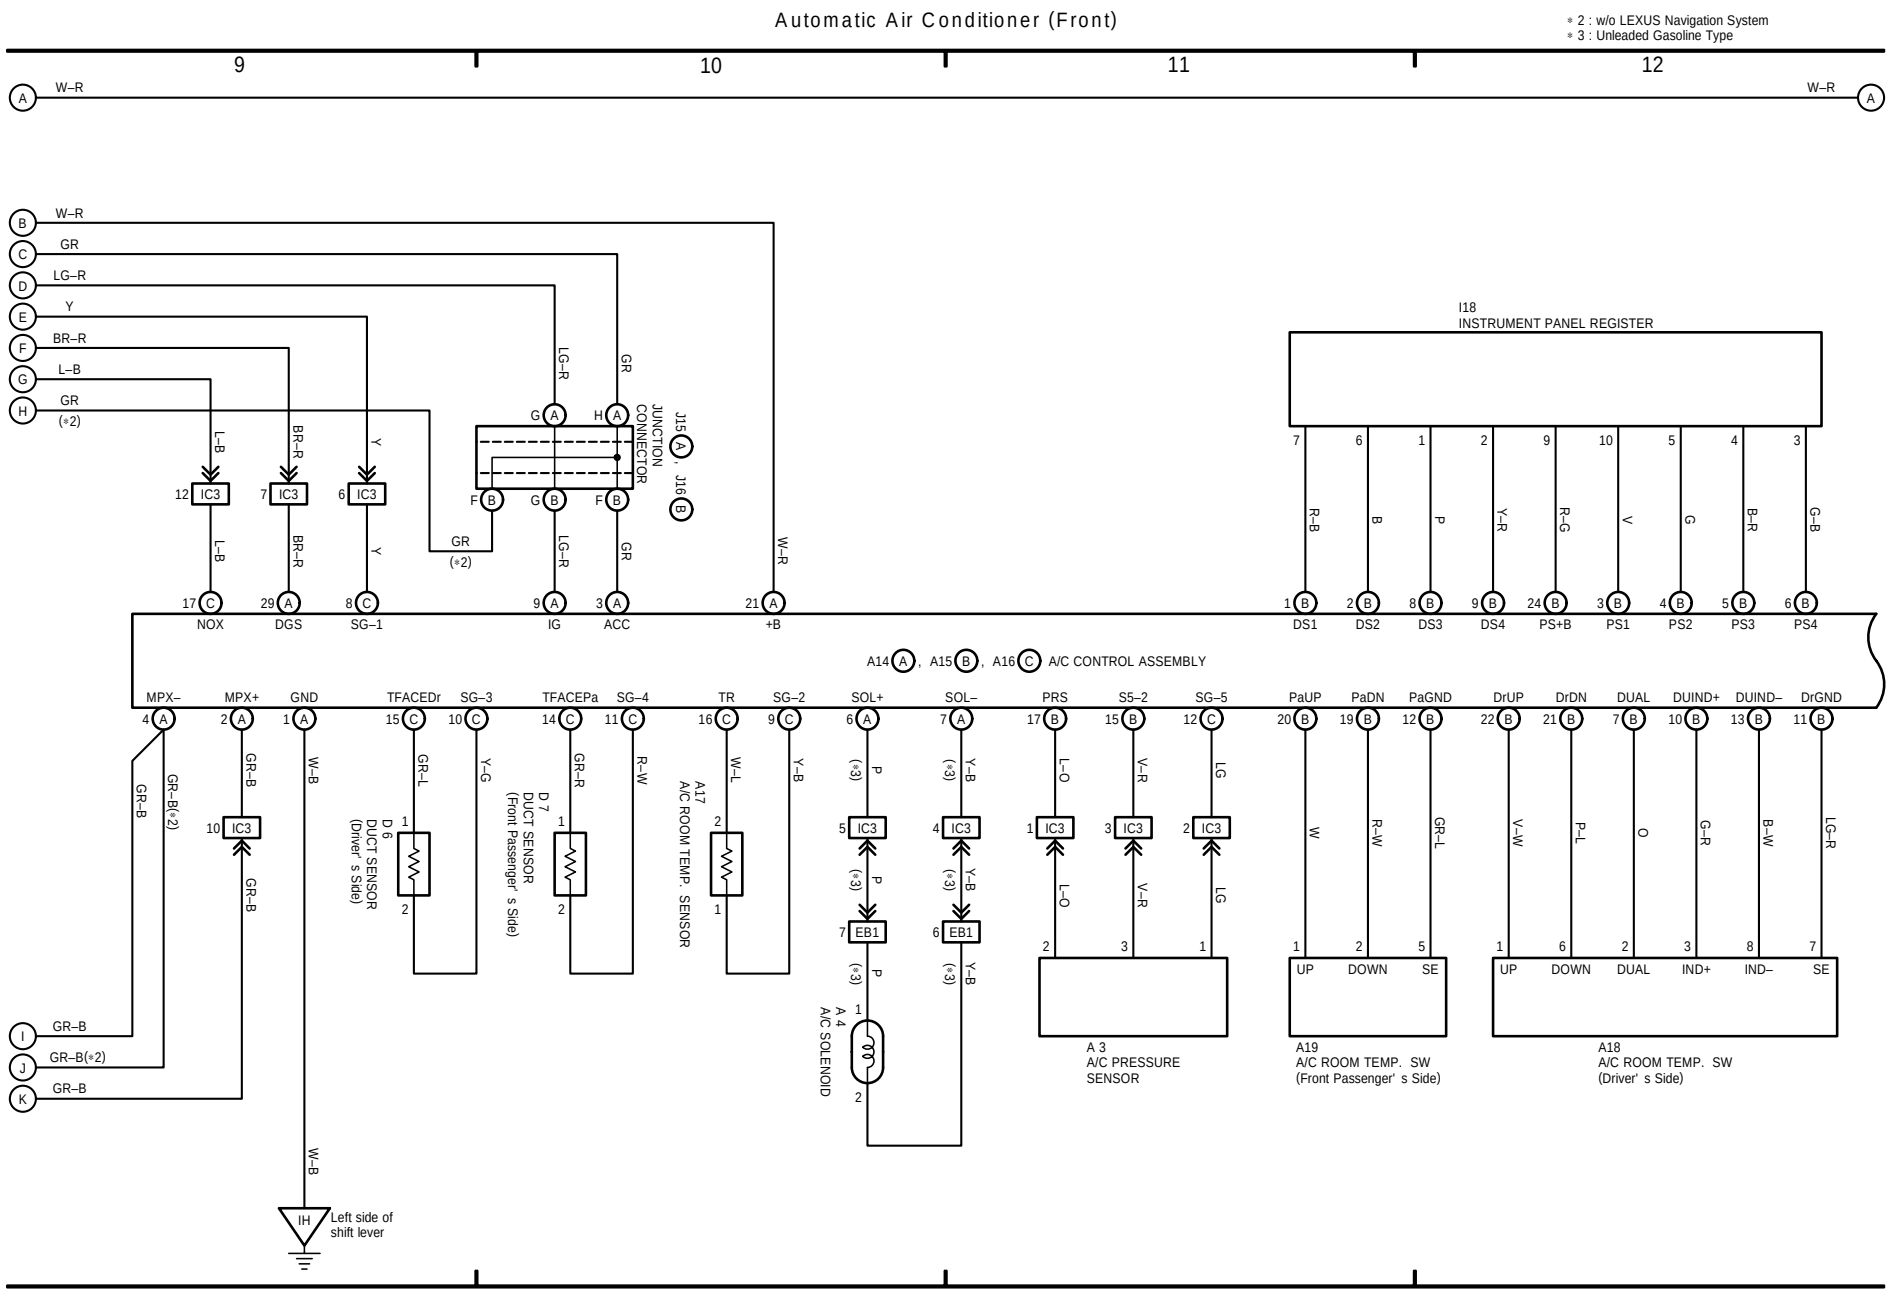

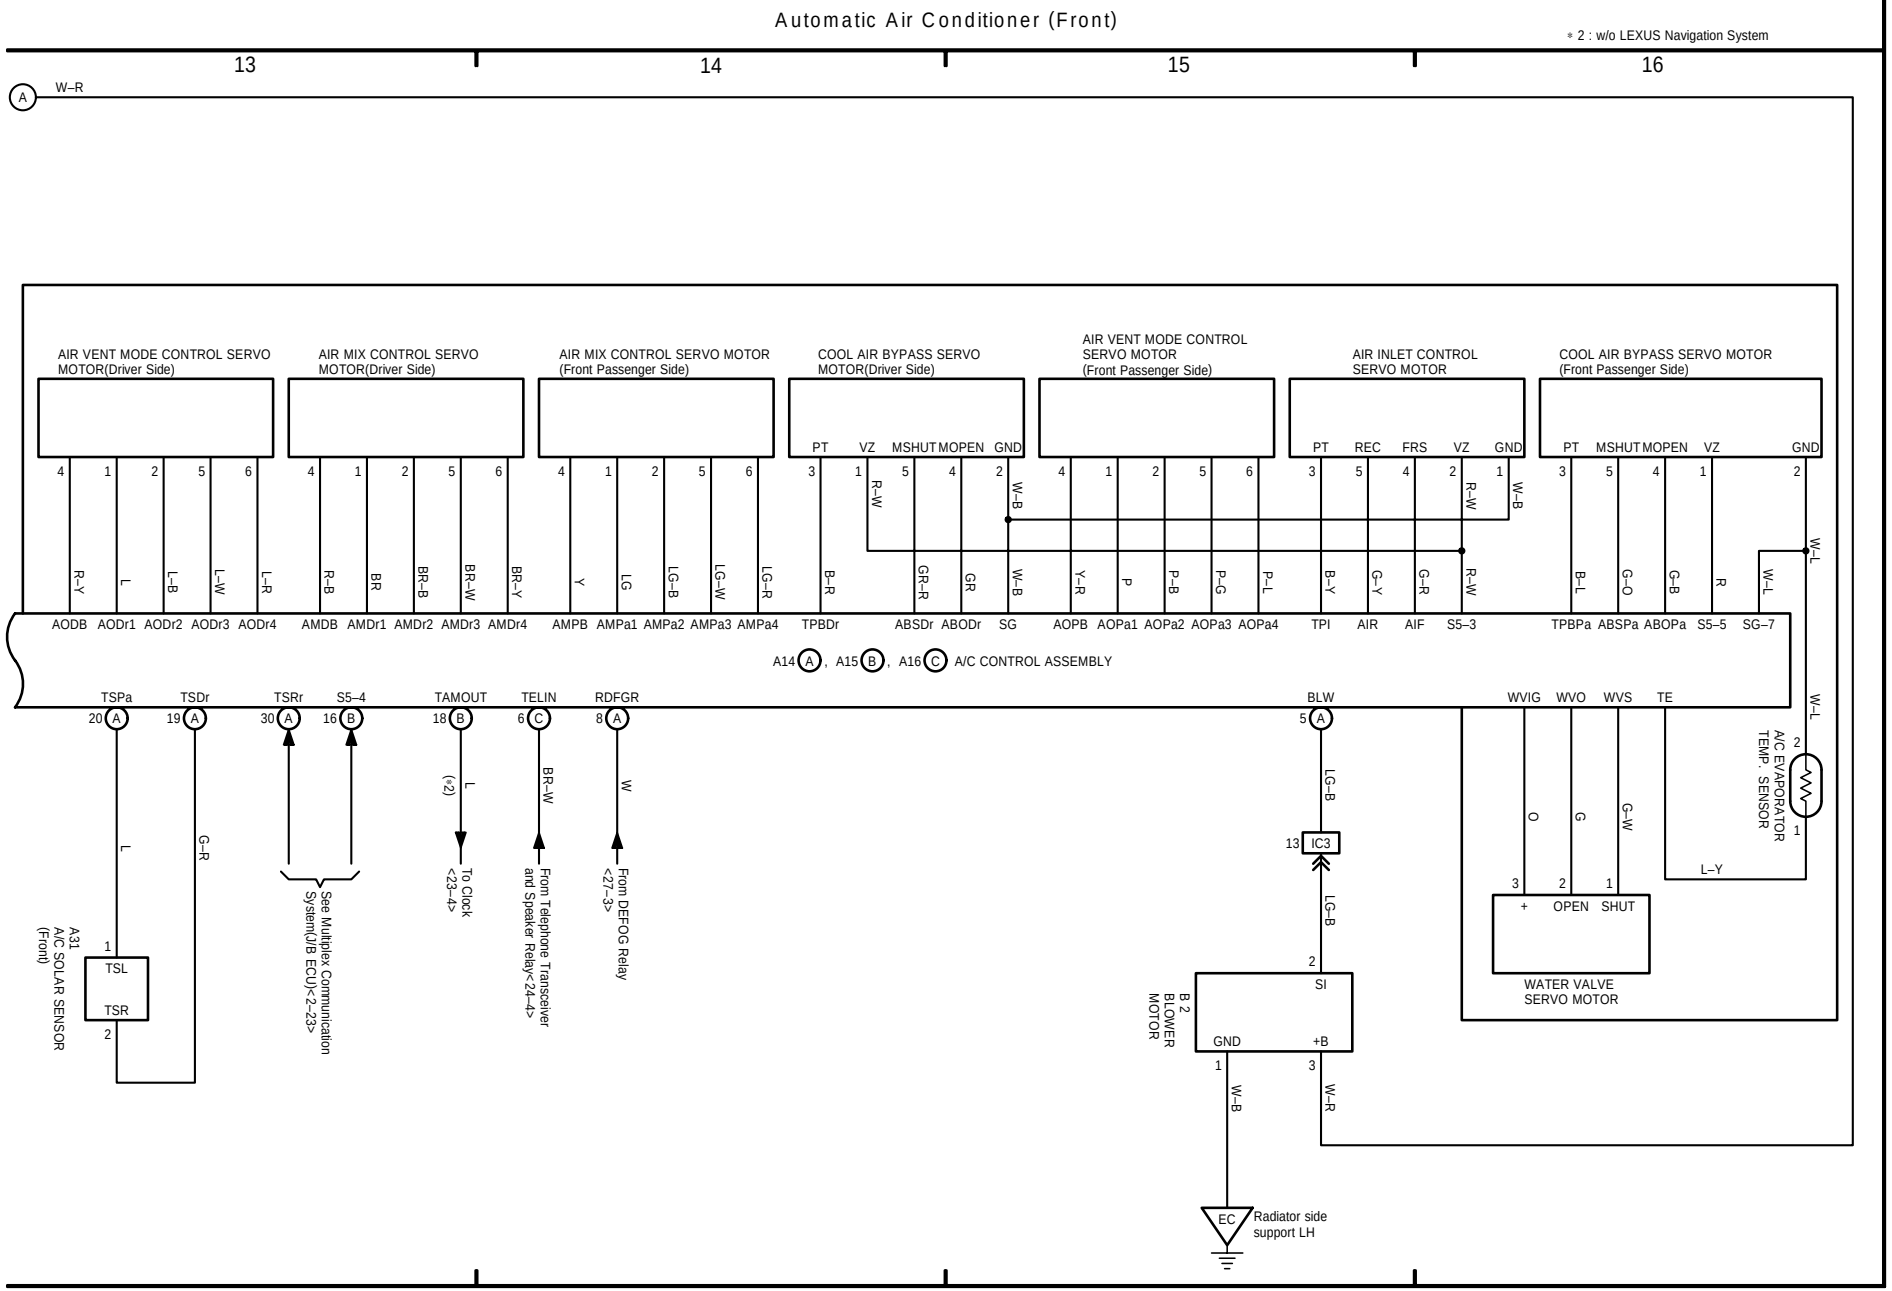
Automatic Air Conditioner (Front)
* 2 : w/o LEXUS Navigation System
13
14
15
16
W–R
AIR VENT MODE CONTROL SERVO MOTOR(Driver Side)
AIR MIX CONTROL SERVO MOTOR(Driver Side)
AIR MIX CONTROL SERVO MOTOR (Front Passenger Side)
COOL AIR BYPASS SERVO MOTOR(Driver Side)
AIR VENT MODE CONTROL SERVO MOTOR (Front Passenger Side)
AIR INLET CONTROL SERVO MOTOR
COOL AIR BYPASS SERVO MOTOR (Front Passenger Side)
PT VZ MSHUT MOPEN GND
PT REC FRS VZ GND
PT MSHUT MOPEN VZ GND
AODB AODr1 AODr2 AODr3 AODr4
AMDB AMDr1 AMDr2 AMDr3 AMDr4
AMPB AMPa1 AMPa2 AMPa3 AMPa4
TPBDr ABSDr ABODr SG
AOPB AOPa1 AOPa2 AOPa3 AOPa4
TPI AIR AIF S5–3
TPBPa ABSPa ABOPa S5–5 SG–7
A14 (A), A15 (B), A16 (C) A/C CONTROL ASSEMBLY
TSPa TSDr TSRr S5–4 TAMOUT TELIN RDFGR
BLW
WVIG WVO WVS TE
A31 A/C SOLAR SENSOR (Front)
TSL
TSR
See Multiplex Communication System(J/B ECU)<2–23>
To Clock <23–4>
From Telephone Transceiver and Speaker Relay<24–4>
From DEFOG Relay <27–3>
IC3
B 2 BLOWER MOTOR
SI
GND
+B
EC
Radiator side support LH
A/C EVAPORATOR TEMP. SENSOR
WATER VALVE SERVO MOTOR
OPEN
SHUT