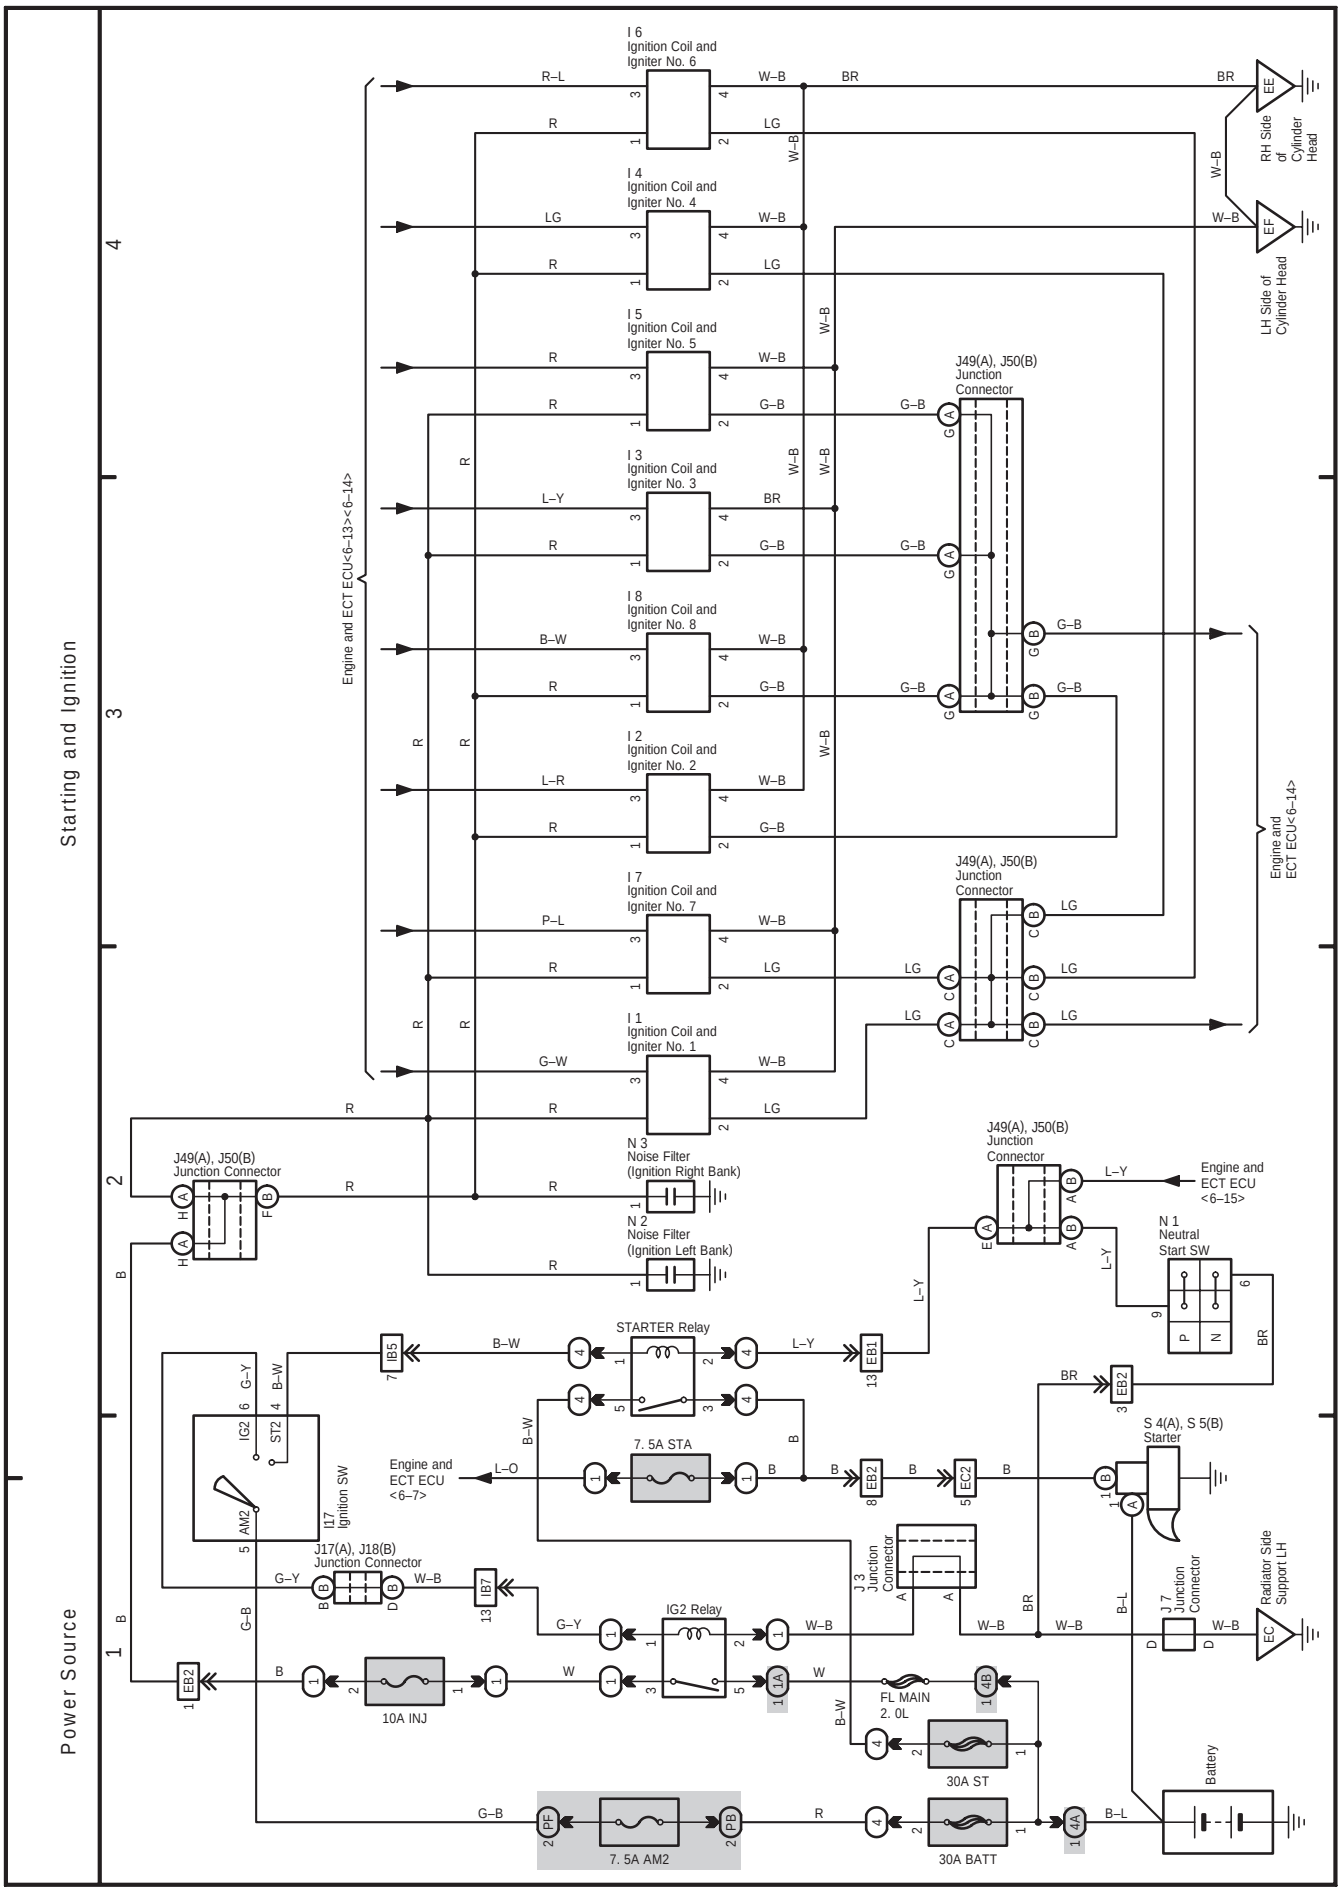
4 LS 430 (LHD)
Power Source
Starting and Ignition
I 6 Ignition Coil and Igniter No. 6
I 4 Ignition Coil and Igniter No. 4
I 5 Ignition Coil and Igniter No. 5
I 3 Ignition Coil and Igniter No. 3
I 8 Ignition Coil and Igniter No. 8
I 2 Ignition Coil and Igniter No. 2
I 7 Ignition Coil and Igniter No. 7
I 1 Ignition Coil and Igniter No. 1
Engine and ECT ECU<6–13><6–14>
J49(A), J50(B) Junction Connector
RH Side of Cylinder Head
LH Side of Cylinder Head
Engine and ECT ECU<6–14>
N 3 Noise Filter (Ignition Right Bank)
N 2 Noise Filter (Ignition Left Bank)
Engine and ECT ECU <6–15>
N 1 Neutral Start SW
STARTER Relay
7. 5A STA
Engine and ECT ECU <6–7>
S 4(A), S 5(B) Starter
I17 Ignition SW
J17(A), J18(B) Junction Connector
IG2 Relay
J 3 Junction Connector
J 7 Junction Connector
Radiator Side Support LH
10A INJ
FL MAIN 2. 0L
30A ST
30A BATT
7. 5A AM2
Battery