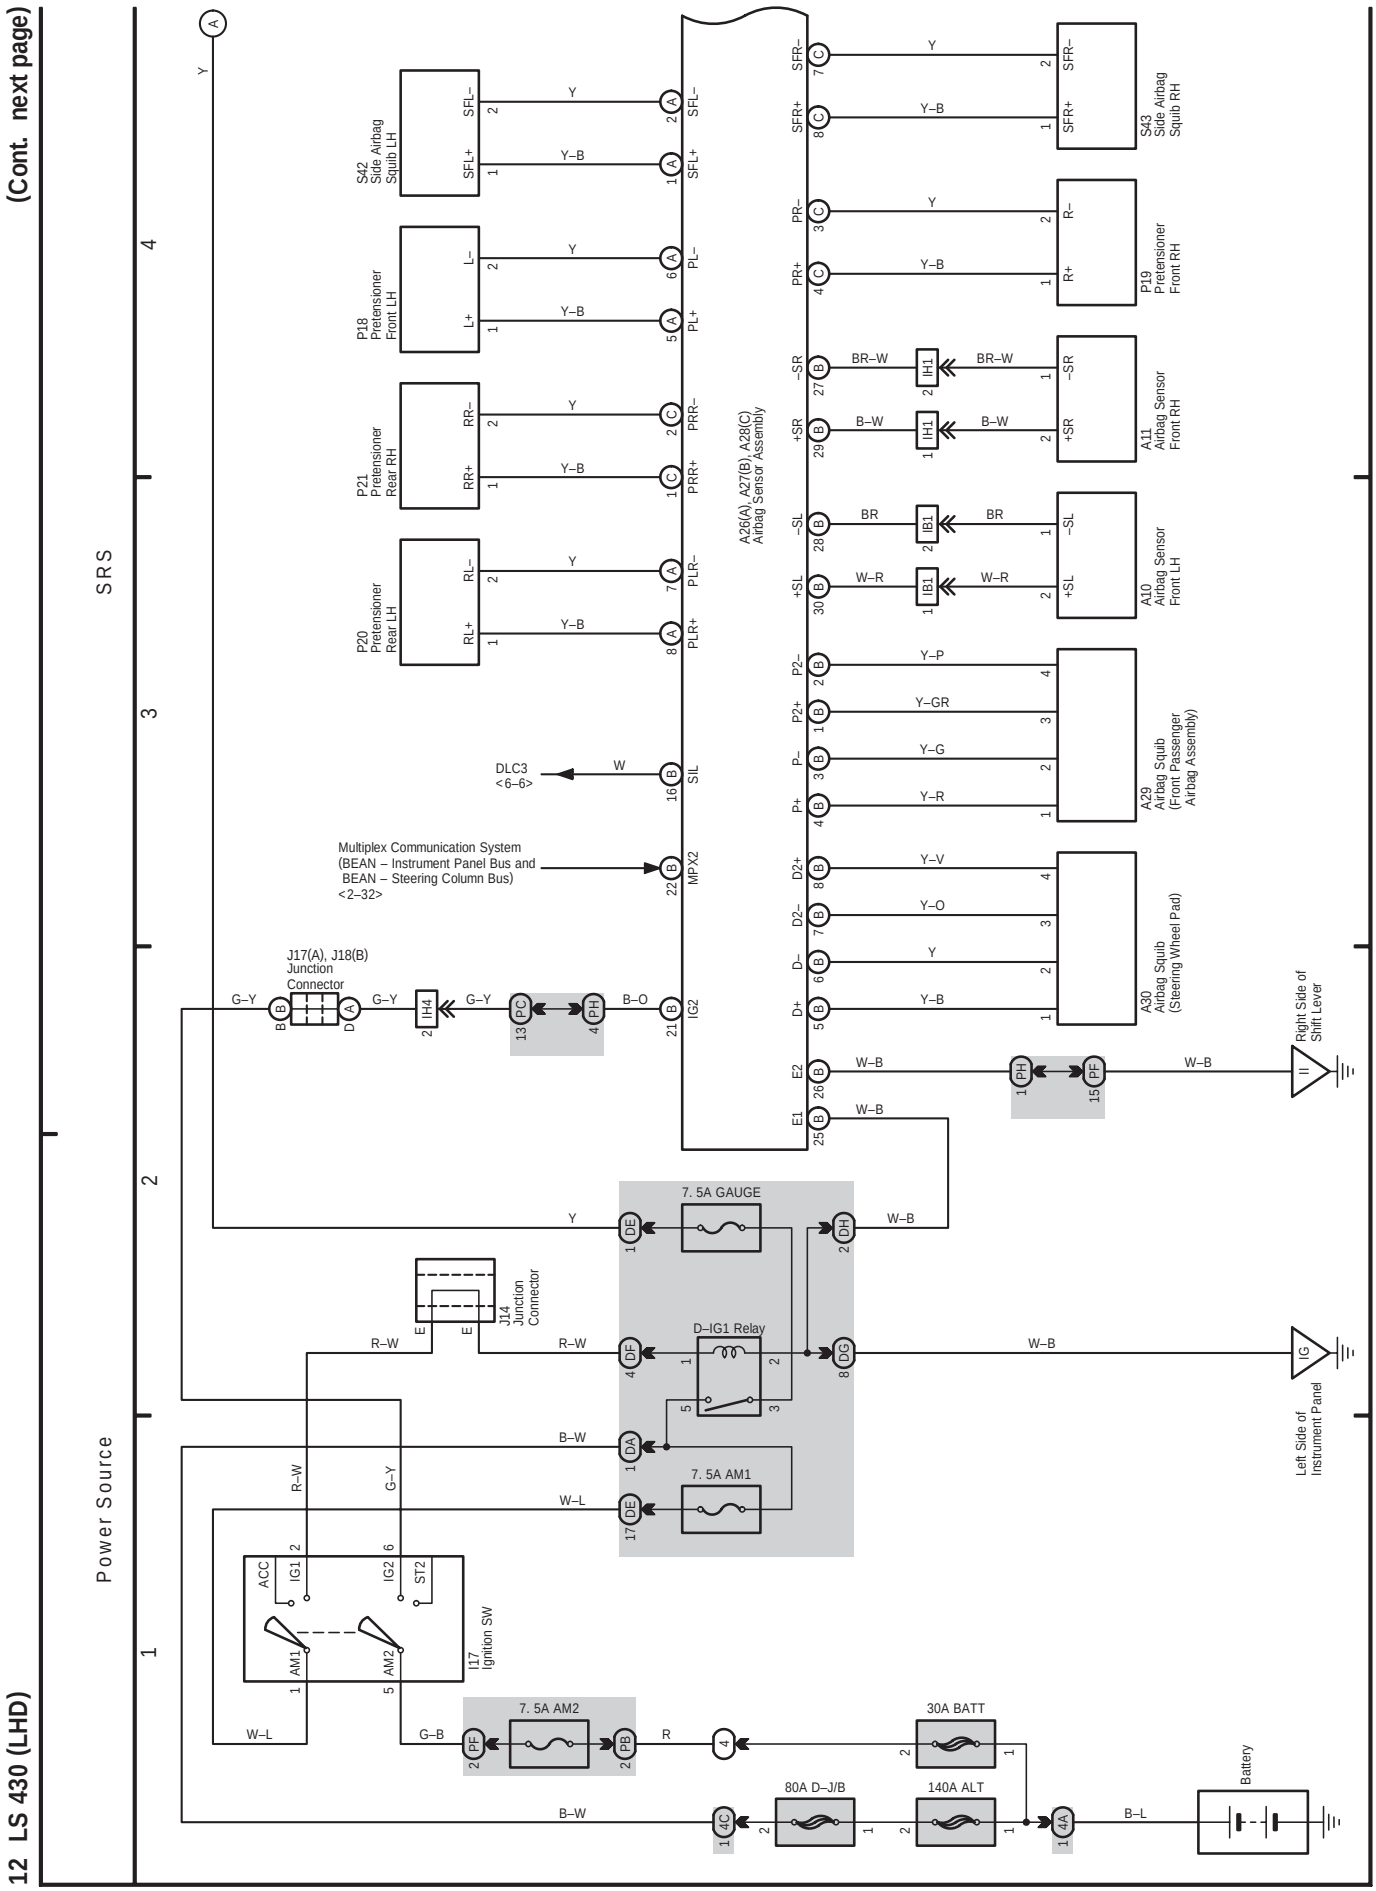
12 LS 430 (LHD)
(Cont. next page)
Power Source
SRS
S42 Side Airbag Squib LH
P18 Pretensioner Front LH
P21 Pretensioner Rear RH
P20 Pretensioner Rear LH
A26(A), A27(B), A28(C) Airbag Sensor Assembly
S43 Side Airbag Squib RH
P19 Pretensioner Front RH
A11 Airbag Sensor Front RH
A10 Airbag Sensor Front LH
A29 Airbag Squib (Front Passenger Airbag Assembly)
A30 Airbag Squib (Steering Wheel Pad)
DLC3 <6–6>
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus) <2–32>
J17(A), J18(B) Junction Connector
Right Side of Shift Lever
7. 5A GAUGE
J14 Junction Connector
D–IG1 Relay
Left Side of Instrument Panel
7. 5A AM1
I17 Ignition SW
7. 5A AM2
30A BATT
80A D–J/B
140A ALT
Battery

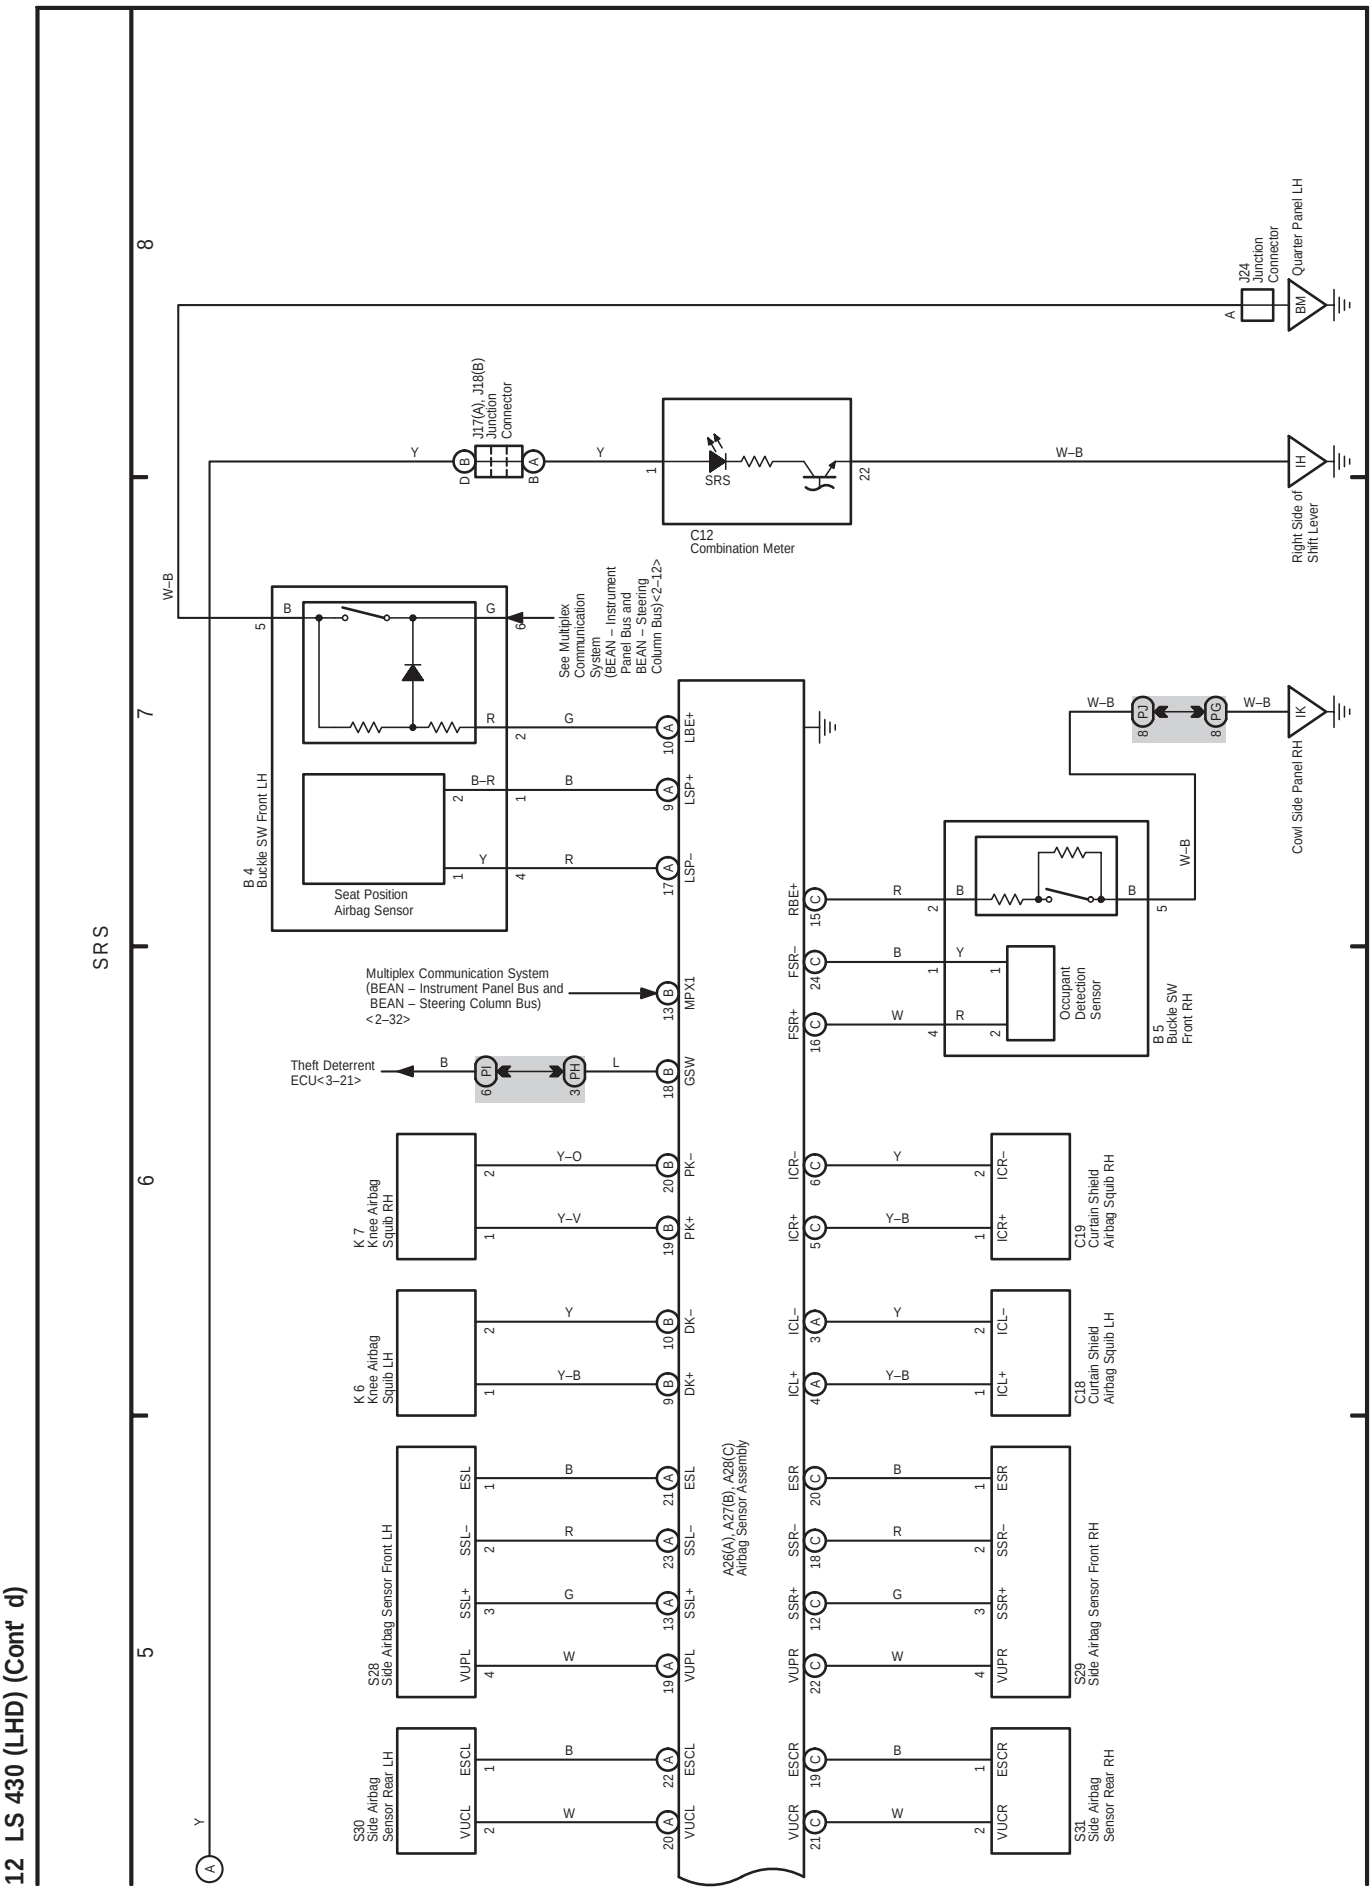
12 LS 430 (LHD) (Cont' d)
SRS
J24 Junction Connector
Quarter Panel LH
J17(A), J18(B) Junction Connector
C12 Combination Meter
Right Side of Shift Lever
Cowl Side Panel RH
See Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus)<2–12>
B 4 Buckle SW Front LH
Seat Position Airbag Sensor
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus) <2–32>
Theft Deterrent ECU<3–21>
B 5 Buckle SW Front RH
Occupant Detection Sensor
K 7 Knee Airbag Squib RH
K 6 Knee Airbag Squib LH
C19 Curtain Shield Airbag Squib RH
C18 Curtain Shield Airbag Squib LH
S28 Side Airbag Sensor Front LH
S29 Side Airbag Sensor Front RH
S30 Side Airbag Sensor Rear LH
S31 Side Airbag Sensor Rear RH
A26(A), A27(B), A28(C) Airbag Sensor Assembly