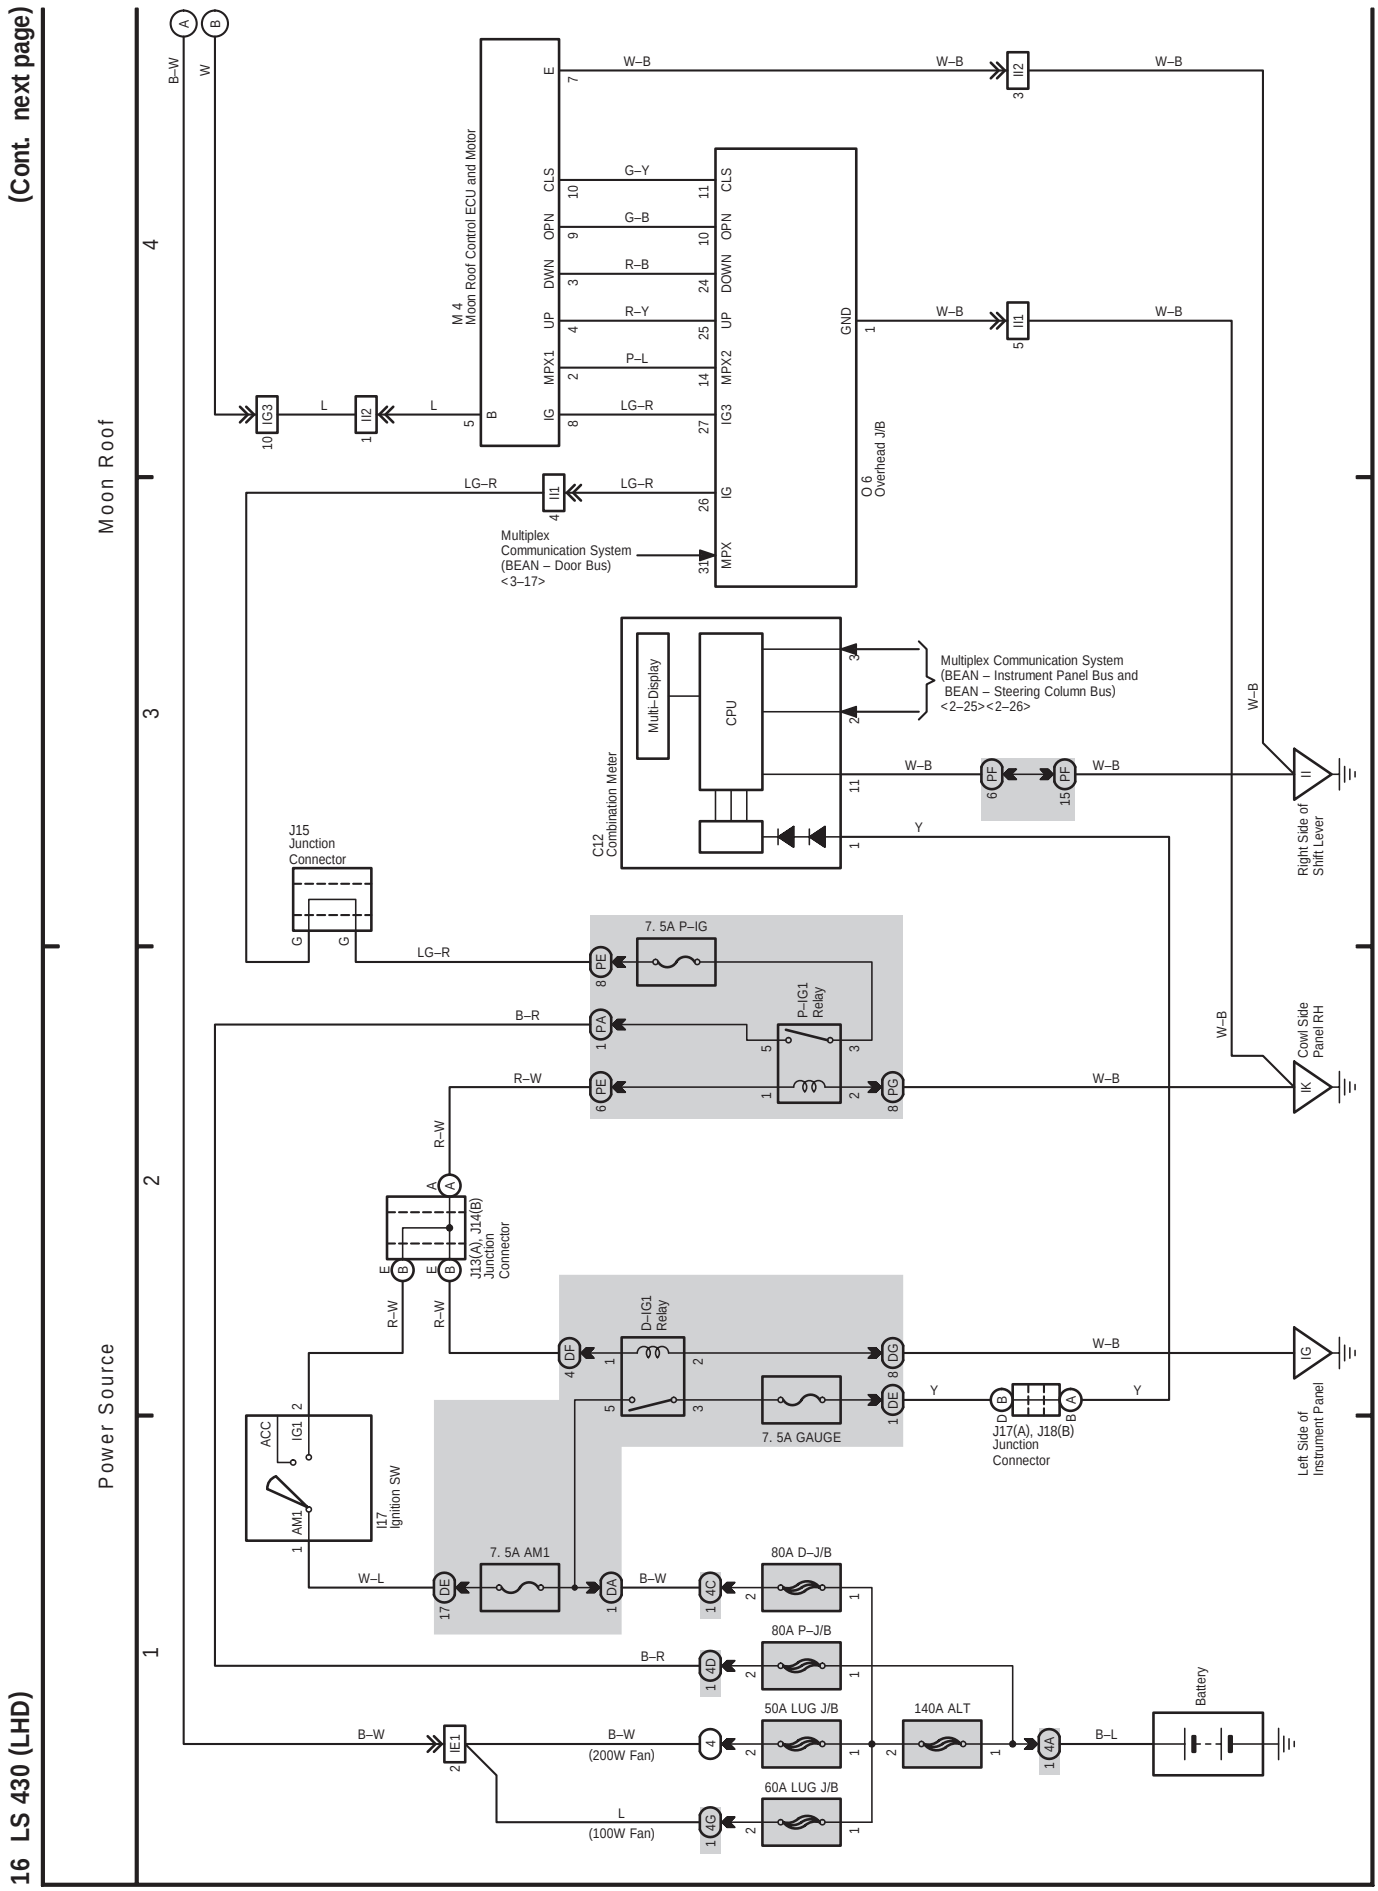
(Cont. next page)
16 LS 430 (LHD)
Moon Roof
Power Source
M 4
Moon Roof Control ECU and Motor
O 6
Overhead J/B
Multiplex Communication System (BEAN – Door Bus) <3–17>
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus) <2–25><2–26>
C12
Combination Meter
Multi–Display
CPU
J15
Junction Connector
7. 5A P–IG
P–IG1 Relay
J13(A), J14(B) Junction Connector
D–IG1 Relay
7. 5A GAUGE
J17(A), J18(B) Junction Connector
I17
Ignition SW
7. 5A AM1
80A D–J/B
80A P–J/B
50A LUG J/B
60A LUG J/B
140A ALT
Battery
(200W Fan)
(100W Fan)
Right Side of Shift Lever
Cowl Side Panel RH
Left Side of Instrument Panel

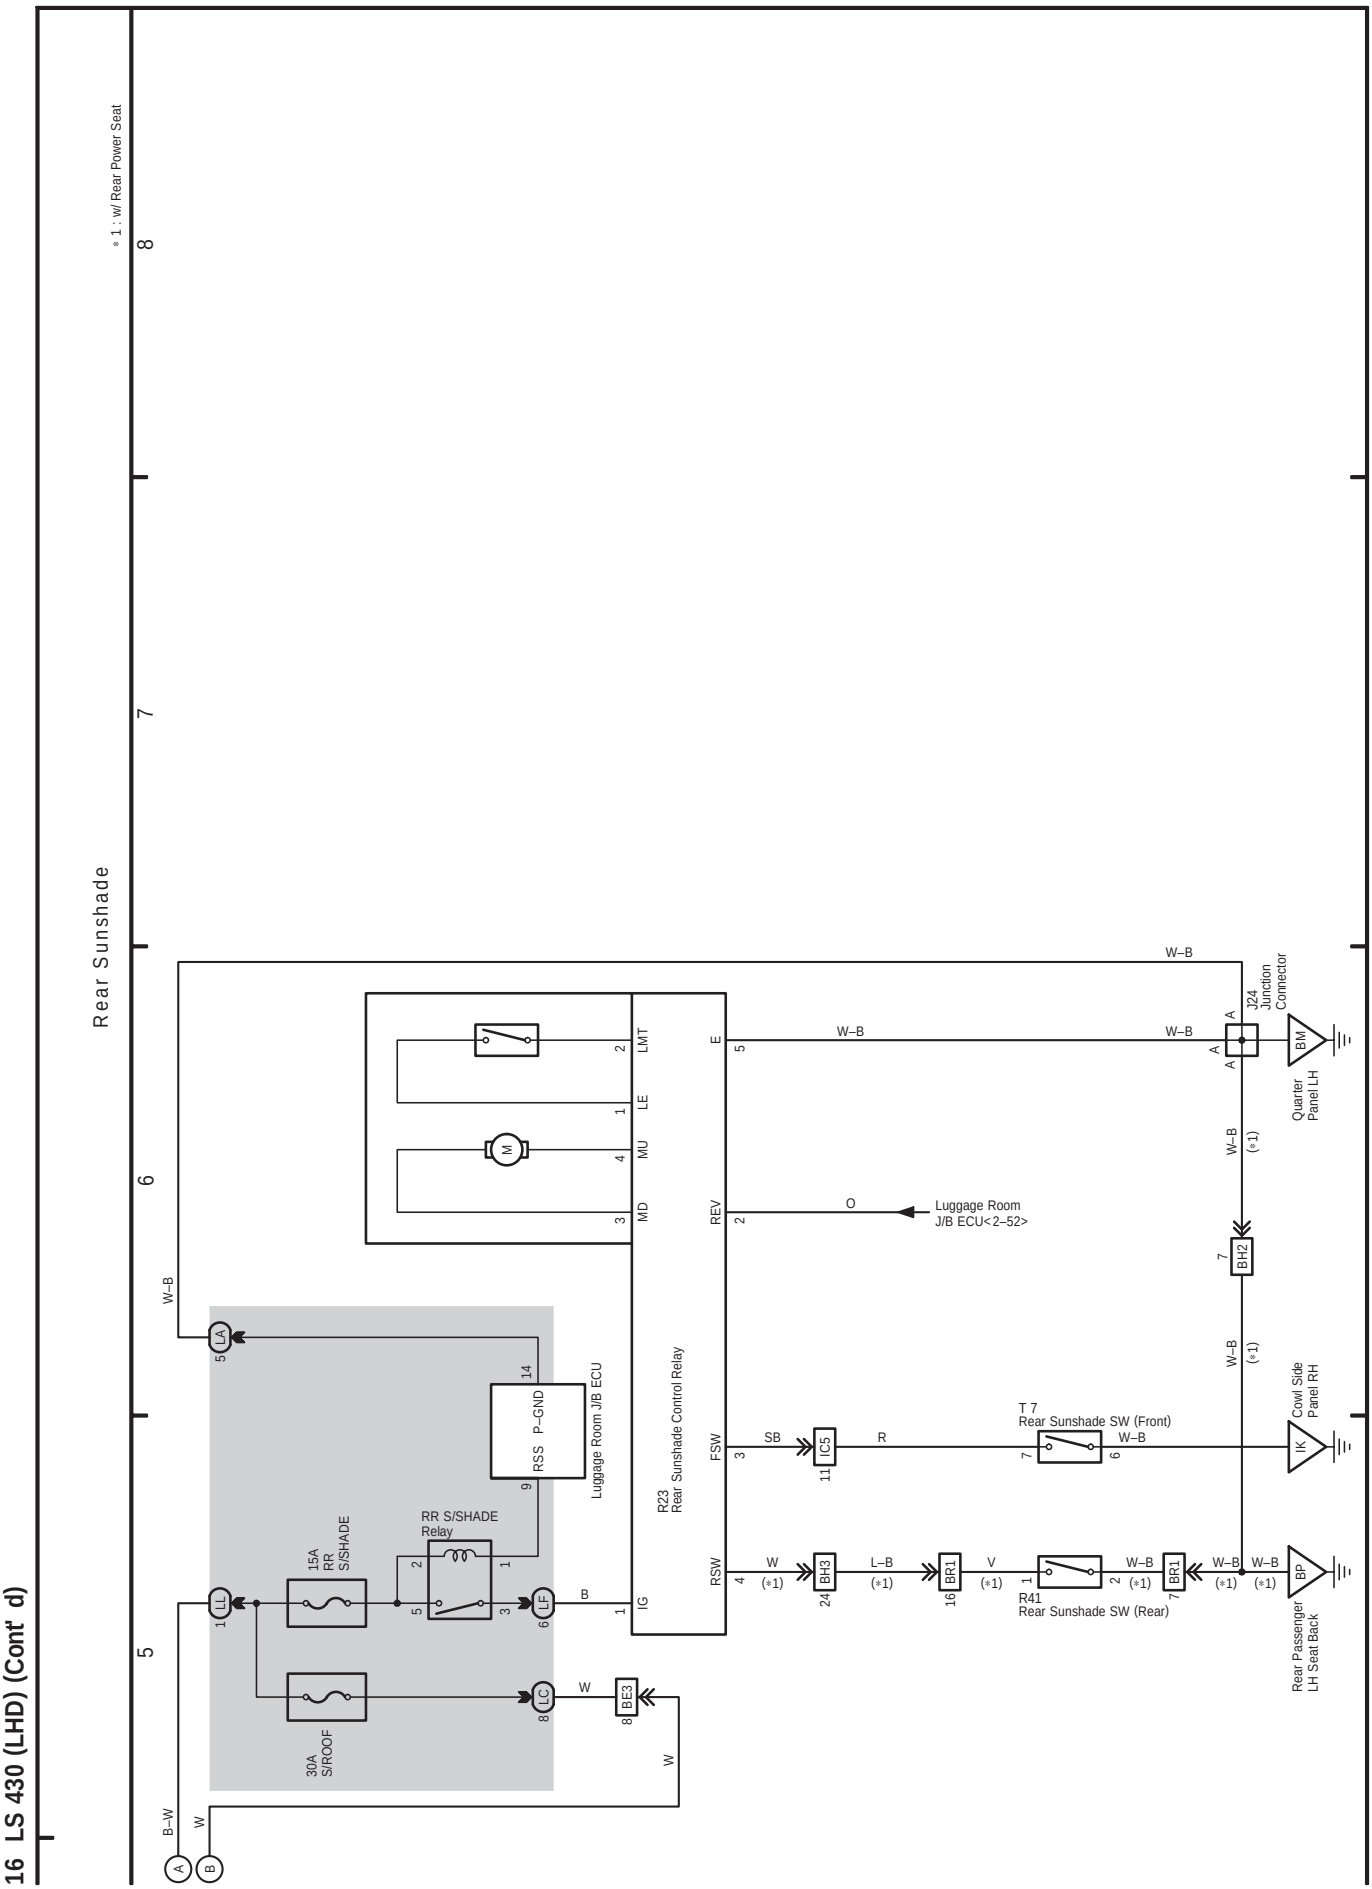
16 LS 430 (LHD) (Cont' d)
Rear Sunshade
* 1 : w/ Rear Power Seat
5
6
7
8
30A S/ROOF
15A RR S/SHADE
RR S/SHADE Relay
Luggage Room J/B ECU
RSS P–GND
R23 Rear Sunshade Control Relay
LMT
LE
MU
MD
IG
E
REV
FSW
RSW
Luggage Room J/B ECU<2–52>
T 7 Rear Sunshade SW (Front)
R41 Rear Sunshade SW (Rear)
J24 Junction Connector
Quarter Panel LH
Cowl Side Panel RH
Rear Passenger LH Seat Back
W–B
B–W
W
B
SB
R
O
L–B
V
LA
LB
LC
LE
IC5
BH3
BR1
BE3
BH2
BM
IK
BP