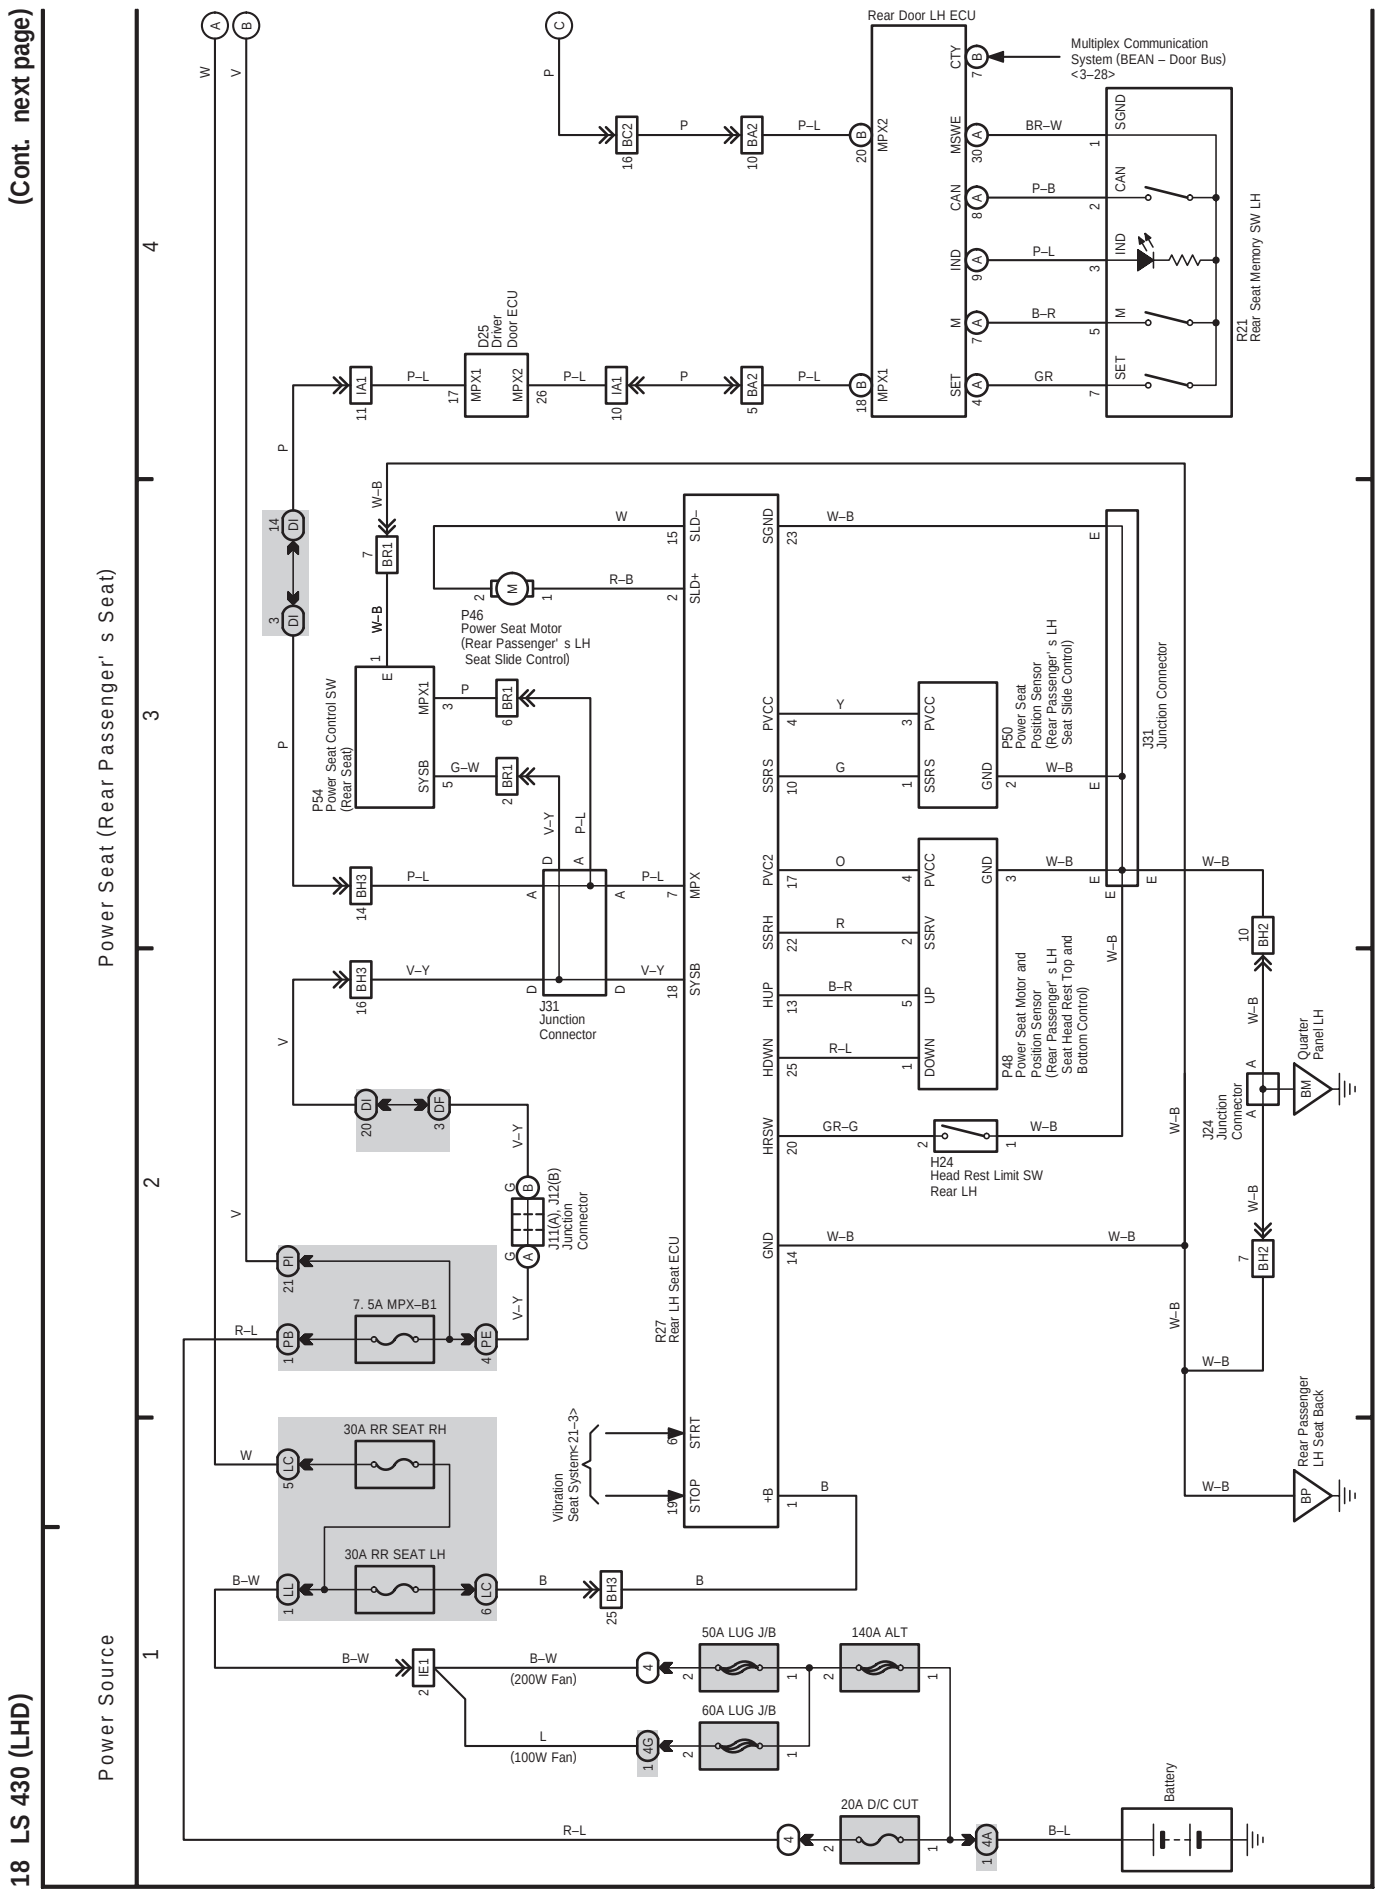
(Cont. next page)
Power Seat (Rear Passenger' s Seat)
Power Source
Rear Door LH ECU
Multiplex Communication System (BEAN – Door Bus) <3–28>
R21 Rear Seat Memory SW LH
D25 Driver Door ECU
P46 Power Seat Motor (Rear Passenger' s LH Seat Slide Control)
P54 Power Seat Control SW (Rear Seat)
P50 Power Seat Position Sensor (Rear Passenger' s LH Seat Slide Control)
P48 Power Seat Motor and Position Sensor (Rear Passenger' s LH Seat Head Rest Top and Bottom Control)
H24 Head Rest Limit SW Rear LH
J31 Junction Connector
J11(A), J12(B) Junction Connector
J24 Junction Connector
R27 Rear LH Seat ECU
Vibration Seat System <21–3>
7. 5A MPX–B1
30A RR SEAT RH
30A RR SEAT LH
50A LUG J/B
60A LUG J/B
140A ALT
20A D/C CUT
Battery
Quarter Panel LH
Rear Passenger LH Seat Back
(200W Fan)
(100W Fan)

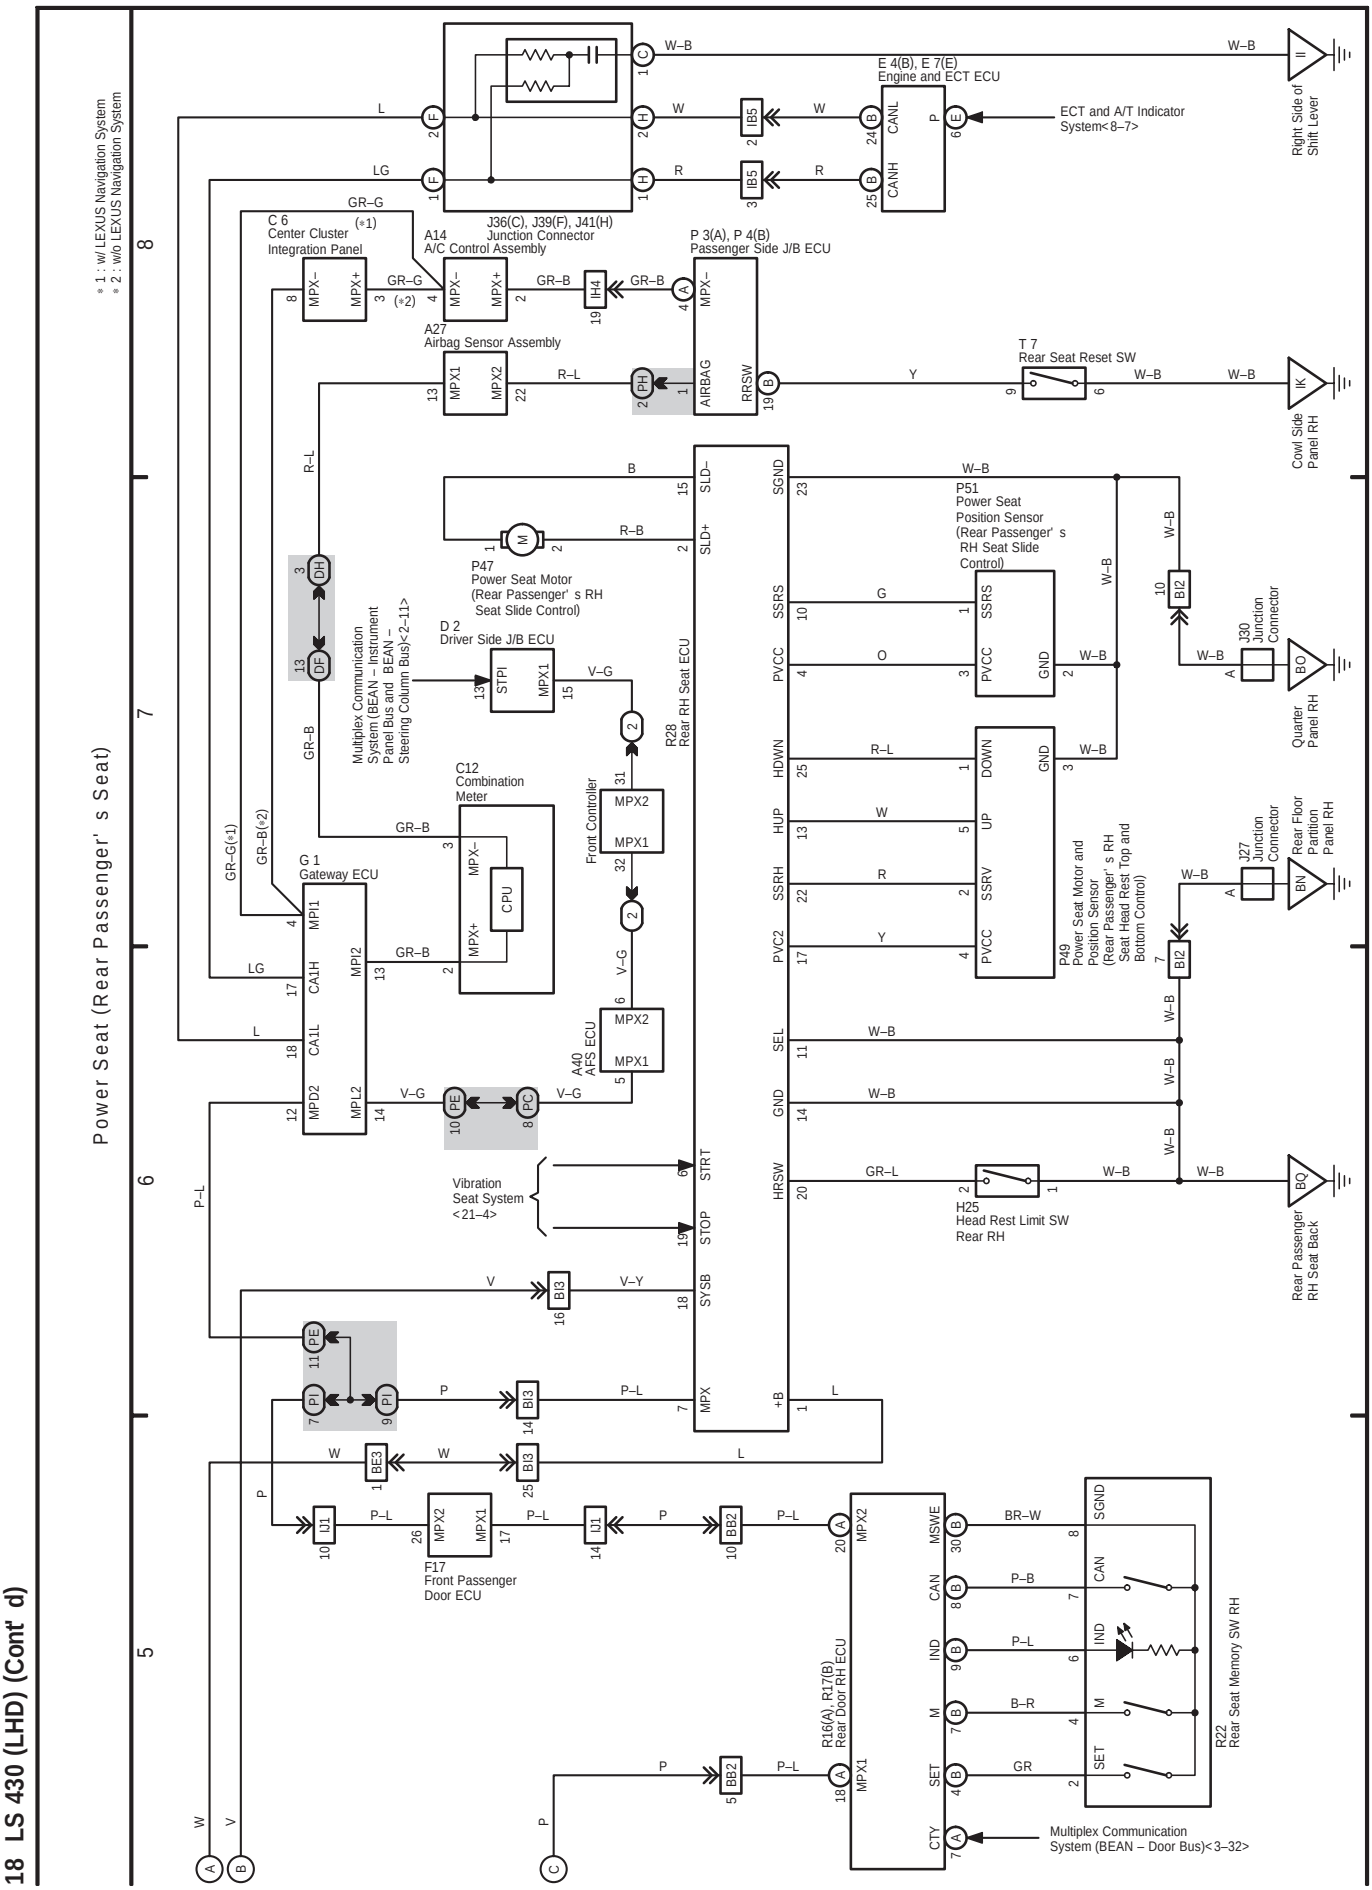
18 LS 430 (LHD) (Cont' d)
Power Seat (Rear Passenger' s Seat)
* 1 : w/ LEXUS Navigation System
* 2 : w/o LEXUS Navigation System
E 4(B), E 7(E)
Engine and ECT ECU
ECT and A/T Indicator System<8–7>
Right Side of Shift Lever
C 6
Center Cluster Integration Panel
A14
A/C Control Assembly
J36(C), J39(F), J41(H)
Junction Connector
P 3(A), P 4(B)
Passenger Side J/B ECU
A27
Airbag Sensor Assembly
T 7
Rear Seat Reset SW
Cowl Side Panel RH
P47
Power Seat Motor
(Rear Passenger' s RH Seat Slide Control)
D 2
Driver Side J/B ECU
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus)<2–11>
R28
Rear RH Seat ECU
P51
Power Seat Position Sensor
(Rear Passenger' s RH Seat Slide Control)
J30
Junction Connector
Quarter Panel RH
C12
Combination Meter
Front Controller
G 1
Gateway ECU
A40
AFS ECU
P49
Power Seat Motor and Position Sensor
(Rear Passenger' s RH Seat Head Rest Top and Bottom Control)
J27
Junction Connector
Rear Floor Partition Panel RH
Vibration Seat System <21–4>
H25
Head Rest Limit SW Rear RH
Rear Passenger RH Seat Back
F17
Front Passenger Door ECU
R16(A), R17(B)
Rear Door RH ECU
R22
Rear Seat Memory SW RH
Multiplex Communication System (BEAN – Door Bus)<3–32>