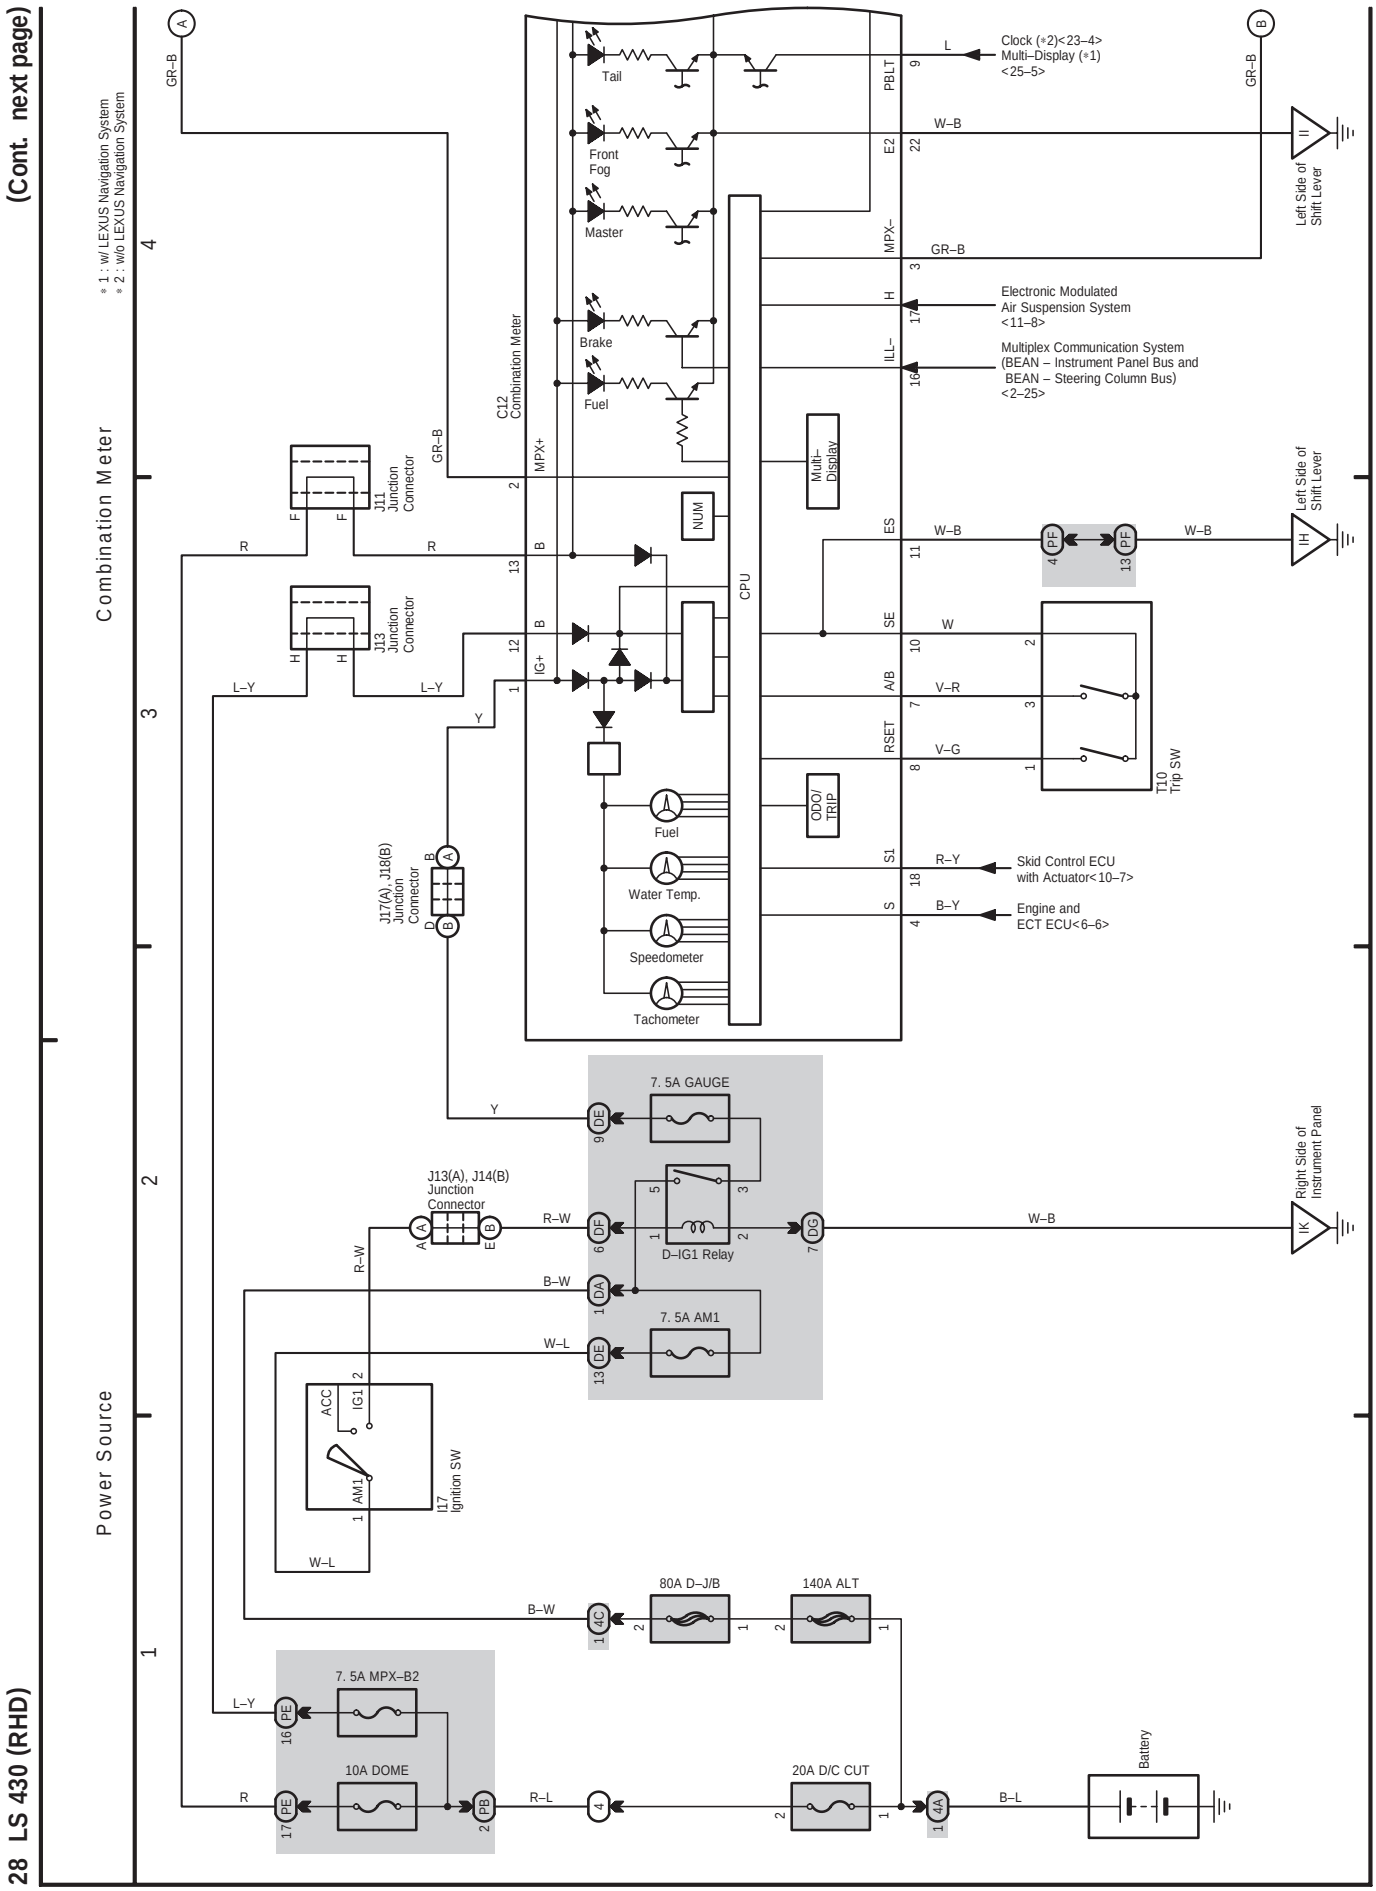
(Cont. next page)
28 LS 430 (RHD)
Combination Meter
Power Source
* 1 : w/ LEXUS Navigation System
* 2 : w/o LEXUS Navigation System
C12 Combination Meter
Tail
Front Fog
Master
Brake
Fuel
CPU
NUM
Multi-Display
ODO/TRIP
Fuel
Water Temp.
Speedometer
Tachometer
PBLT
E2
MPX–
H
ILL–
MPX+
B
IG+
ES
SE
A/B
RSET
S1
S
Clock (*2)<23–4>
Multi–Display (*1)
<25–5>
Electronic Modulated
Air Suspension System
<11–8>
Multiplex Communication System
(BEAN – Instrument Panel Bus and
BEAN – Steering Column Bus)
<2–25>
Skid Control ECU
with Actuator<10–7>
Engine and
ECT ECU<6–6>
Left Side of Shift Lever
Left Side of Shift Lever
Right Side of Instrument Panel
T10 Trip SW
J11 Junction Connector
J13 Junction Connector
J17(A), J18(B) Junction Connector
J13(A), J14(B) Junction Connector
7. 5A GAUGE
D–IG1 Relay
7. 5A AM1
I17 Ignition SW
ACC
IG1
AM1
80A D–J/B
140A ALT
7. 5A MPX–B2
10A DOME
20A D/C CUT
Battery

28 LS 430 (RHD) (Cont' d)

(Cont. next page)

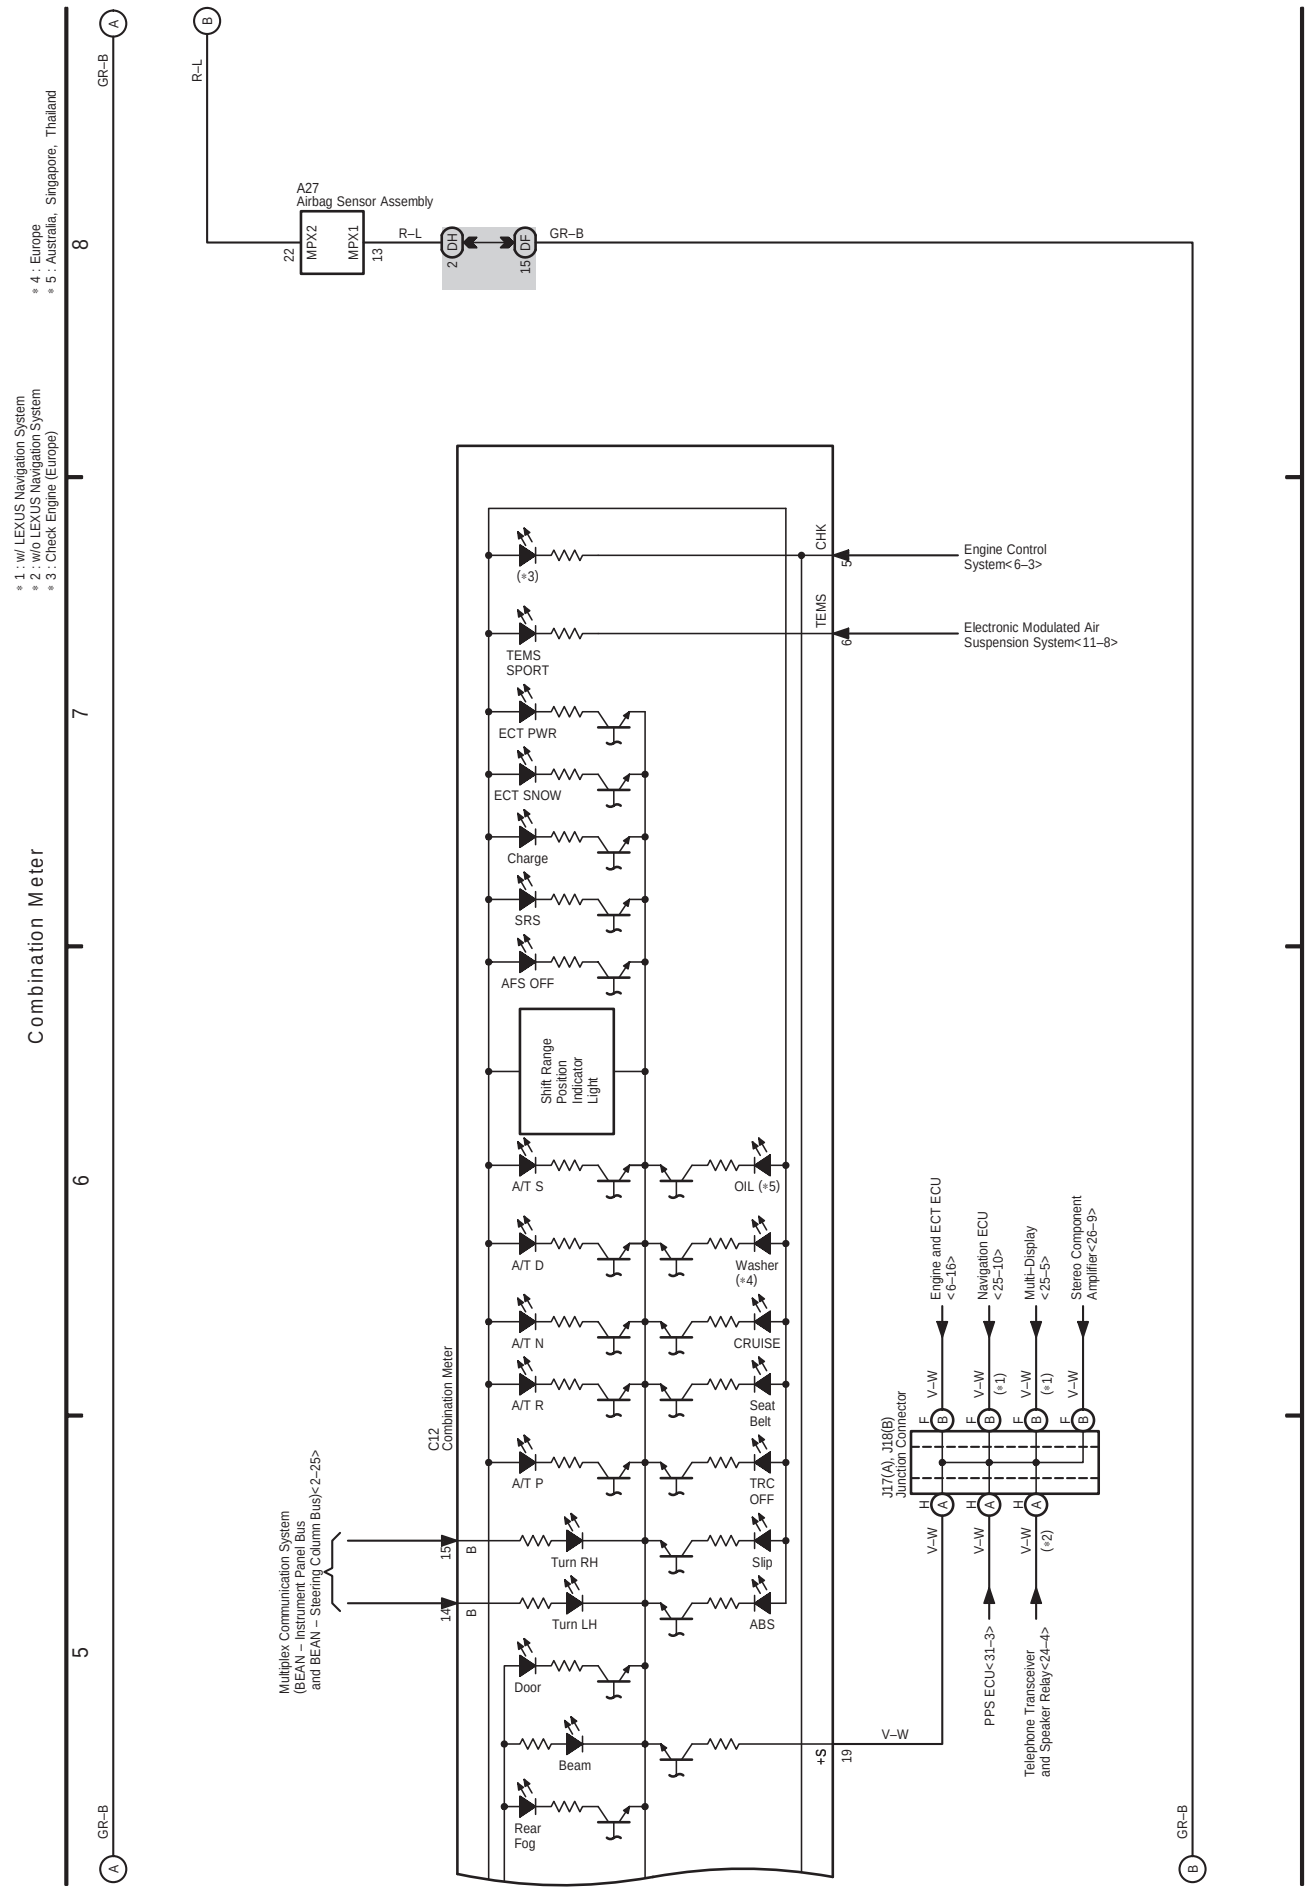

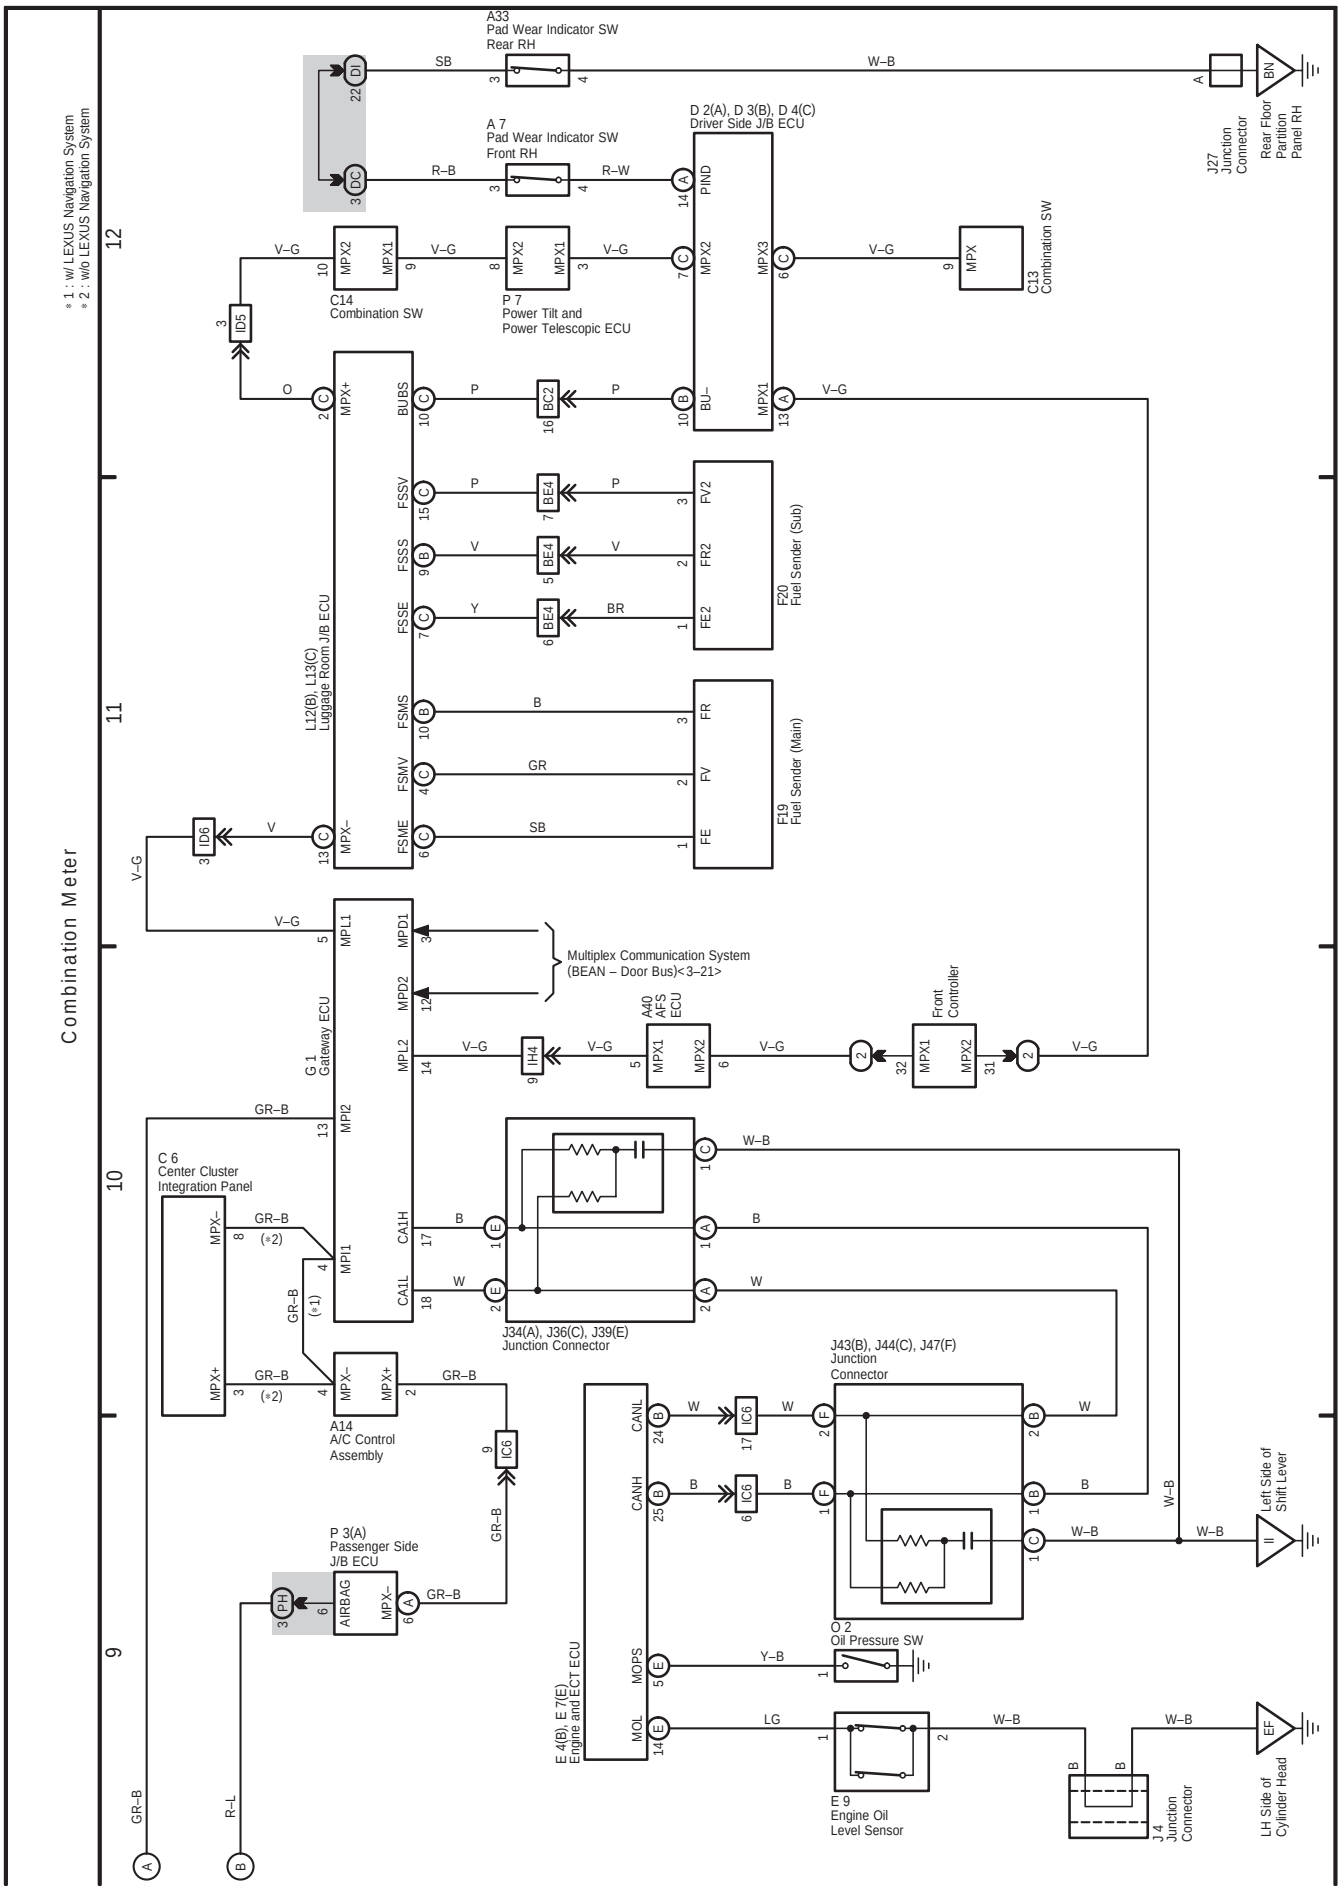
28 LS 430 (RHD) (Cont' d)
Combination Meter
* 1 : w/ LEXUS Navigation System
* 2 : w/o LEXUS Navigation System
A33
Pad Wear Indicator SW
Rear RH
A 7
Pad Wear Indicator SW
Front RH
D 2(A), D 3(B), D 4(C)
Driver Side J/B ECU
J27
Junction
Connector
Rear Floor
Partition
Panel RH
C14
Combination SW
P 7
Power Tilt and
Power Telescopic ECU
C13
Combination SW
L12(B), L13(C)
Luggage Room J/B ECU
F20
Fuel Sender (Sub)
F19
Fuel Sender (Main)
Multiplex Communication System
(BEAN – Door Bus)<3–21>
A40
AFS
ECU
Front
Controller
G 1
Gateway ECU
C 6
Center Cluster
Integration Panel
J34(A), J36(C), J39(E)
Junction Connector
J43(B), J44(C), J47(F)
Junction
Connector
A14
A/C Control
Assembly
P 3(A)
Passenger Side
J/B ECU
E 4(B), E 7(E)
Engine and ECT ECU
O 2
Oil Pressure SW
E 9
Engine Oil
Level Sensor
J 4
Junction
Connector
Left Side of
Shift Lever
LH Side of
Cylinder Head