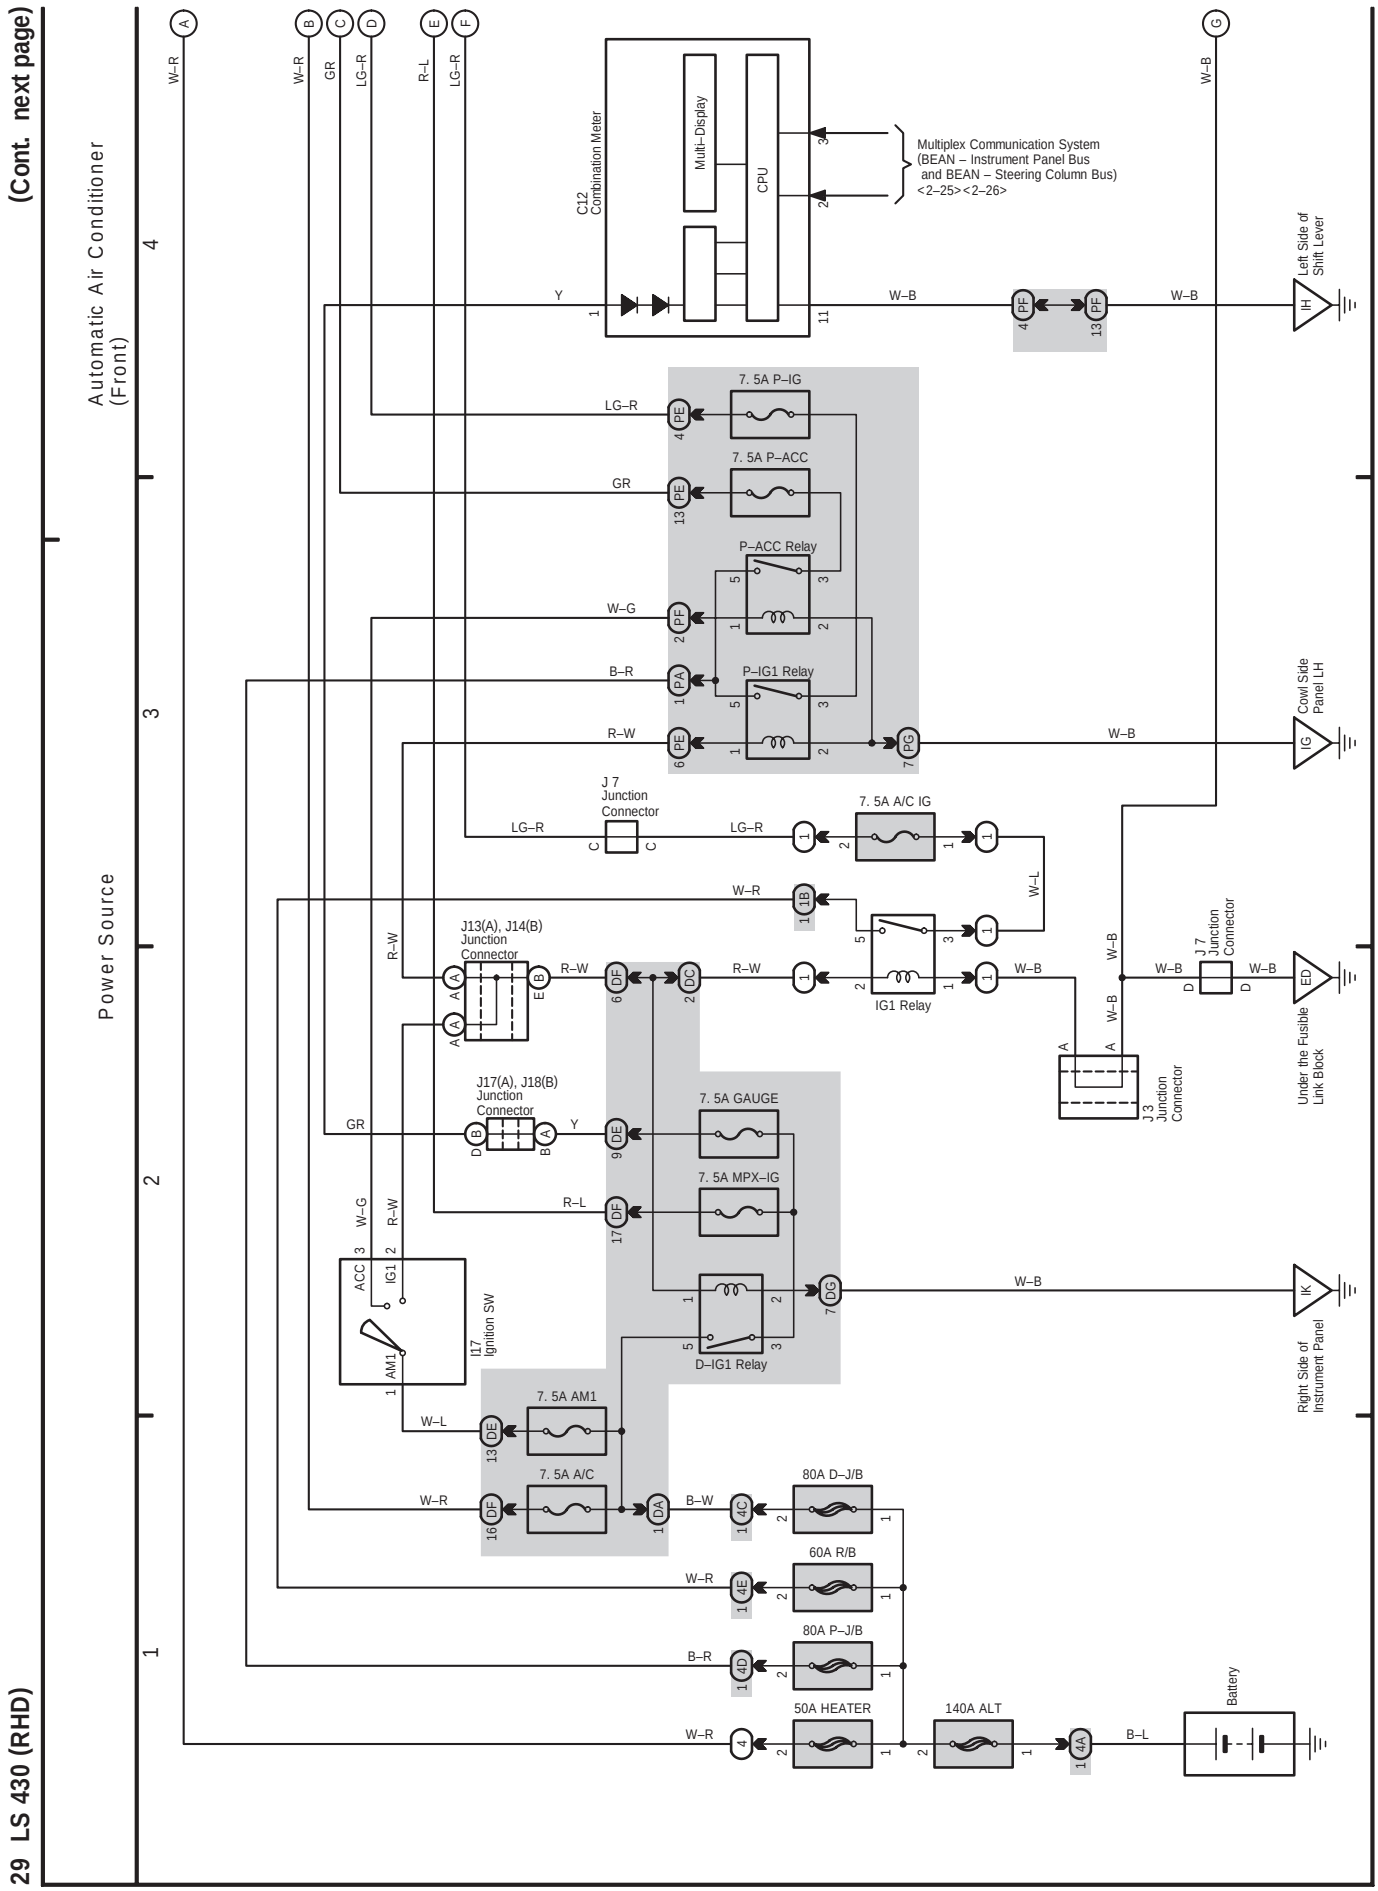
(Cont. next page)
29 LS 430 (RHD)
Automatic Air Conditioner (Front)
Power Source
C12 Combination Meter
Multi–Display
CPU
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus) <2–25><2–26>
Left Side of Shift Lever
7. 5A P–IG
7. 5A P–ACC
P–ACC Relay
P–IG1 Relay
Cowl Side Panel LH
J 7 Junction Connector
7. 5A A/C IG
IG1 Relay
J13(A), J14(B) Junction Connector
J17(A), J18(B) Junction Connector
7. 5A GAUGE
7. 5A MPX–IG
D–IG1 Relay
I17 Ignition SW
7. 5A AM1
7. 5A A/C
80A D–J/B
60A R/B
80A P–J/B
50A HEATER
140A ALT
Battery
J 3 Junction Connector
Under the Fusible Link Block
Right Side of Instrument Panel

29 LS 430 (RHD) (Cont' d)

(Cont. next page)

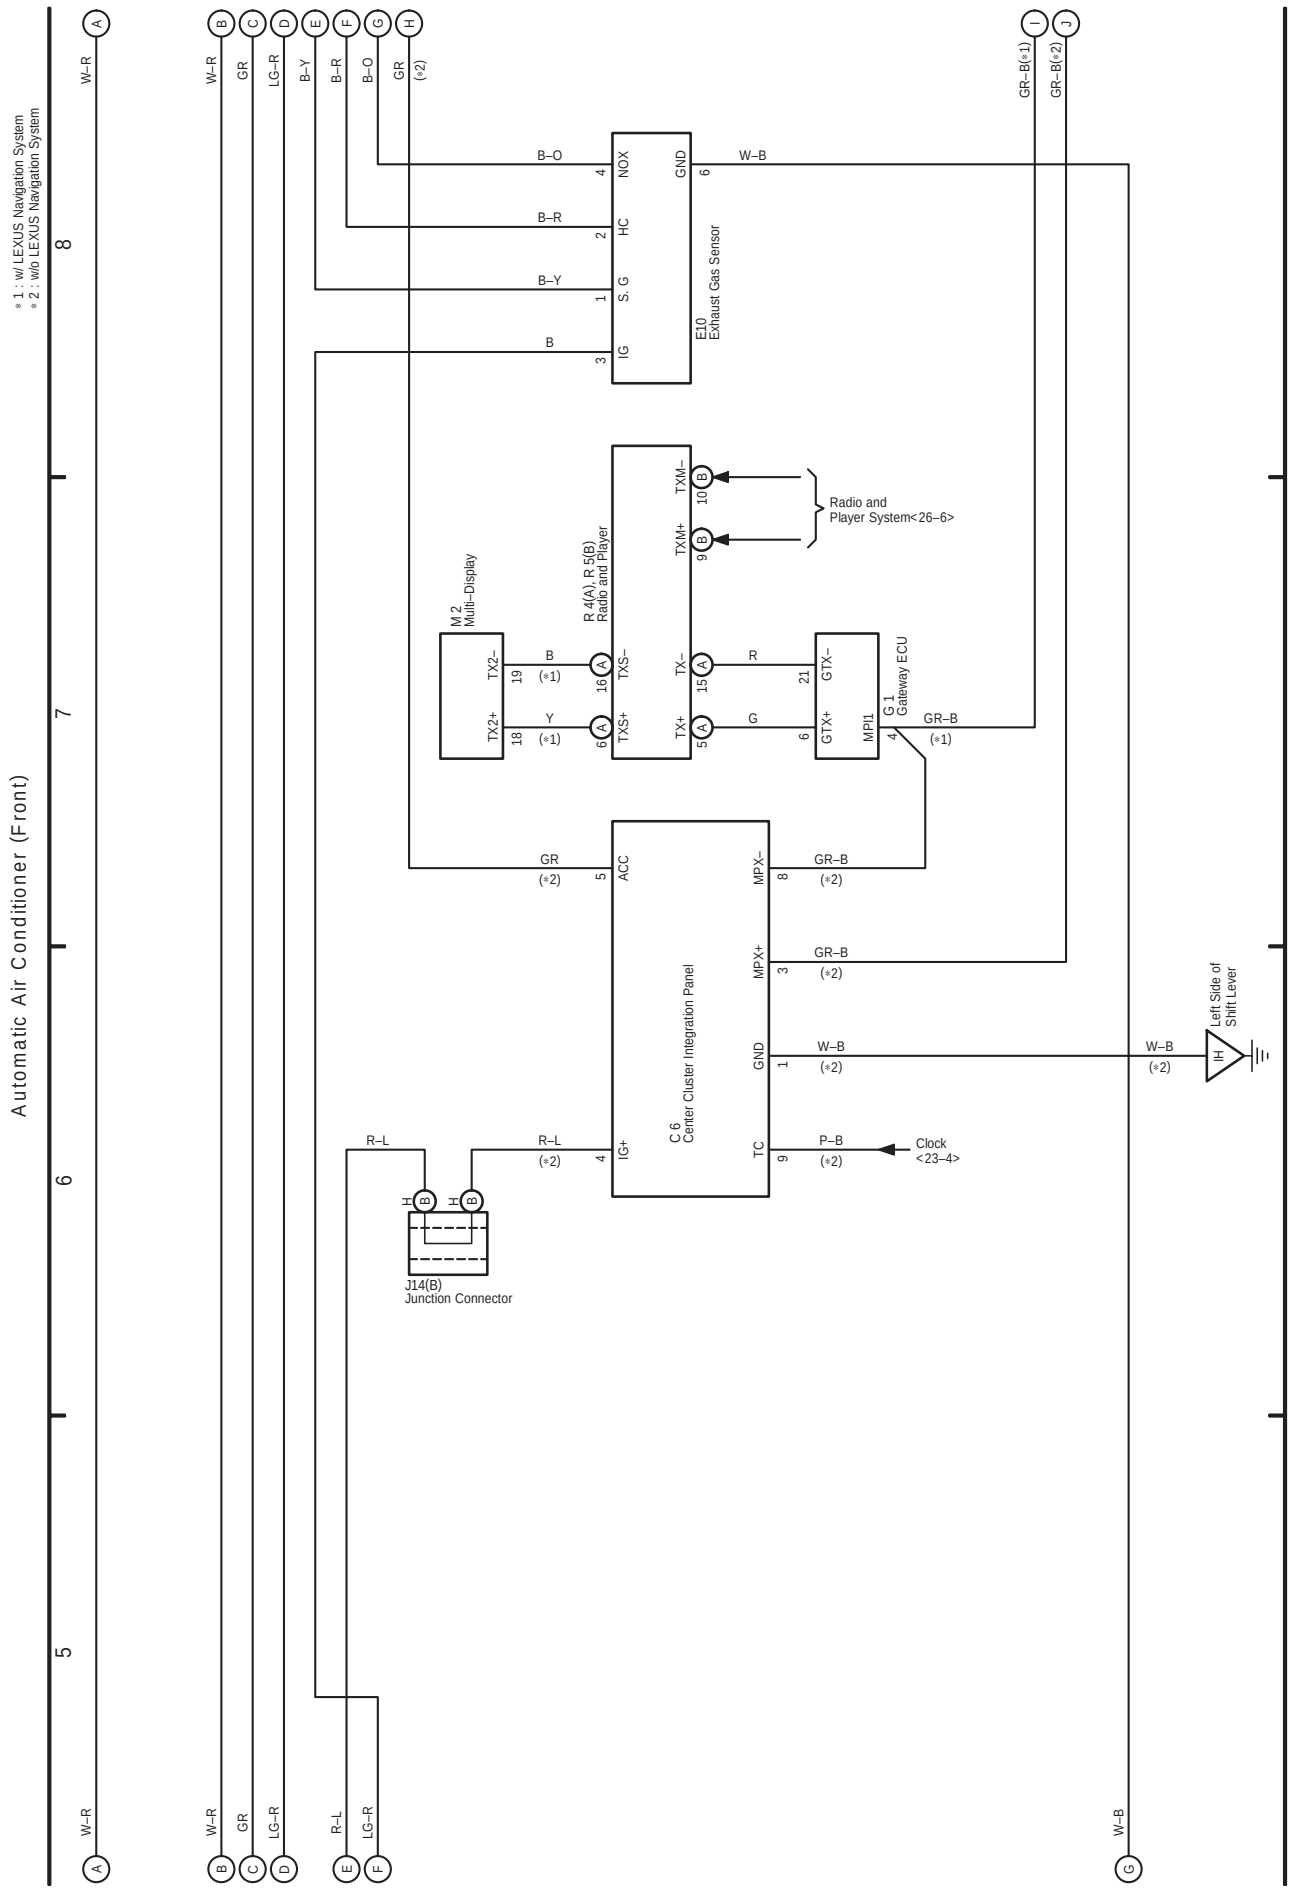

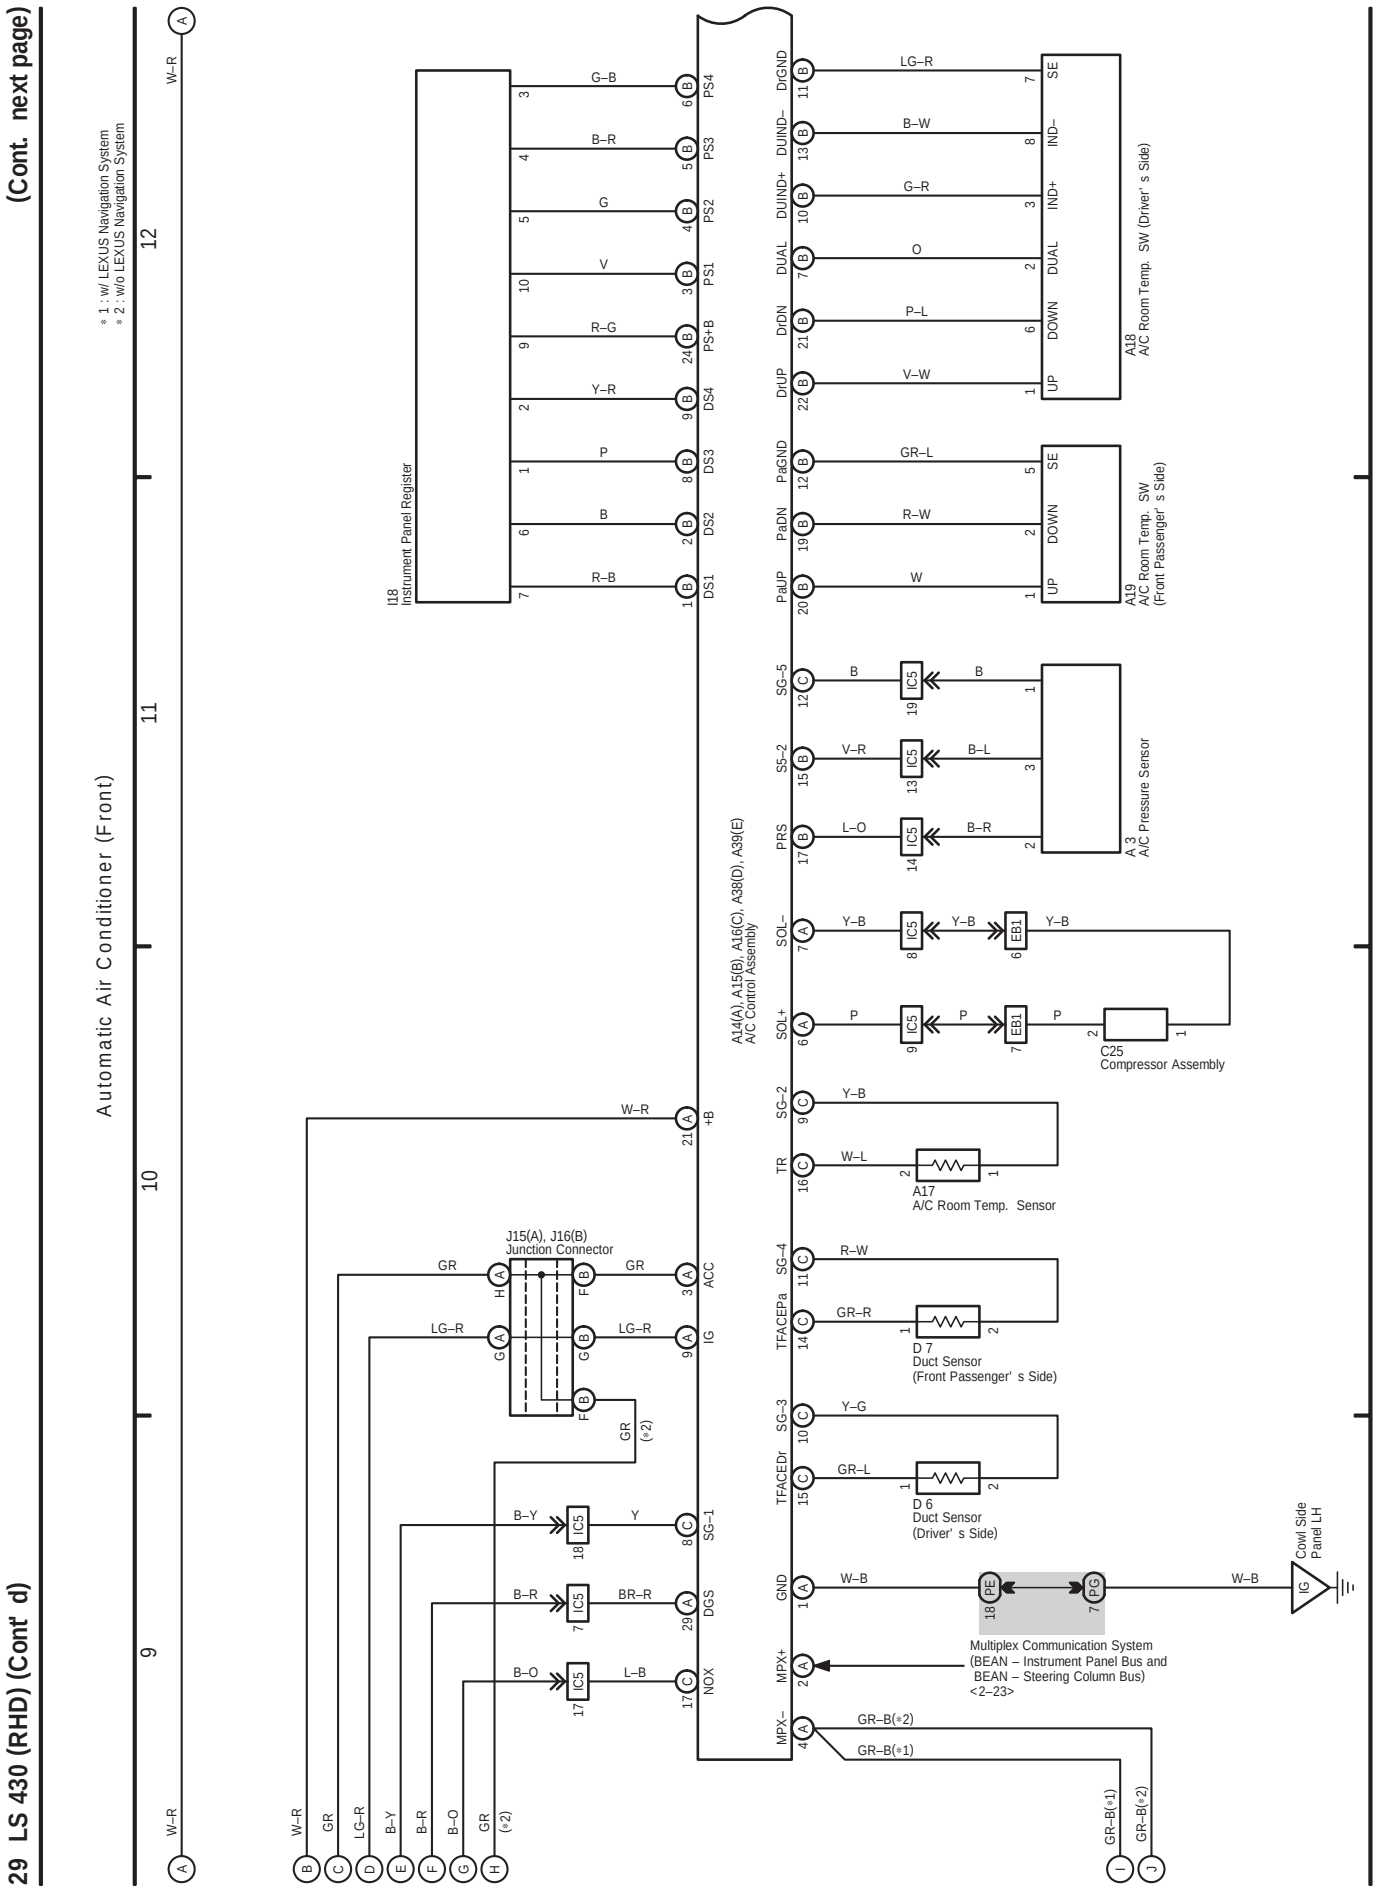
29 LS 430 (RHD) (Cont' d)
(Cont. next page)
Automatic Air Conditioner (Front)
* 1 : w/ LEXUS Navigation System
* 2 : w/o LEXUS Navigation System
I18
Instrument Panel Register
A18
A/C Room Temp. SW (Driver' s Side)
A19
A/C Room Temp. SW
(Front Passenger' s Side)
A 3
A/C Pressure Sensor
A14(A), A15(B), A16(C), A38(D), A39(E)
A/C Control Assembly
C25
Compressor Assembly
A17
A/C Room Temp. Sensor
J15(A), J16(B)
Junction Connector
D 7
Duct Sensor
(Front Passenger' s Side)
D 6
Duct Sensor
(Driver' s Side)
Multiplex Communication System
(BEAN – Instrument Panel Bus and
BEAN – Steering Column Bus)
<2–23>
Cowl Side
Panel LH
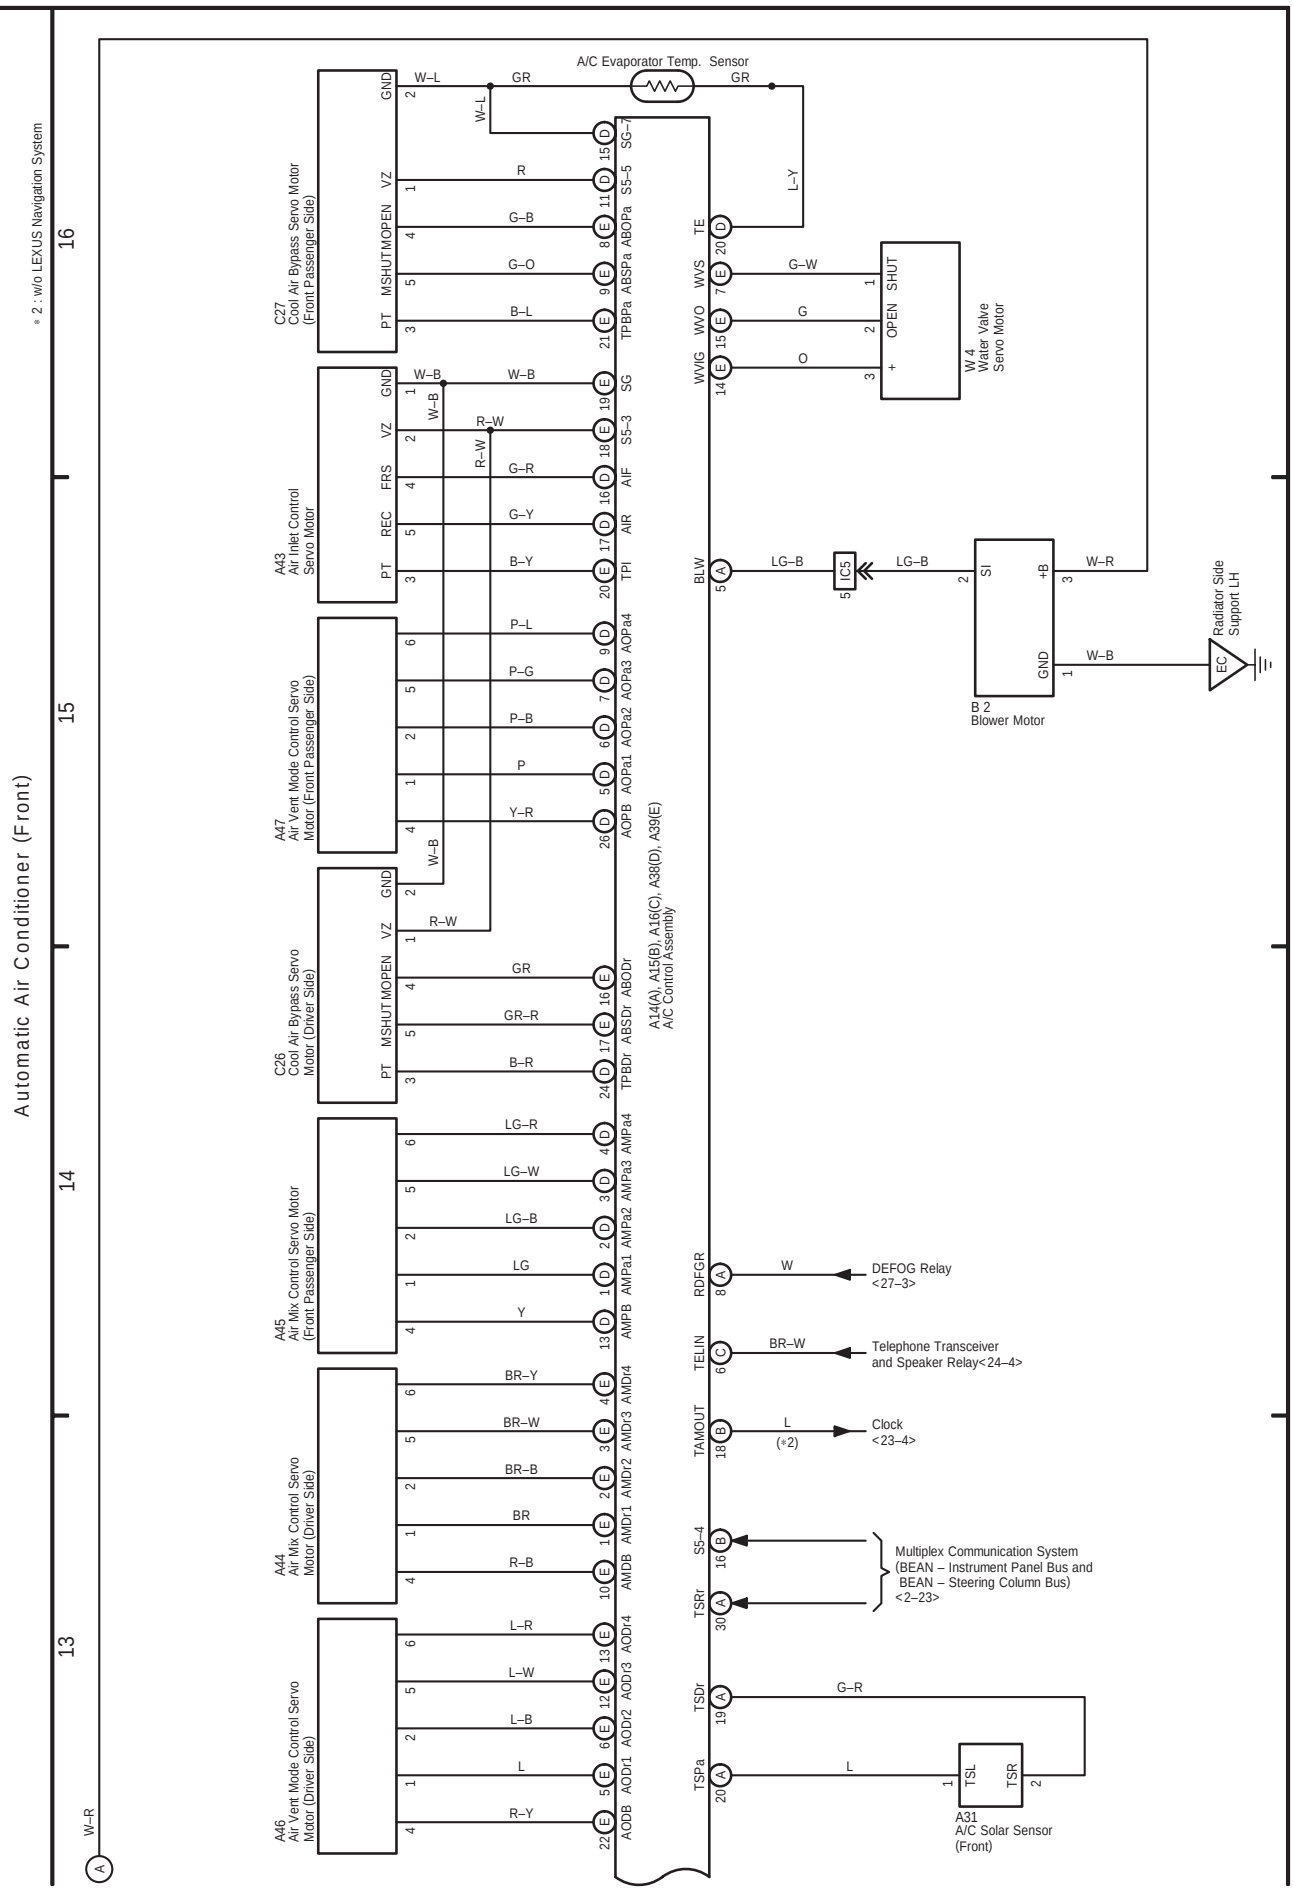
29 LS 430 (RHD) (Cont' d)