Connector Joining Wire Harness and Wire Harness

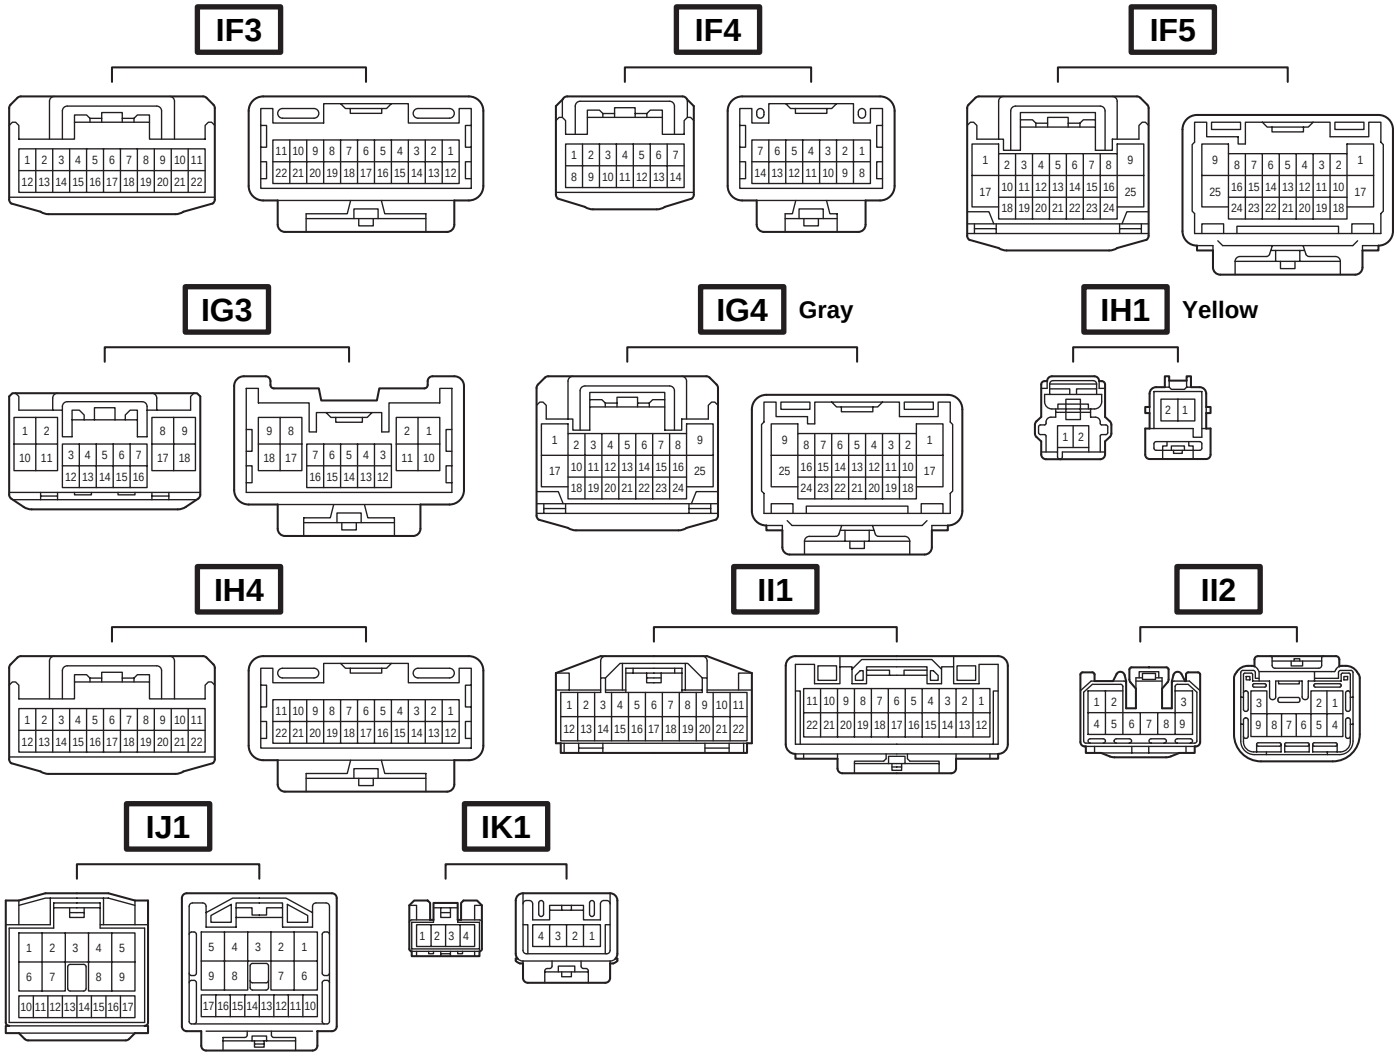

Code	Joining Wire Harness and Wire Harness (Connector Location)
IF3	Instrument Panel Wire and Floor Wire (Right Side of Shift Lever)
IF4	
IF5	
IG3	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IG4	
IH1	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
IH4	
II1	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
II2	
IJ1	Front Door RH Wire and Floor Wire (Right Kick Panel)
IK1	Instrument Panel Wire and Switch Wire (Center of Instrument Panel)