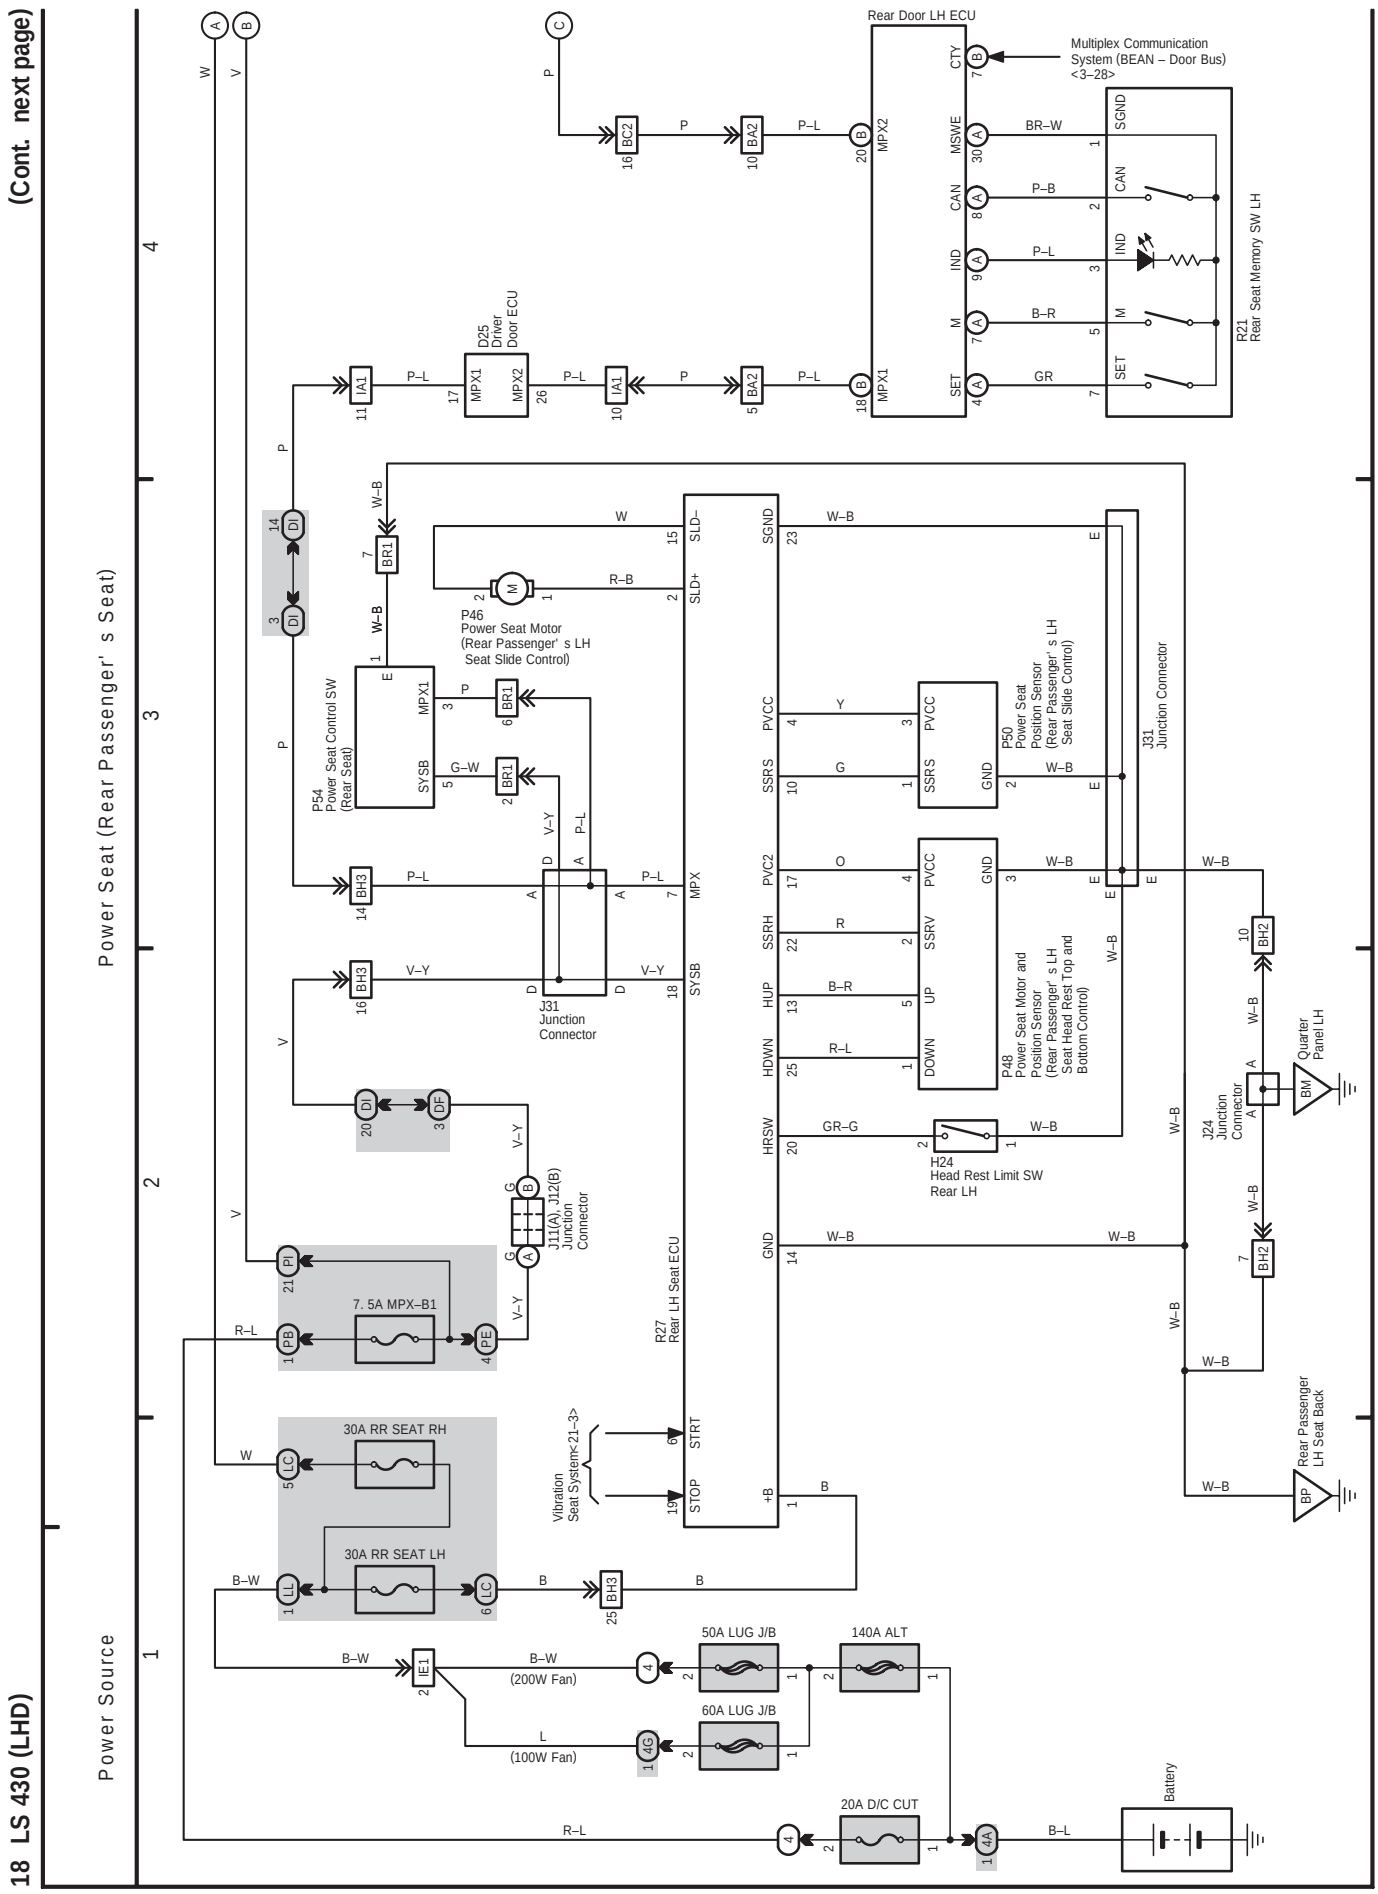
(Cont. next page)
Power Seat (Rear Passenger' s Seat)
Power Source
Rear Door LH ECU
Multiplex Communication System (BEAN – Door Bus) <3–28>
R21 Rear Seat Memory SW LH
D25 Driver Door ECU
P46 Power Seat Motor (Rear Passenger' s LH Seat Slide Control)
P54 Power Seat Control SW (Rear Seat)
P50 Power Seat Position Sensor (Rear Passenger' s LH Seat Slide Control)
P48 Power Seat Motor and Position Sensor (Rear Passenger' s LH Seat Head Rest Top and Bottom Control)
J31 Junction Connector
H24 Head Rest Limit SW Rear LH
J11(A), J12(B) Junction Connector
J24 Junction Connector
Quarter Panel LH
Rear Passenger LH Seat Back
R27 Rear LH Seat ECU
Vibration Seat System <21–3>
7. 5A MPX–B1
30A RR SEAT RH
30A RR SEAT LH
50A LUG J/B
60A LUG J/B
140A ALT
20A D/C CUT
Battery
(200W Fan)
(100W Fan)
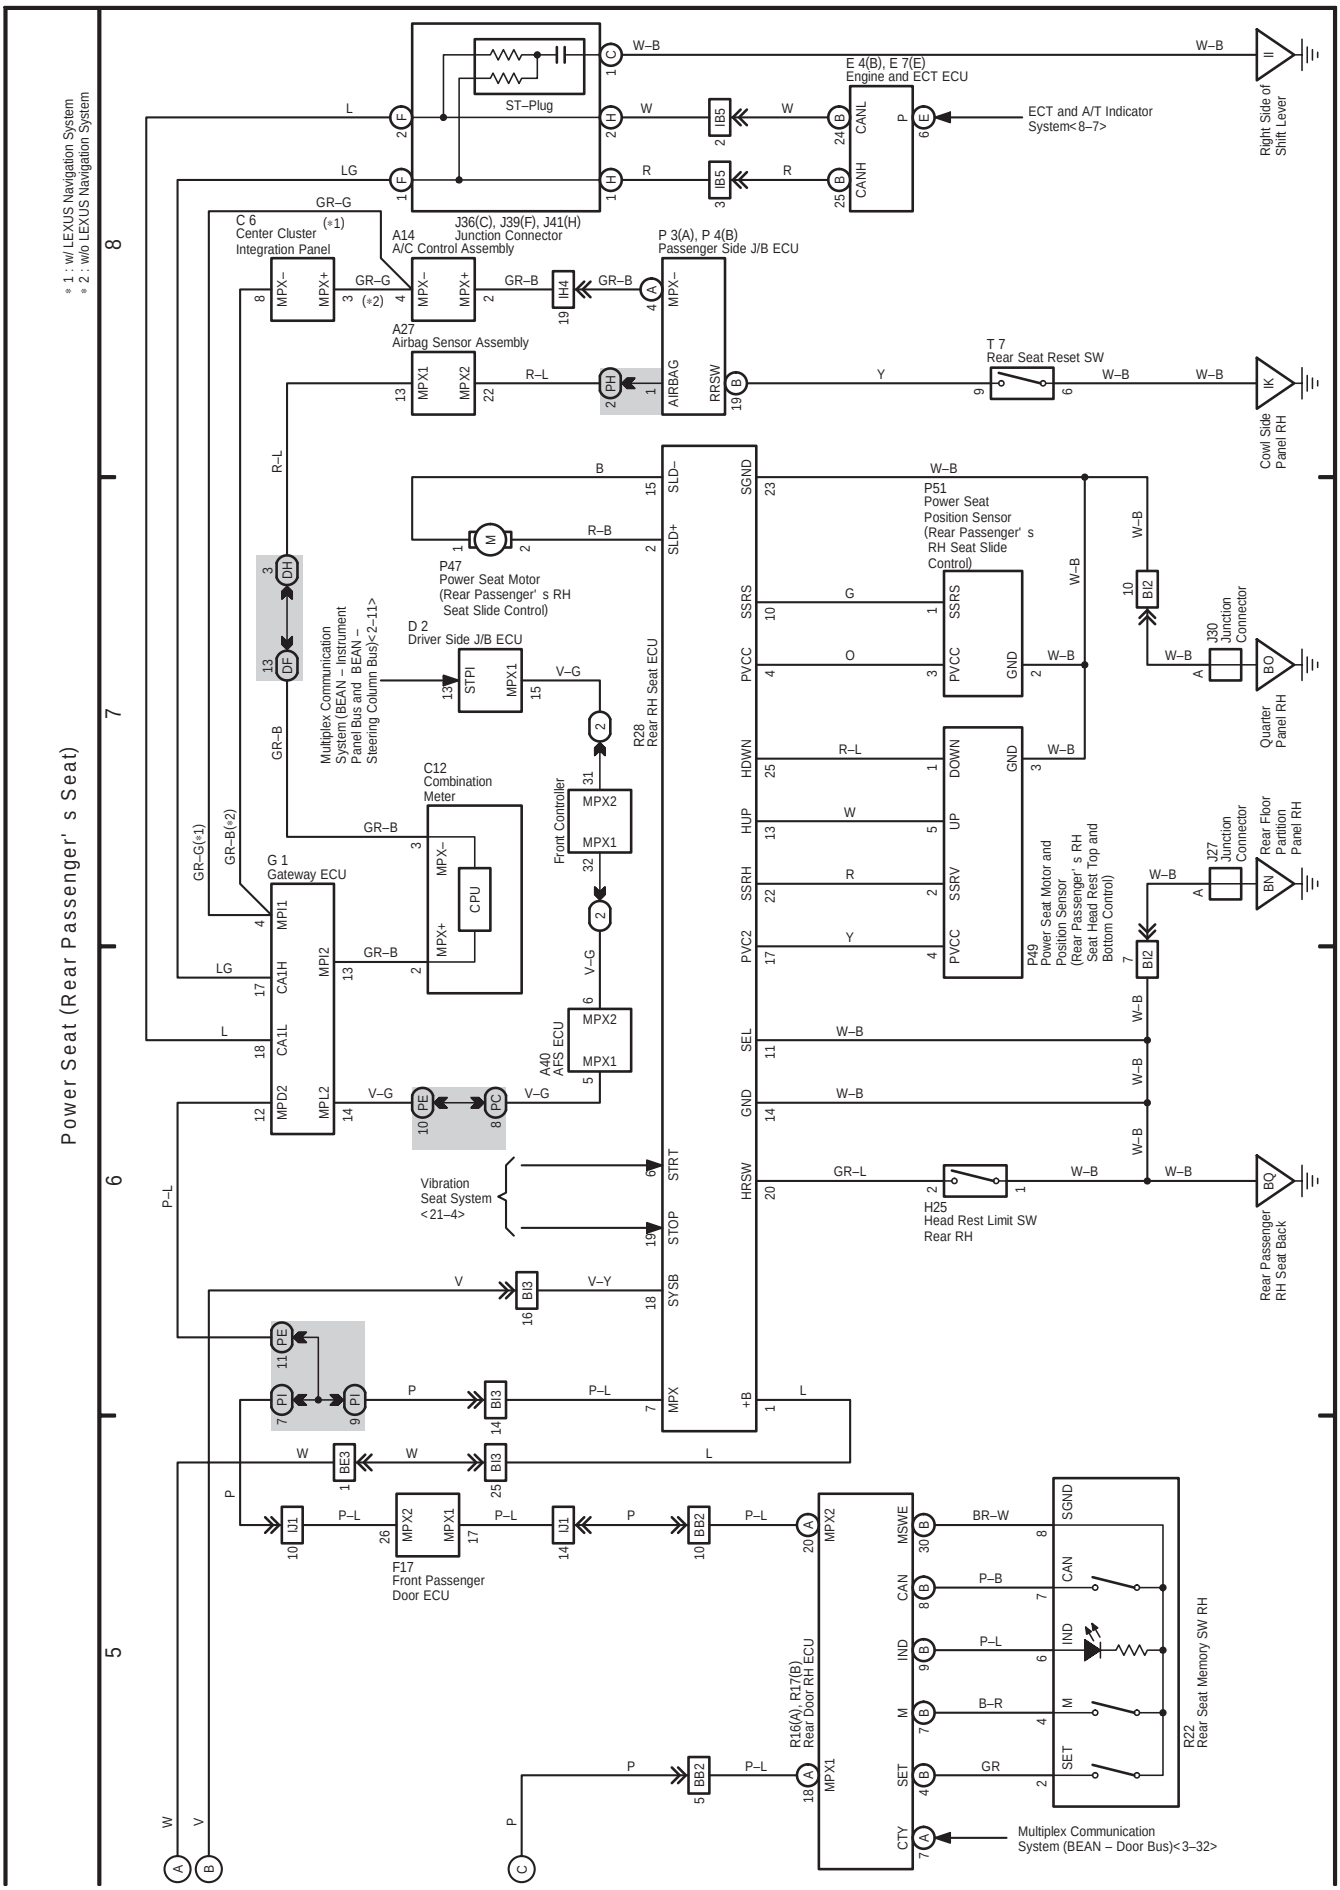
18 LS 430 (LHD) (Cont' d)