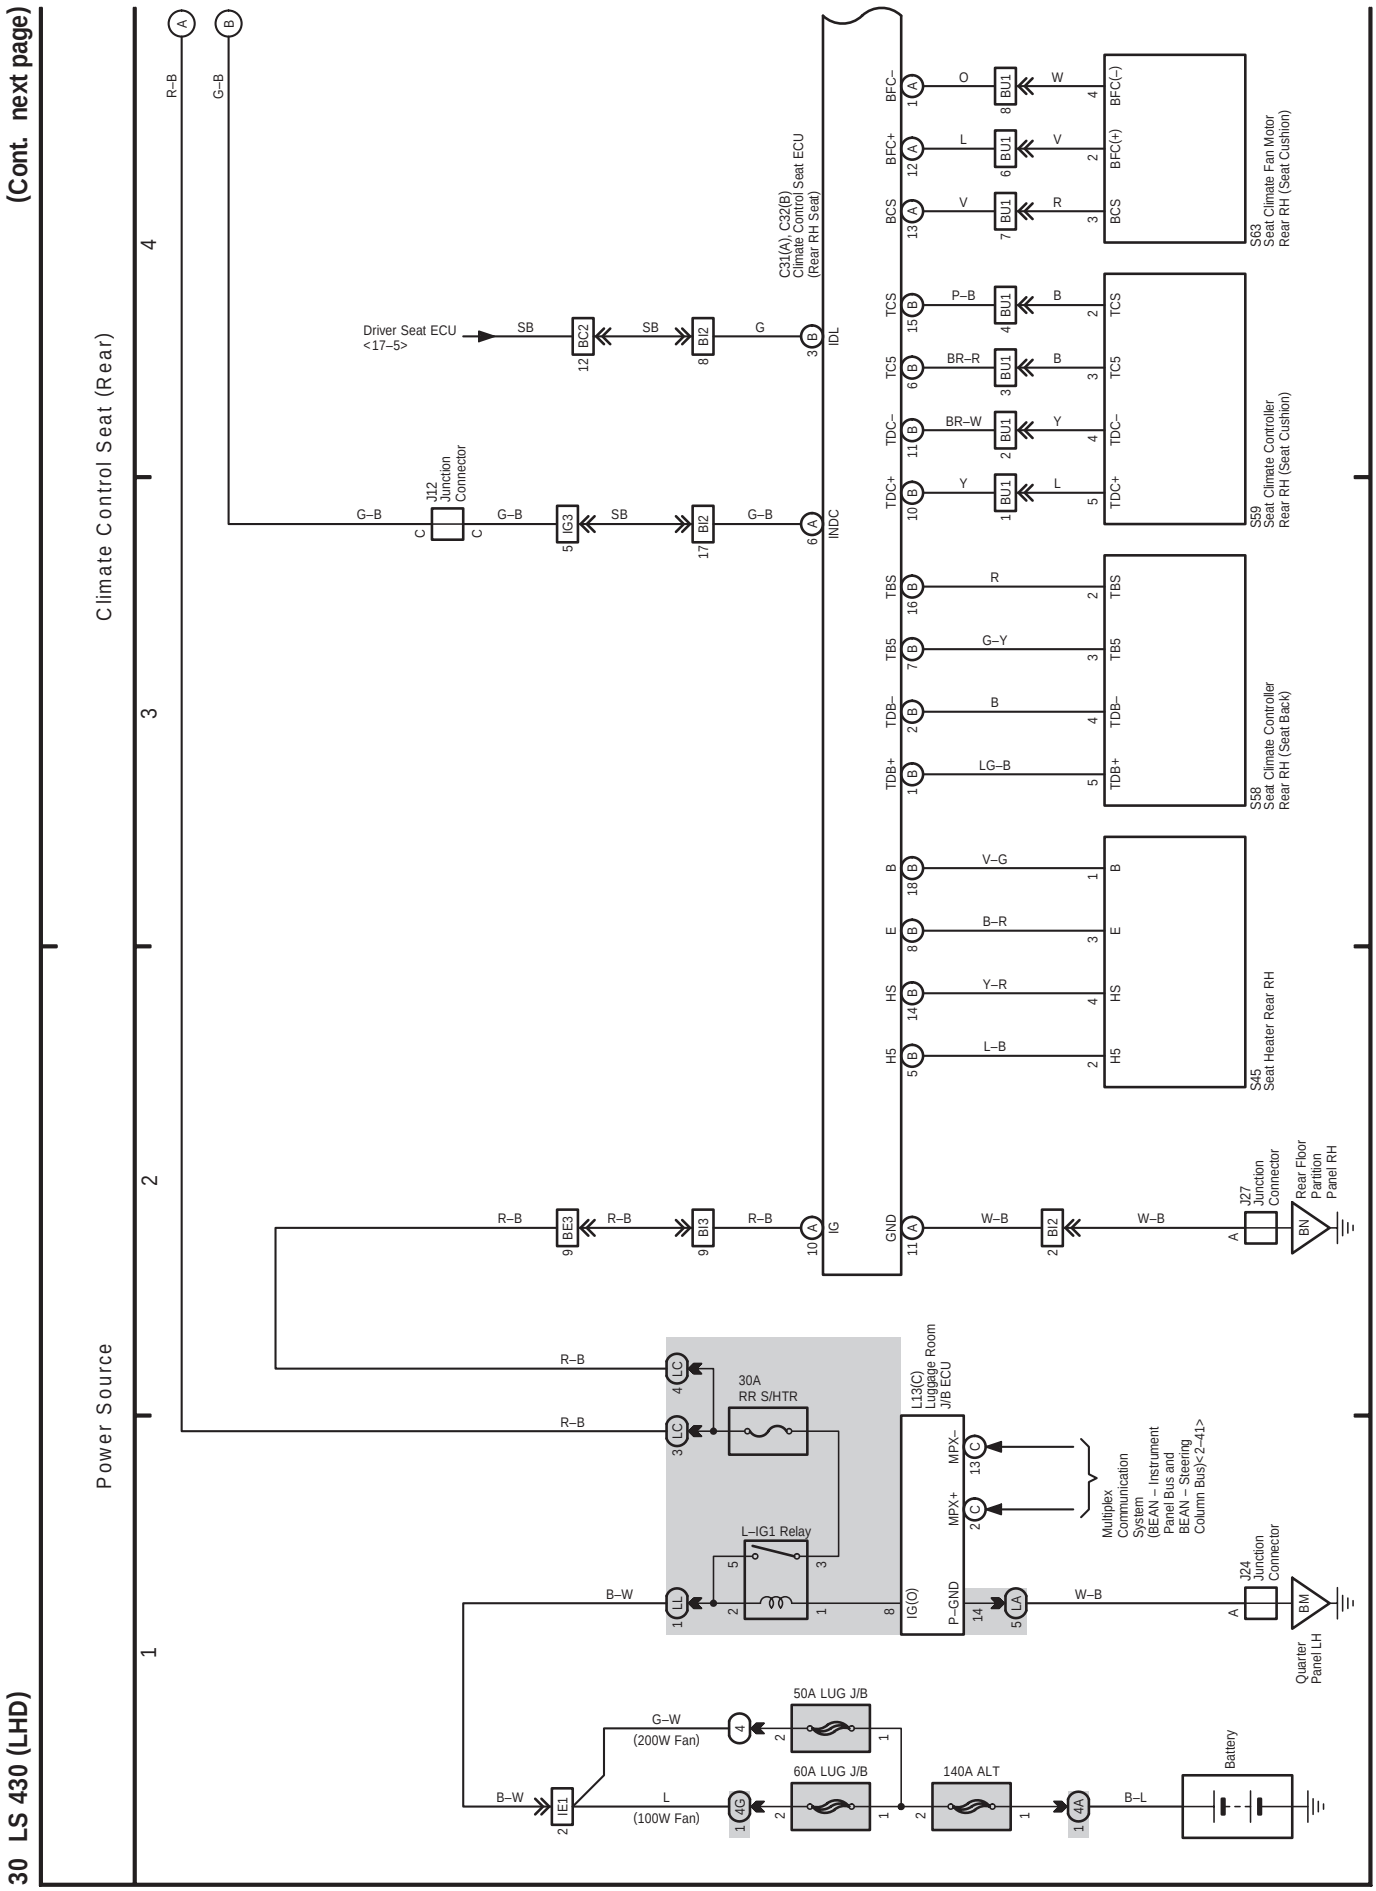
(Cont. next page)
Climate Control Seat (Rear)
Power Source
Driver Seat ECU
<17–5>
J12
Junction
Connector
C31(A), C32(B)
Climate Control Seat ECU
(Rear RH Seat)
S63
Seat Climate Fan Motor
Rear RH (Seat Cushion)
S59
Seat Climate Controller
Rear RH (Seat Cushion)
S58
Seat Climate Controller
Rear RH (Seat Back)
S45
Seat Heater Rear RH
J27
Junction
Connector
Rear Floor
Partition
Panel RH
30A
RR S/HTR
L–IG1 Relay
L13(C)
Luggage Room
J/B ECU
Multiplex
Communication
System
(BEAN – Instrument
Panel Bus and
BEAN – Steering
Column Bus)<2–41>
J24
Junction
Connector
Quarter
Panel LH
50A LUG J/B
60A LUG J/B
140A ALT
Battery
G–W
(200W Fan)
L
(100W Fan)
30 LS 430 (LHD)
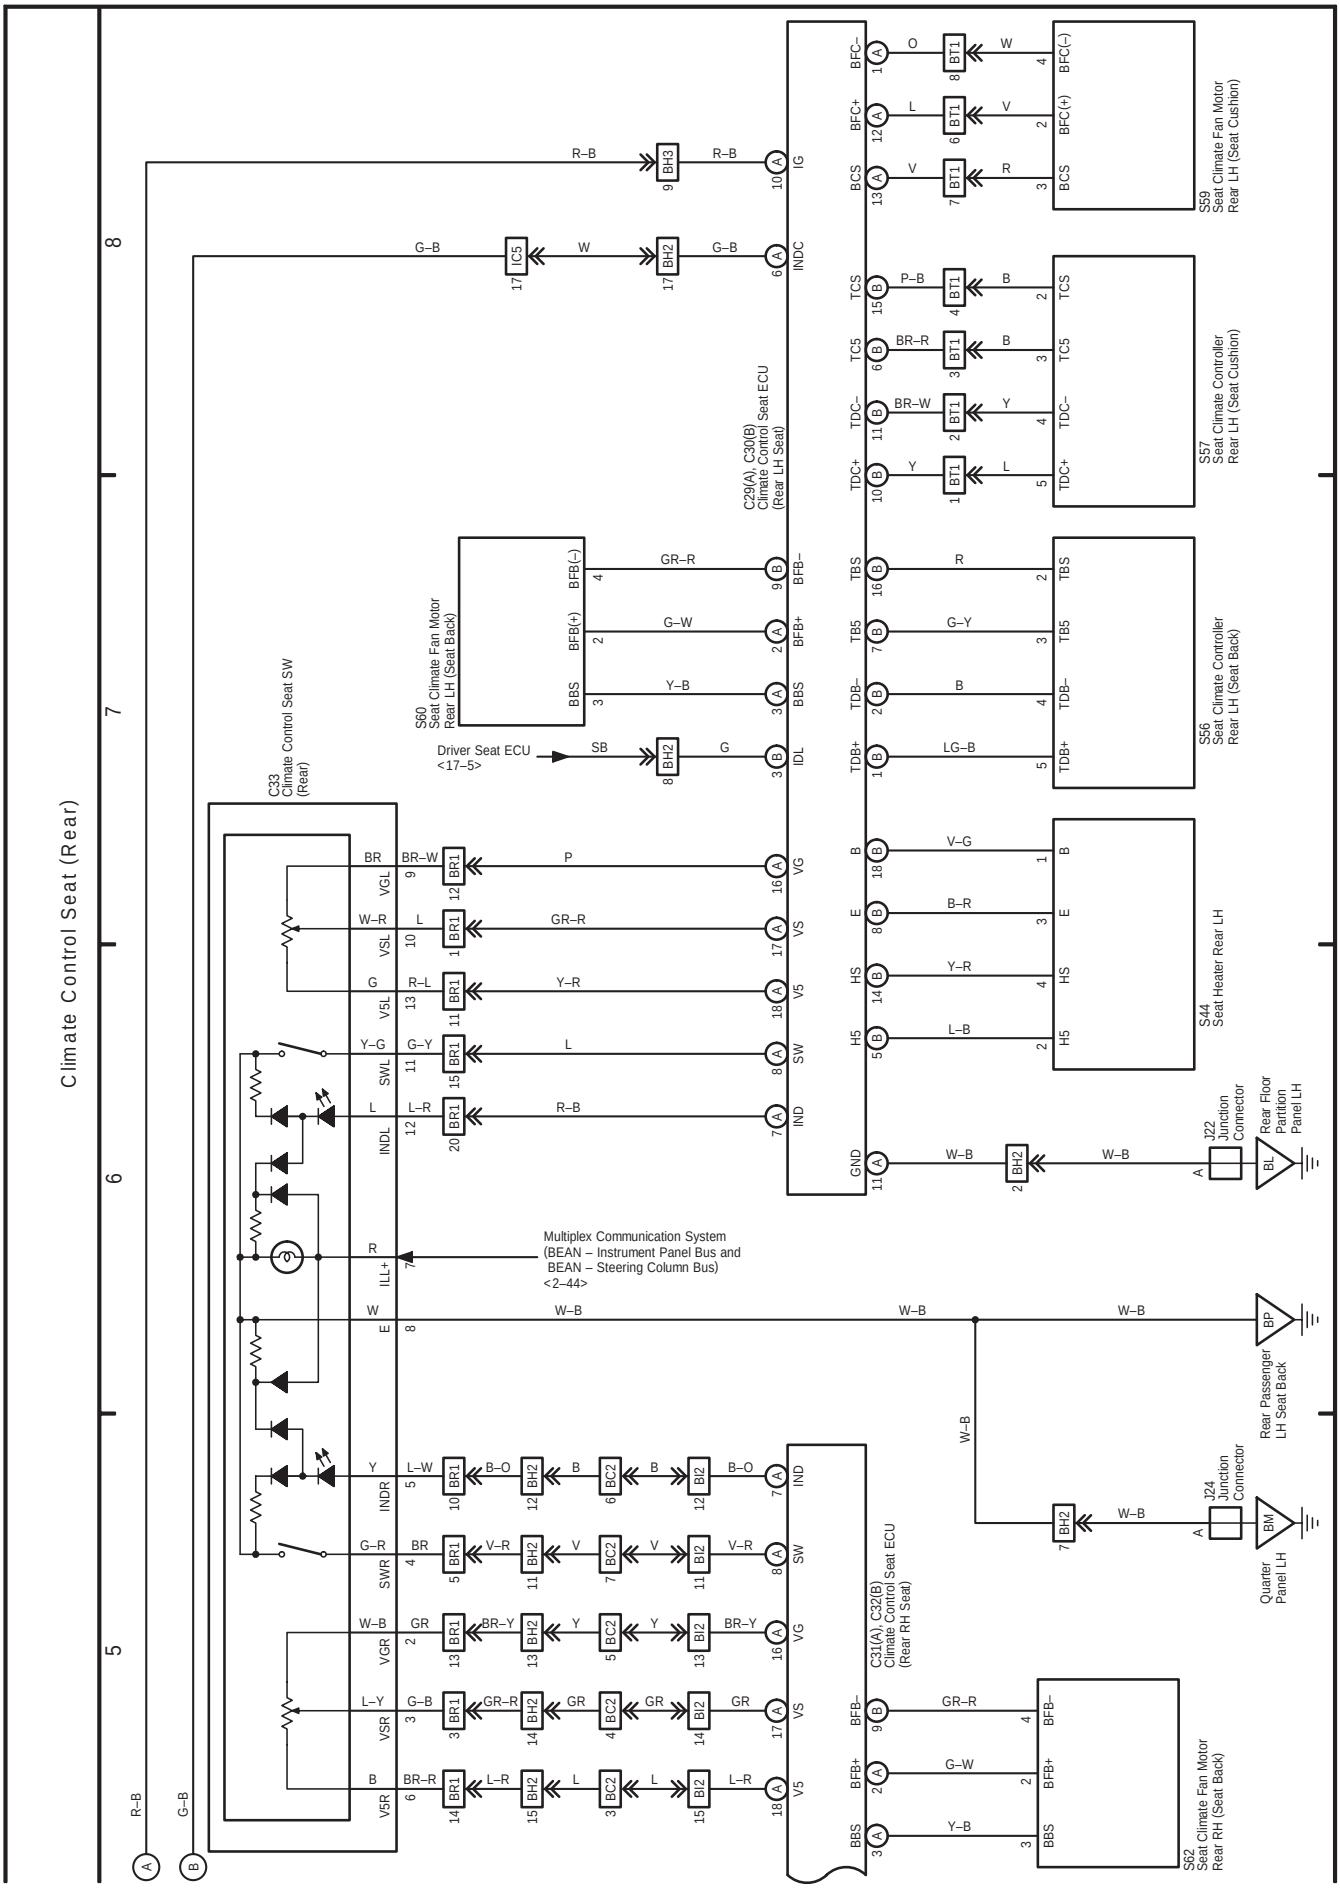
30 LS 430 (LHD) (Cont' d)