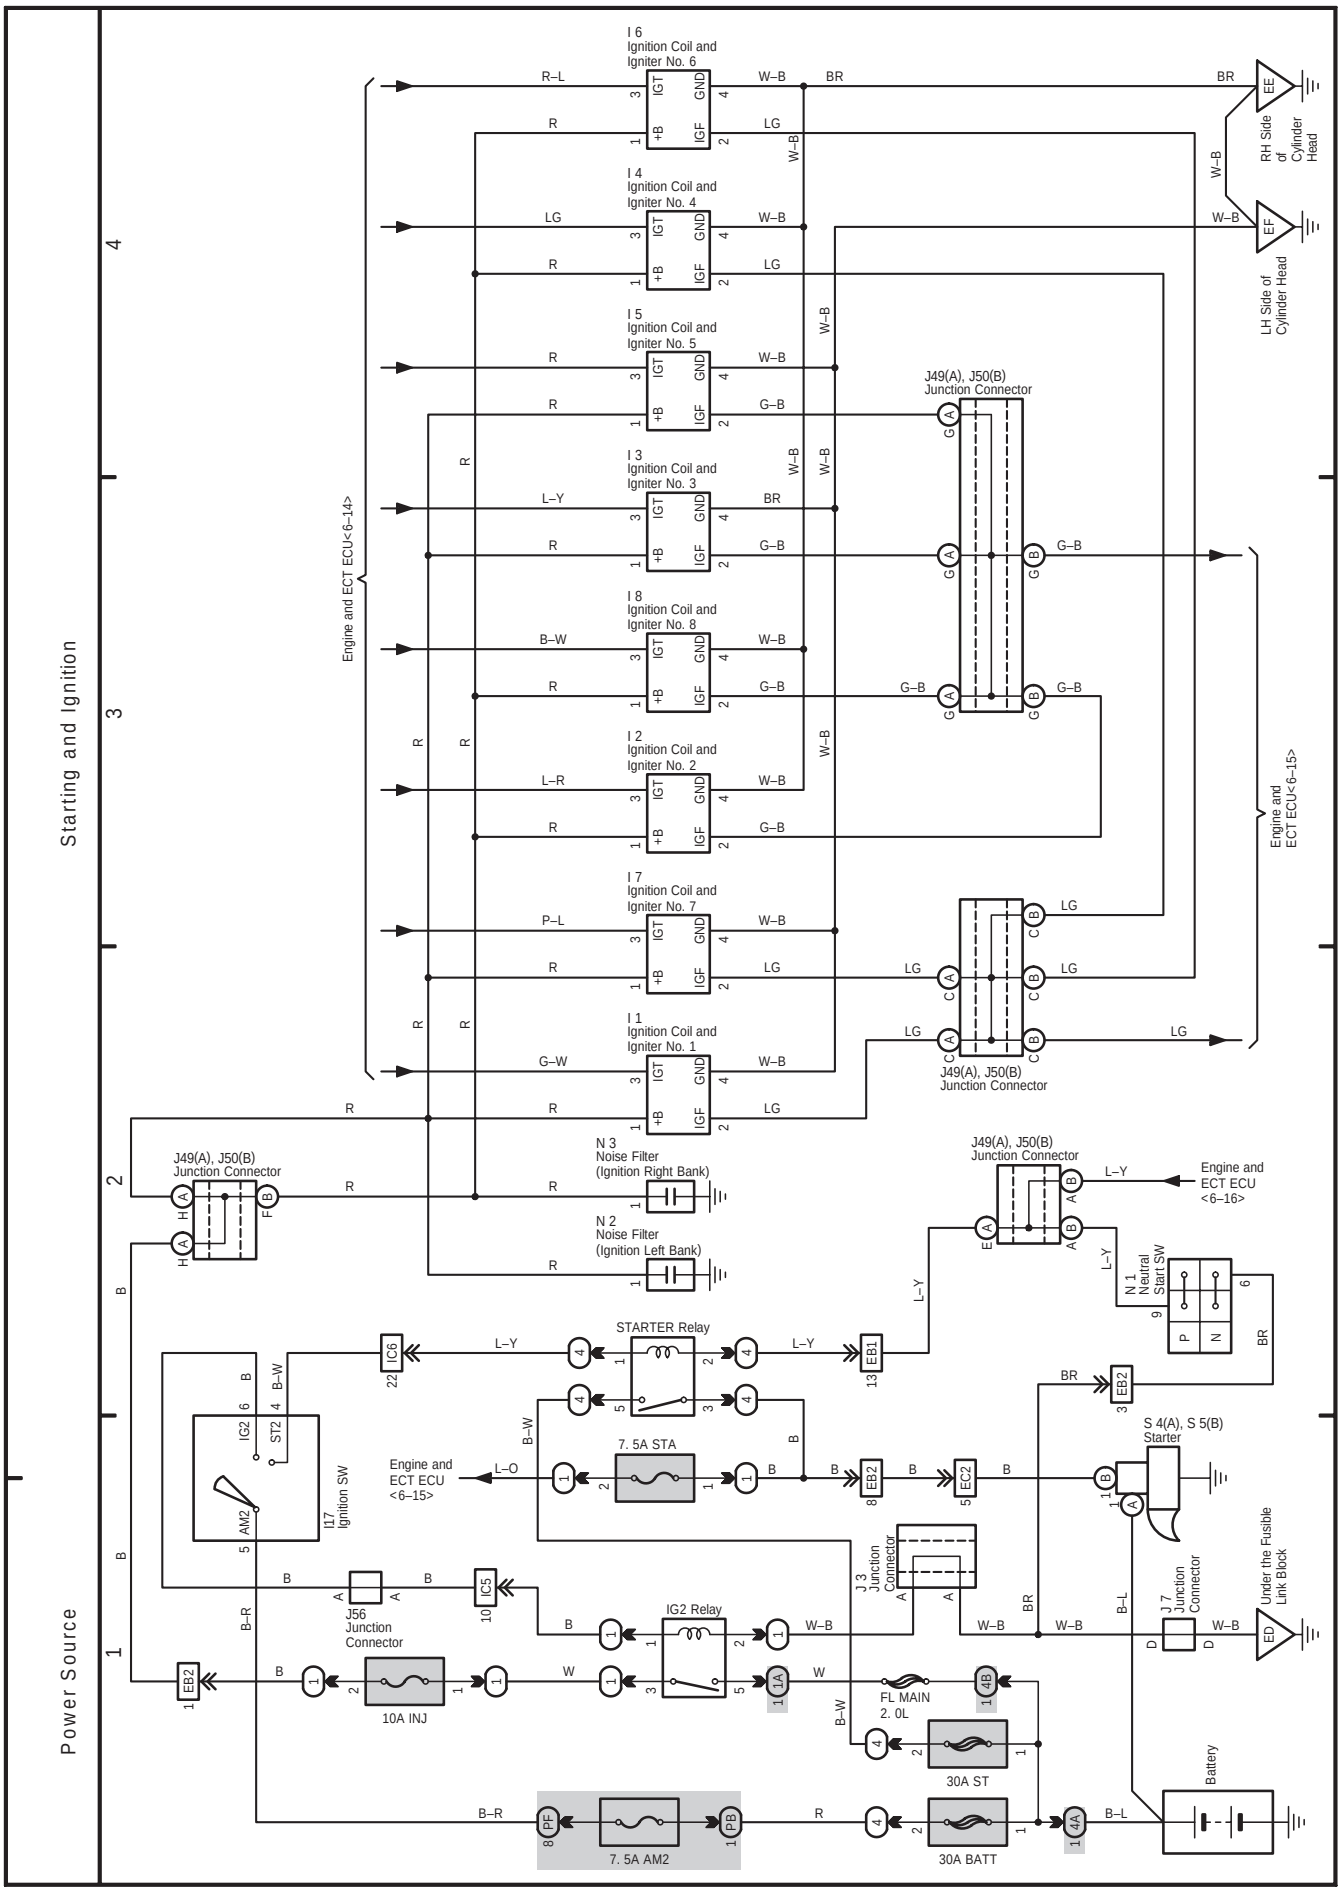
4 LS 430 (RHD)
Power Source
Starting and Ignition
I 6 Ignition Coil and Igniter No. 6
I 4 Ignition Coil and Igniter No. 4
I 5 Ignition Coil and Igniter No. 5
I 3 Ignition Coil and Igniter No. 3
I 8 Ignition Coil and Igniter No. 8
I 2 Ignition Coil and Igniter No. 2
I 7 Ignition Coil and Igniter No. 7
I 1 Ignition Coil and Igniter No. 1
IGT
GND
+B
IGF
RH Side of Cylinder Head
LH Side of Cylinder Head
J49(A), J50(B) Junction Connector
Engine and ECT ECU<6–14>
Engine and ECT ECU<6–15>
Engine and ECT ECU<6–16>
N 3 Noise Filter (Ignition Right Bank)
N 2 Noise Filter (Ignition Left Bank)
N 1 Neutral Start SW
STARTER Relay
7. 5A STA
S 4(A), S 5(B) Starter
I17 Ignition SW
IG2
ST2
AM2
J56 Junction Connector
10A INJ
IG2 Relay
J 3 Junction Connector
J 7 Junction Connector
Under the Fusible Link Block
FL MAIN 2. 0L
30A ST
30A BATT
7. 5A AM2
Battery