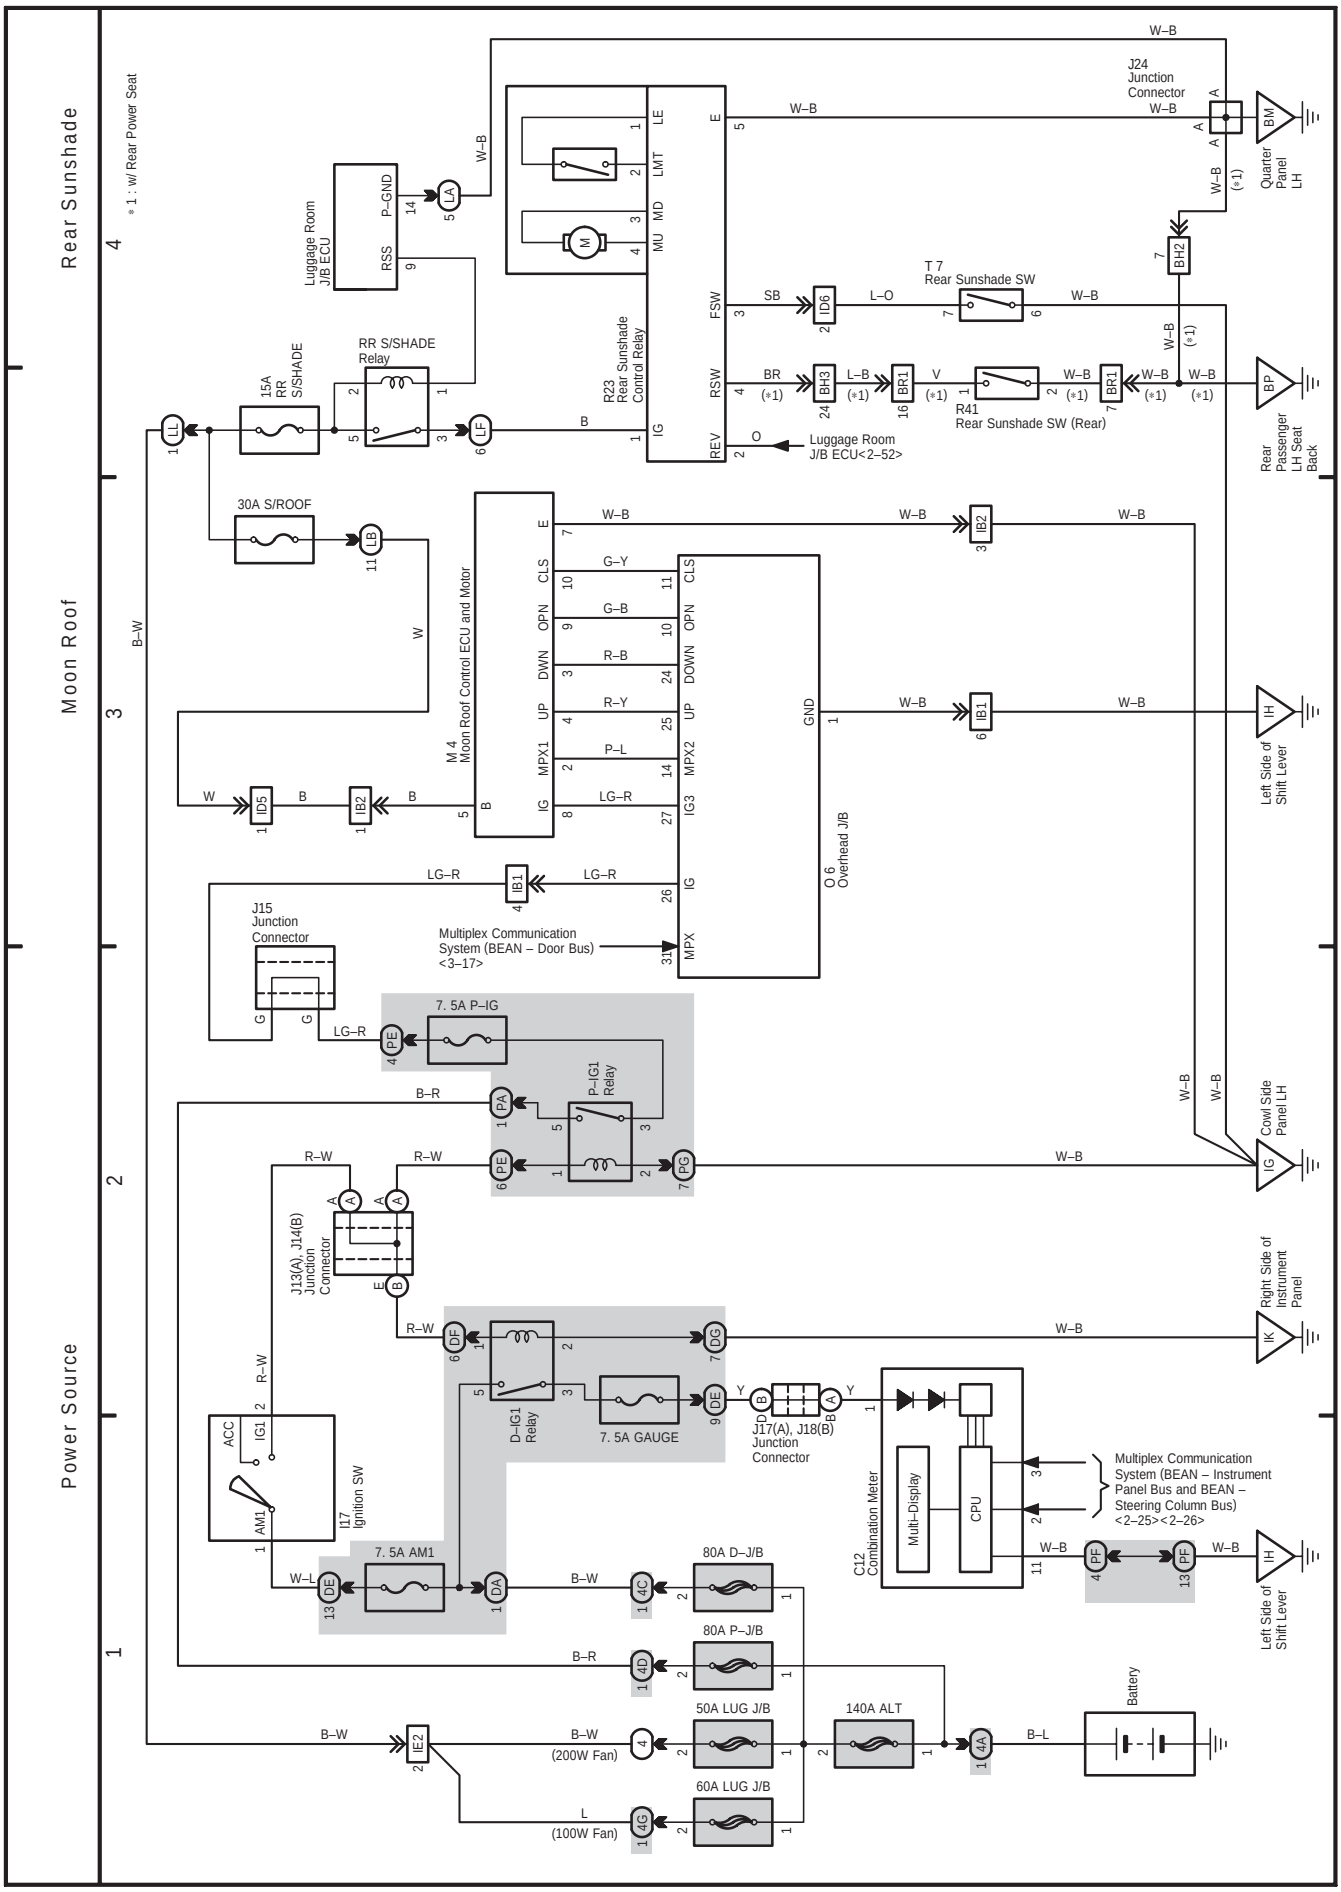
Rear Sunshade
Moon Roof
Power Source
* 1 : w/ Rear Power Seat
Luggage Room J/B ECU
RR S/SHADE Relay
15A RR S/SHADE
R23 Rear Sunshade Control Relay
J24 Junction Connector
Quarter Panel LH
T 7 Rear Sunshade SW
R41 Rear Sunshade SW (Rear)
Rear Passenger LH Seat Back
Luggage Room J/B ECU<2–52>
30A S/ROOF
M 4 Moon Roof Control ECU and Motor
O 6 Overhead J/B
Left Side of Shift Lever
J15 Junction Connector
Multiplex Communication System (BEAN – Door Bus) <3–17>
7. 5A P–IG
P–IG1 Relay
Cowl Side Panel LH
J13(A), J14(B) Junction Connector
Right Side of Instrument Panel
D–IG1 Relay
7. 5A GAUGE
J17(A), J18(B) Junction Connector
C12 Combination Meter
Multi–Display
CPU
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus) <2–25><2–26>
I17 Ignition SW
7. 5A AM1
80A D–J/B
80A P–J/B
50A LUG J/B
60A LUG J/B
140A ALT
Battery
(200W Fan)
(100W Fan)

16 LS 430 (RHD)