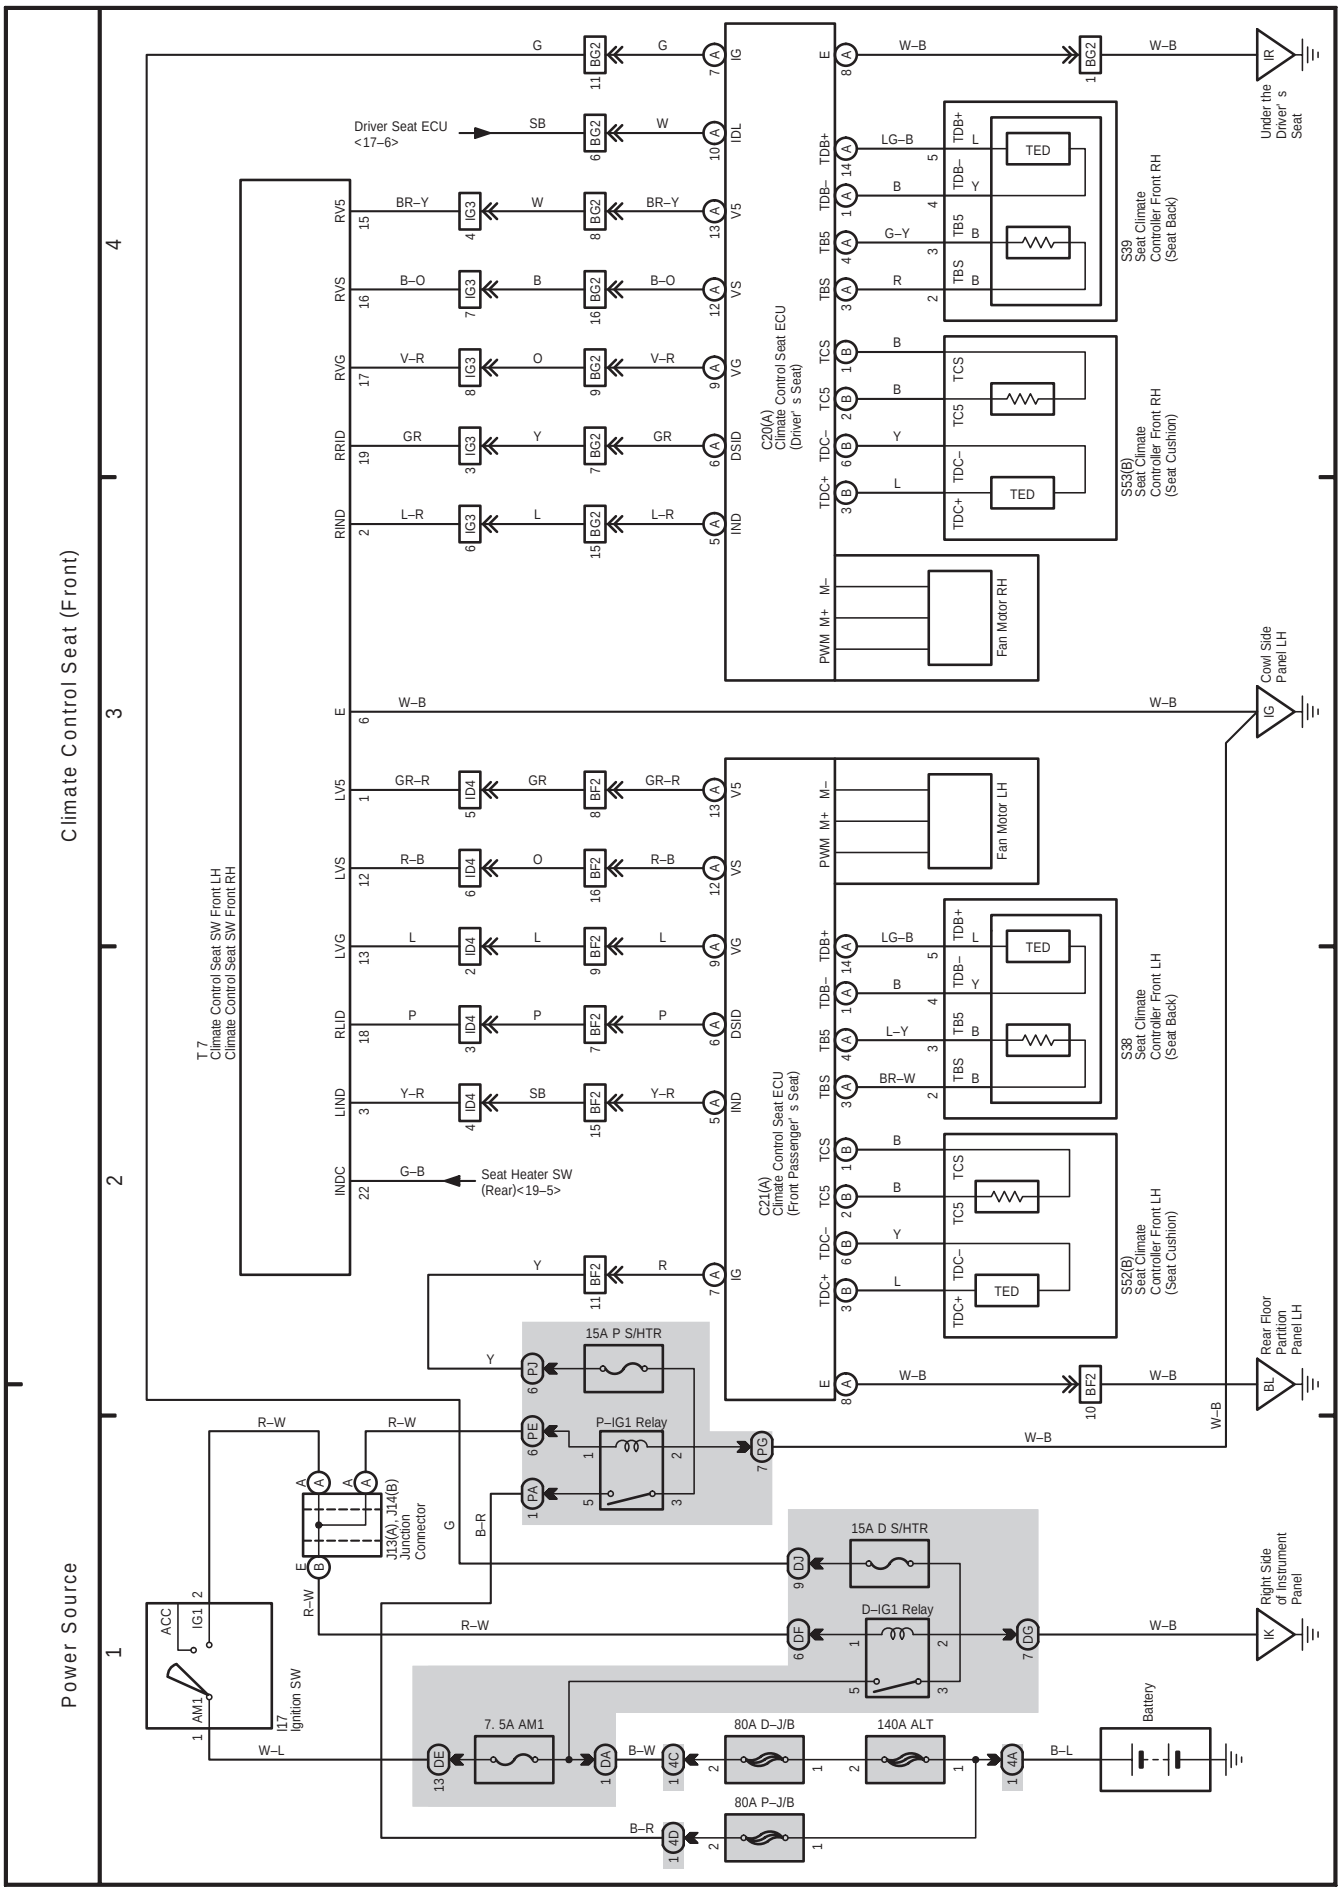
Climate Control Seat (Front)
Power Source
Driver Seat ECU <17–6>
Seat Heater SW (Rear)<19–5>
T 7 Climate Control Seat SW Front LH Climate Control Seat SW Front RH
C20(A) Climate Control Seat ECU (Driver' s Seat)
C21(A) Climate Control Seat ECU (Front Passenger' s Seat)
S39 Seat Climate Controller Front RH (Seat Back)
S53(B) Seat Climate Controller Front RH (Seat Cushion)
S38 Seat Climate Controller Front LH (Seat Back)
S52(B) Seat Climate Controller Front LH (Seat Cushion)
Fan Motor RH
Fan Motor LH
Under the Driver' s Seat
Cowl Side Panel LH
Rear Floor Partition Panel LH
Right Side of Instrument Panel
15A P S/HTR
P–IG1 Relay
15A D S/HTR
D–IG1 Relay
J13(A), J14(B) Junction Connector
I17 Ignition SW
7. 5A AM1
80A D–J/B
80A P–J/B
140A ALT
Battery