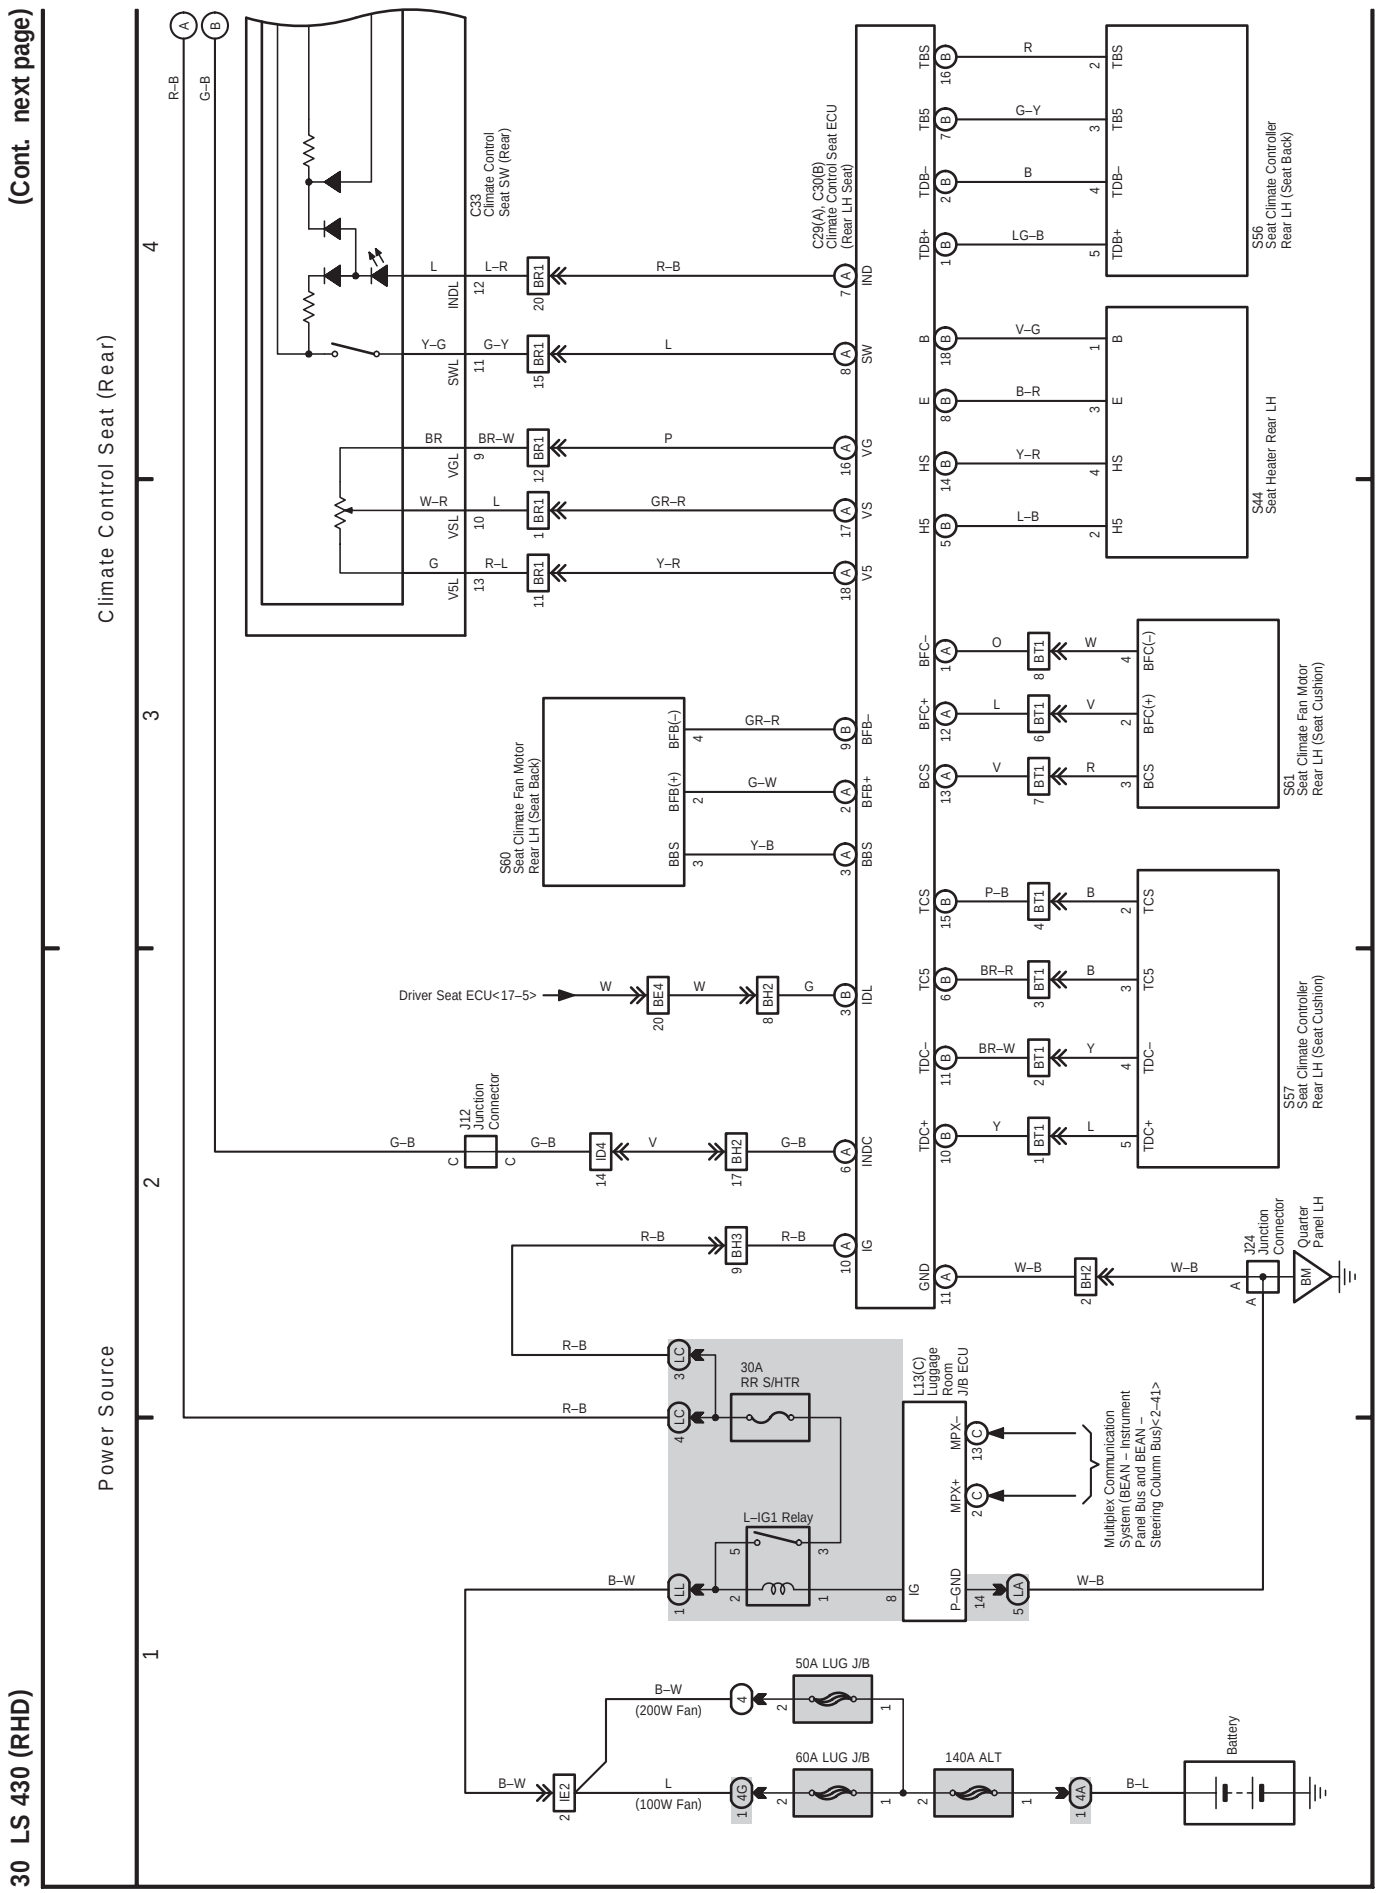
30 LS 430 (RHD)
(Cont. next page)
Climate Control Seat (Rear)
Power Source
C33 Climate Control Seat SW (Rear)
C29(A), C30(B) Climate Control Seat ECU (Rear LH Seat)
S56 Seat Climate Controller Rear LH (Seat Back)
S44 Seat Heater Rear LH
S61 Seat Climate Fan Motor Rear LH (Seat Cushion)
S57 Seat Climate Controller Rear LH (Seat Cushion)
S60 Seat Climate Fan Motor Rear LH (Seat Back)
Driver Seat ECU<17–5>
J12 Junction Connector
J24 Junction Connector
Quarter Panel LH
30A RR S/HTR
L–IG1 Relay
L13(C) Luggage Room J/B ECU
Multiplex Communication System (BEAN – Instrument Panel Bus and BEAN – Steering Column Bus)<2–41>
50A LUG J/B
60A LUG J/B
140A ALT
Battery
(200W Fan)
(100W Fan)
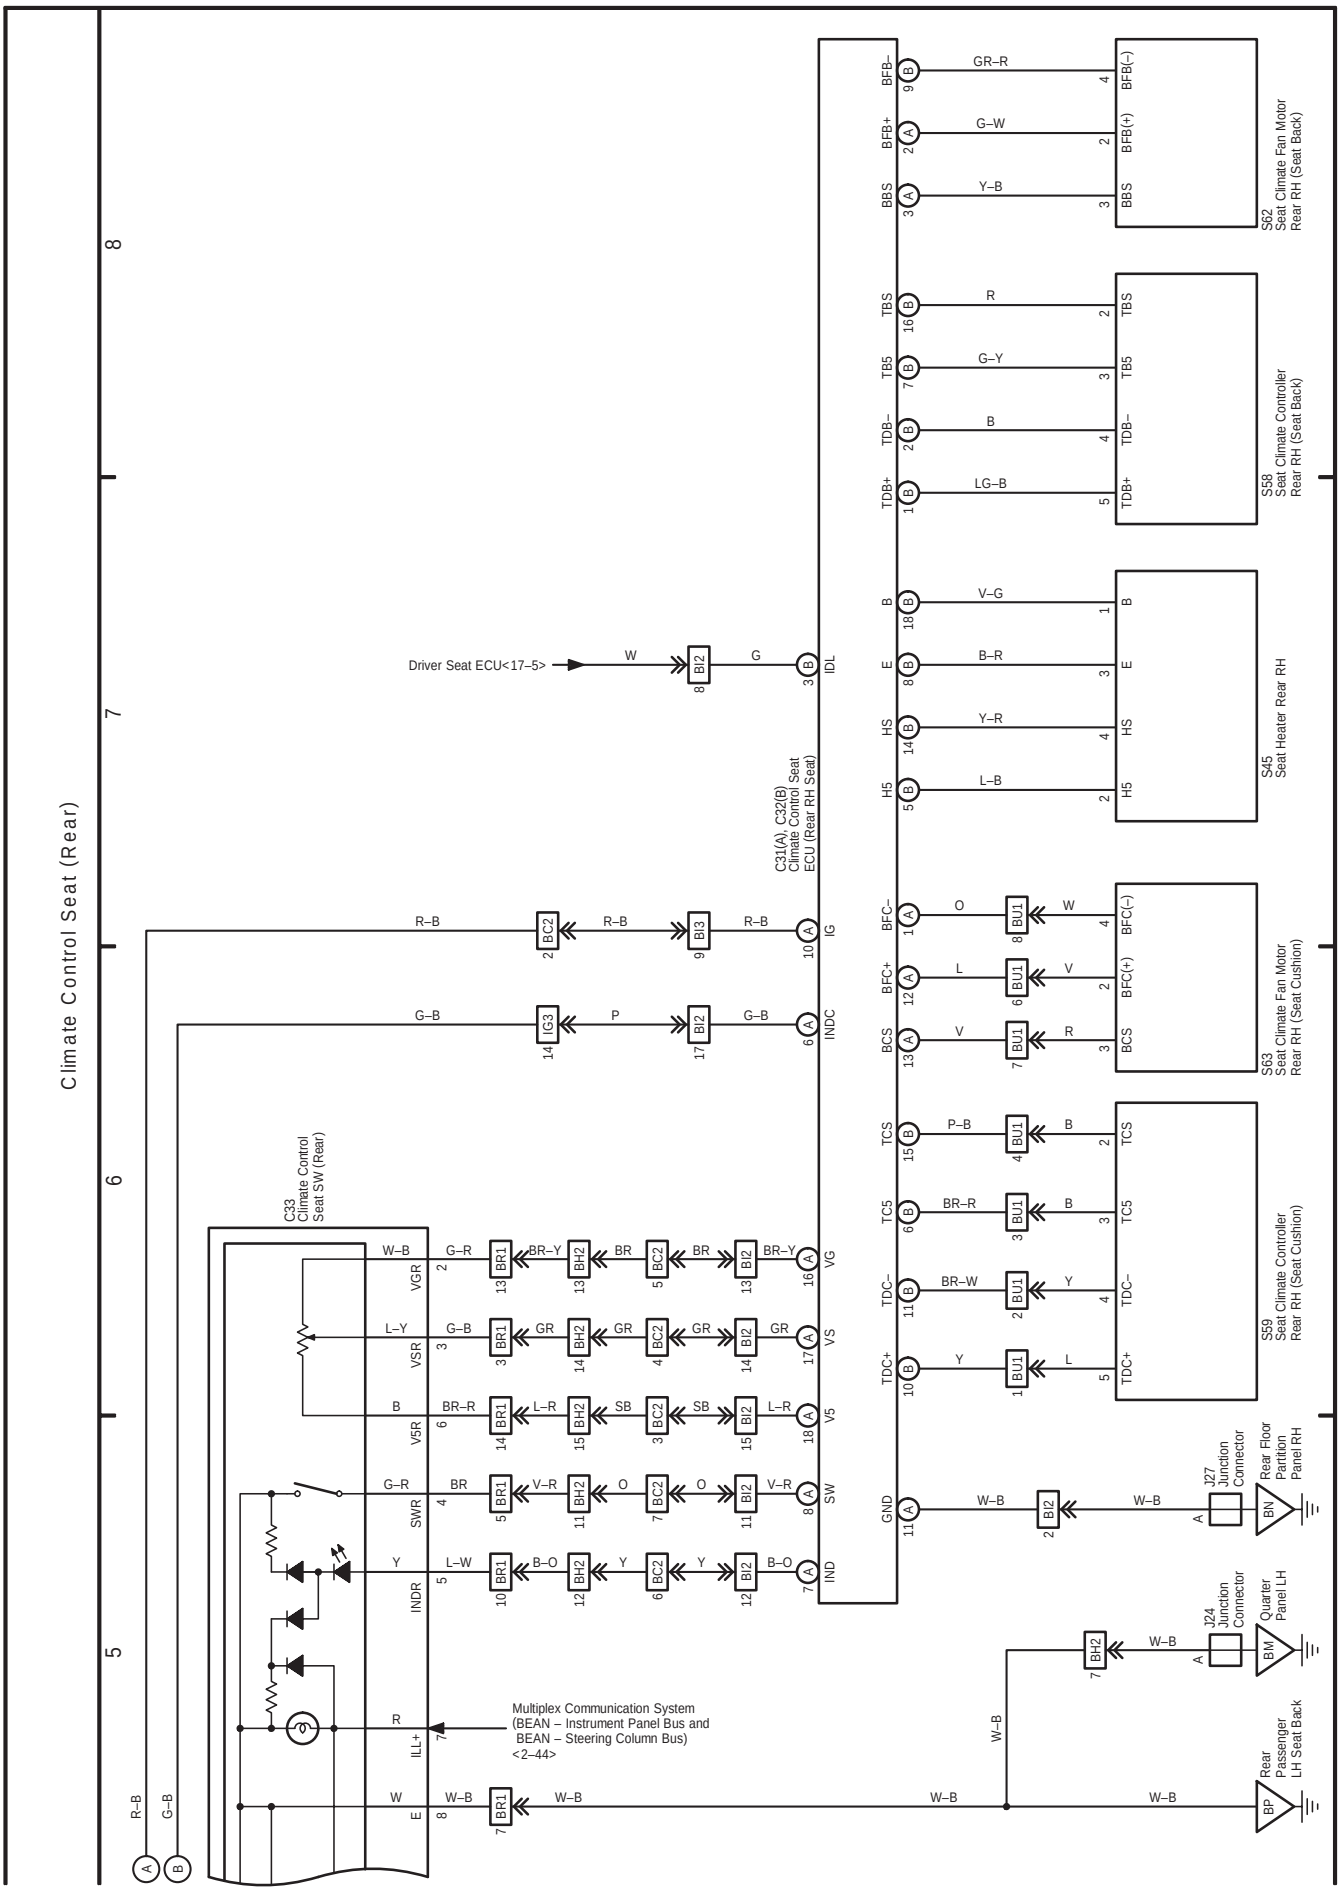
30 LS 430 (RHD) (Cont' d)