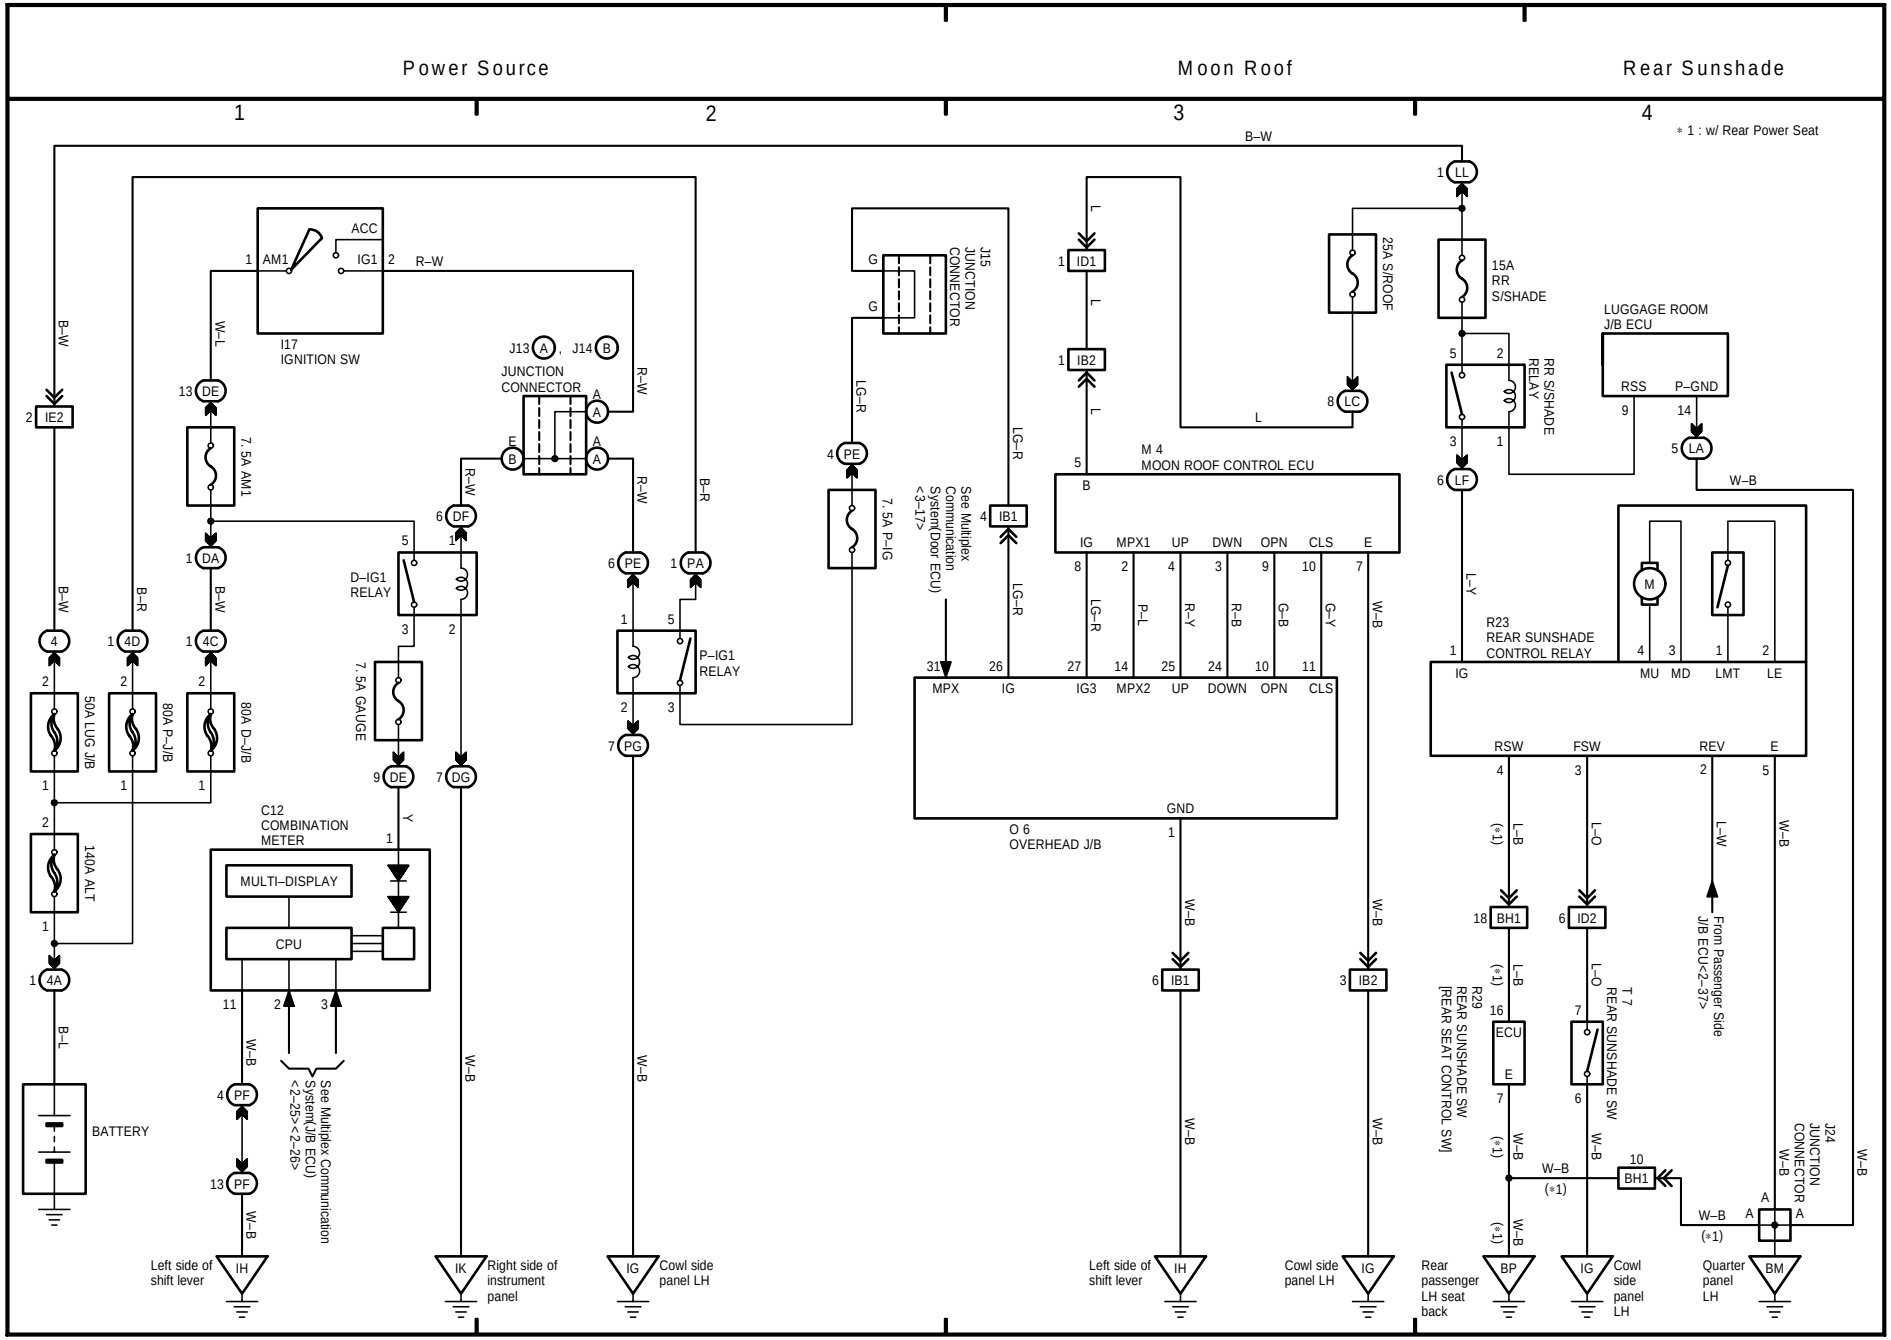
Power Source
Moon Roof
Rear Sunshade
1
2
3
4
* 1 : w/ Rear Power Seat
I17
IGNITION SW
ACC
AM1
IG1
J13
J14
JUNCTION CONNECTOR
7. 5A AM1
D–IG1 RELAY
7. 5A GAUGE
P–IG1 RELAY
J15
JUNCTION CONNECTOR
7. 5A P–IG
See Multiplex Communication System(Door ECU) <3–17>
M 4
MOON ROOF CONTROL ECU
IG
MPX1
UP
DWN
OPN
CLS
E
MPX
IG3
MPX2
GND
O 6
OVERHEAD J/B
25A S/ROOF
15A RR S/SHADE
RR S/SHADE RELAY
LUGGAGE ROOM J/B ECU
RSS
P–GND
R23
REAR SUNSHADE CONTROL RELAY
MU
MD
LMT
LE
RSW
FSW
REV
R29
REAR SUNSHADE SW [REAR SEAT CONTROL SW]
T 7
REAR SUNSHADE SW
From Passenger Side J/B ECU<2–37>
J24
JUNCTION CONNECTOR
50A LUG J/B
80A P–J/B
80A D–J/B
140A ALT
BATTERY
C12
COMBINATION METER
MULTI–DISPLAY
CPU
See Multiplex Communication System(J/B ECU) <2–25> <2–26>
Left side of shift lever
Right side of instrument panel
Cowl side panel LH
Rear passenger LH seat back
Quarter panel LH