05HTZ–01

LOCATION

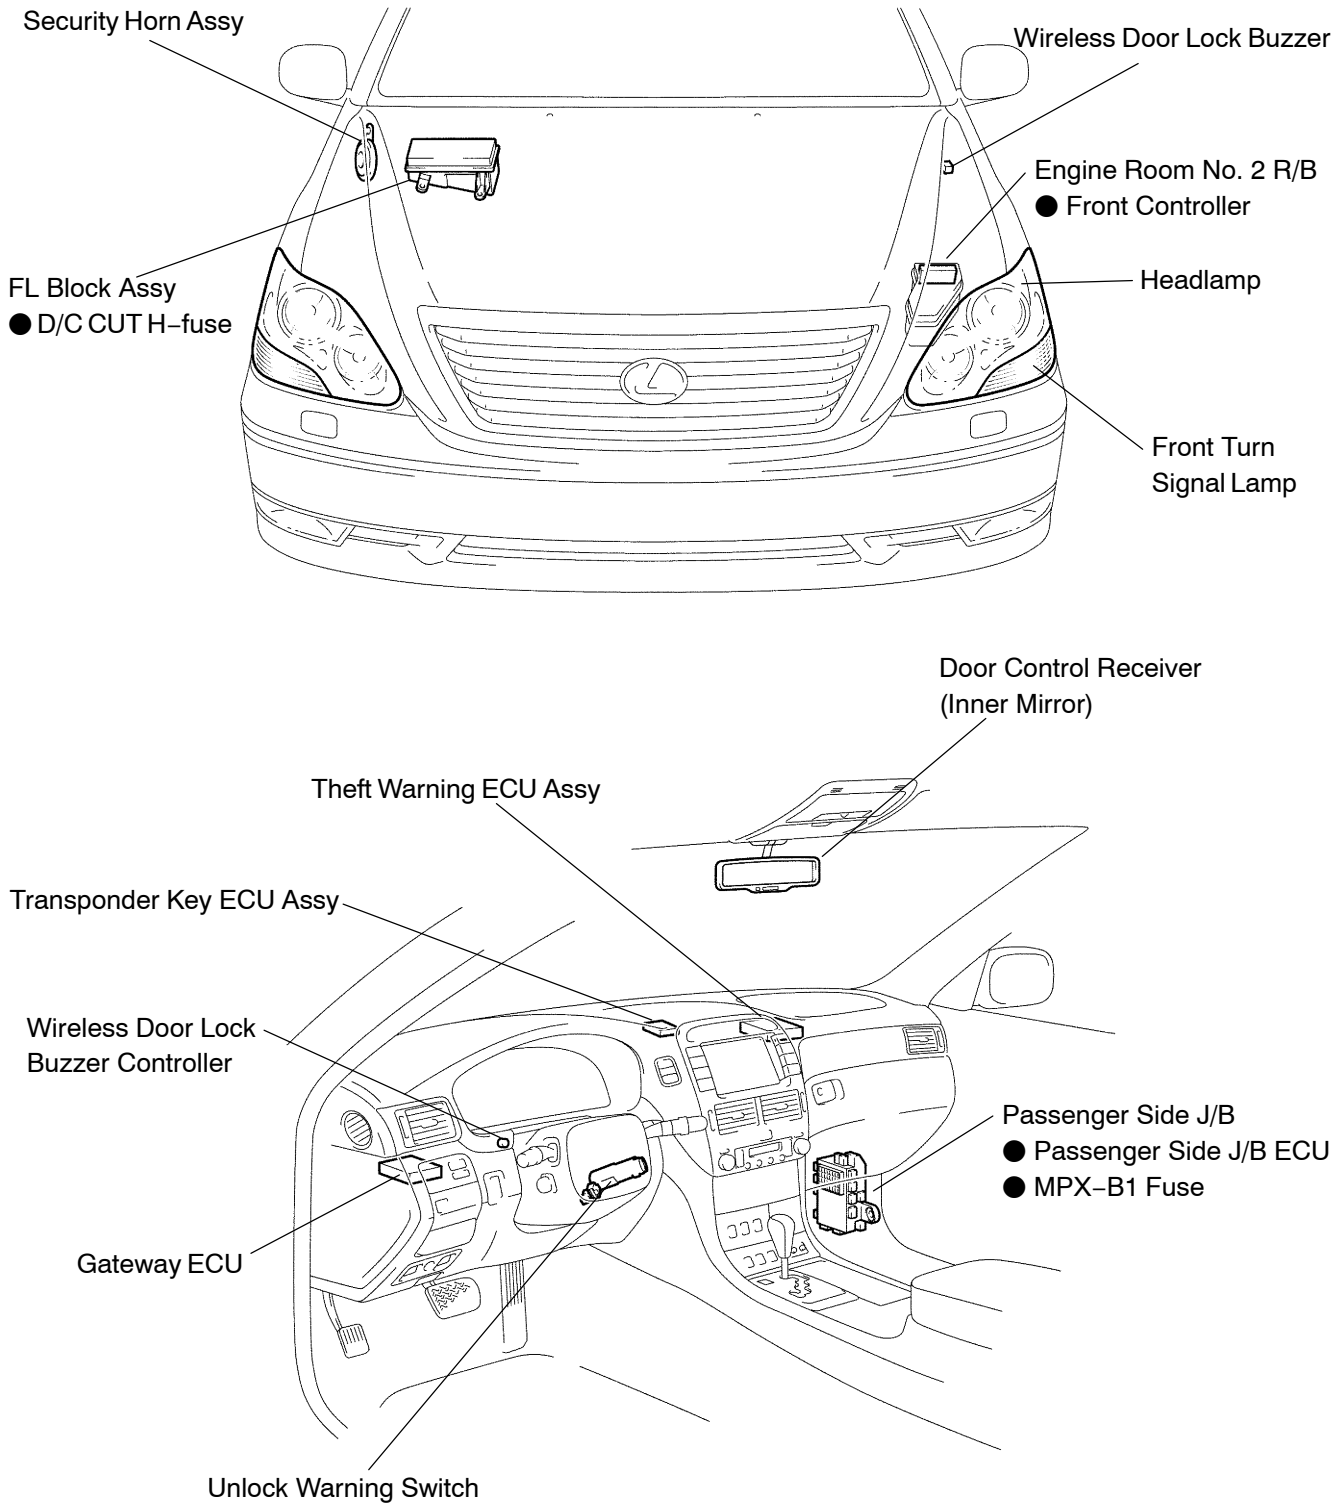

For RHD vehicles, look at the same location on the opposite side of the vehicle.

P B74785

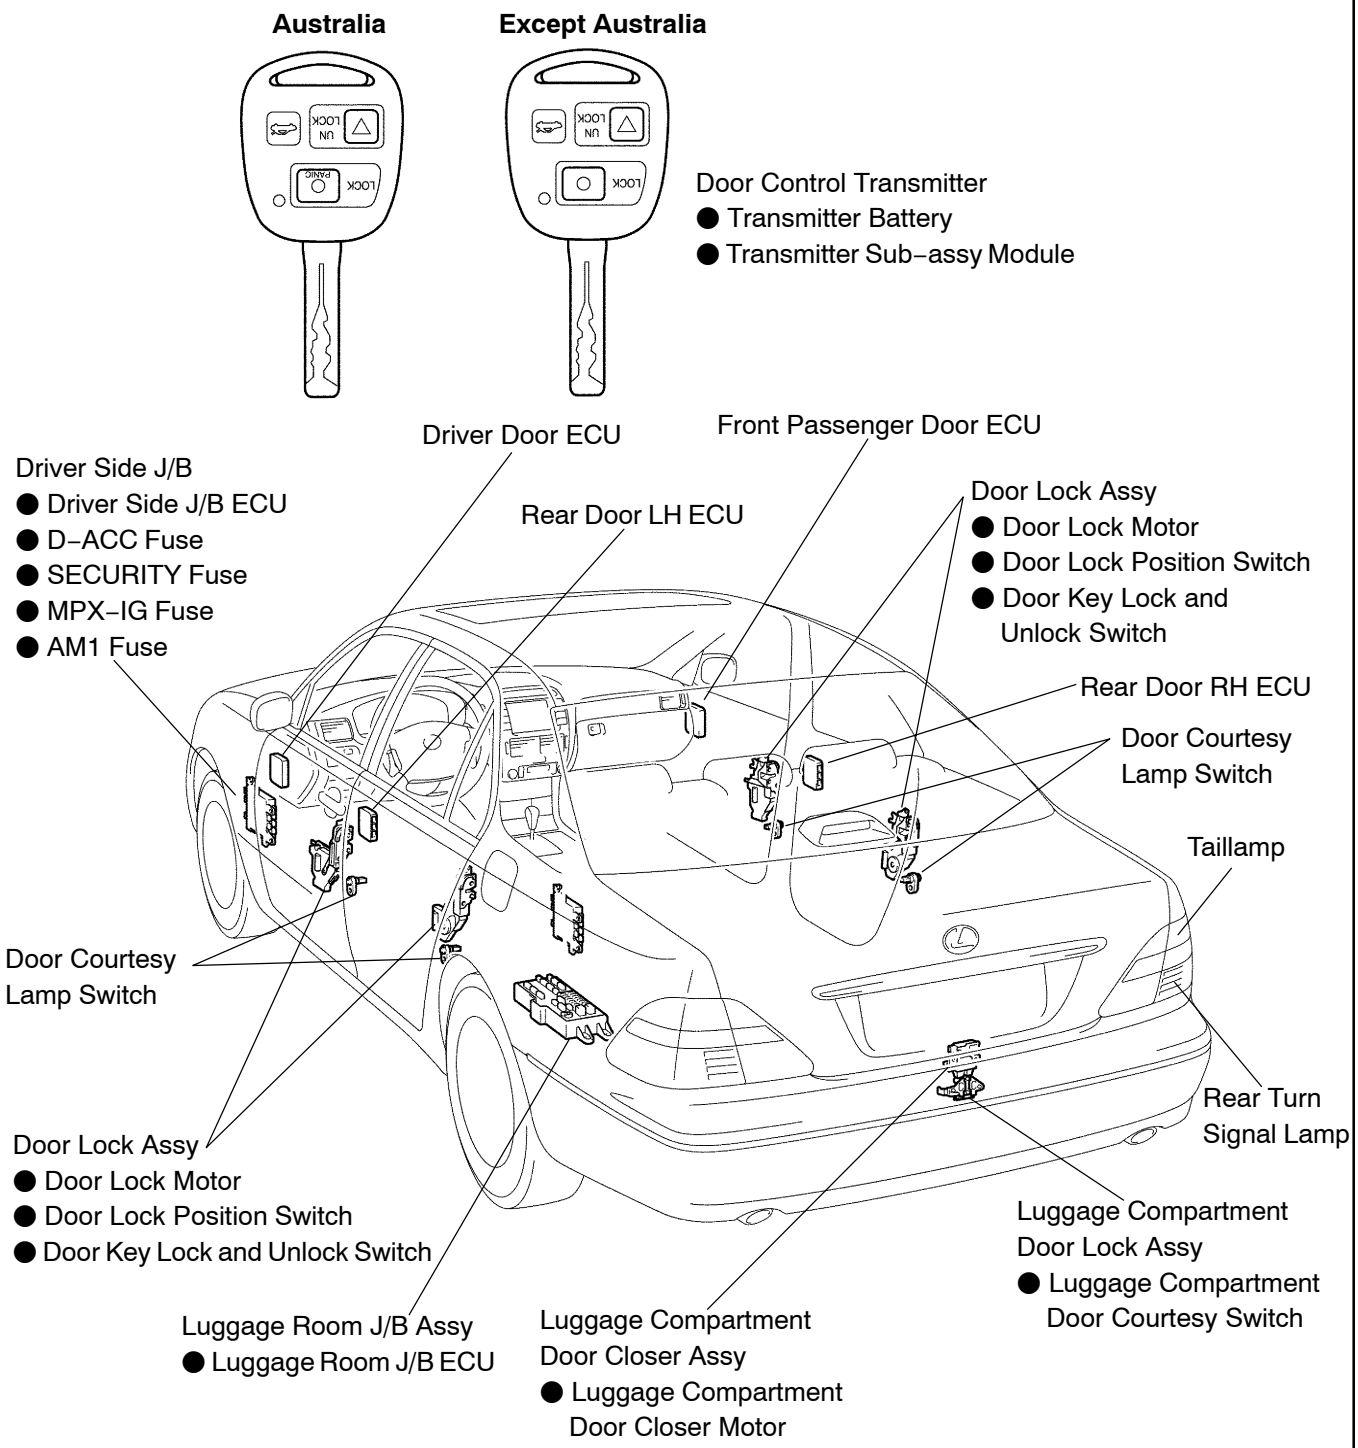

*: For RHD vehicles, look at the same location on the opposite side of the vehicle.

P B79993