CHECK CAN BUS LINE FOR SHORT TO GND (LHD, w/ LEXUS Navigation System)

CIRCUIT DESCRIPTION

There may be a short circuit between the CAN bus line and GND when there is resistance between terminals 6 (CANH) and 4 (CG) or terminals 14 (CANL) and 4 (CG) of the DLC3.

Symptom	Trouble Area
There is resistance between terminals 6 (CANH) and 4 (CG) or terminals 14 (CANL) and 4 (CG) of the DLC 3.	• Short to GND • Television camera ECU • Skid control ECU with actuator • Steering sensor • Yaw rate sensor • Suspension control ECU • ECM • Gateway ECU • Junction connector (D–CAN J/C) • Junction connector (P–CAN J/C) • Junction connector (LUG–CAN J/C)

WIRING DIAGRAM

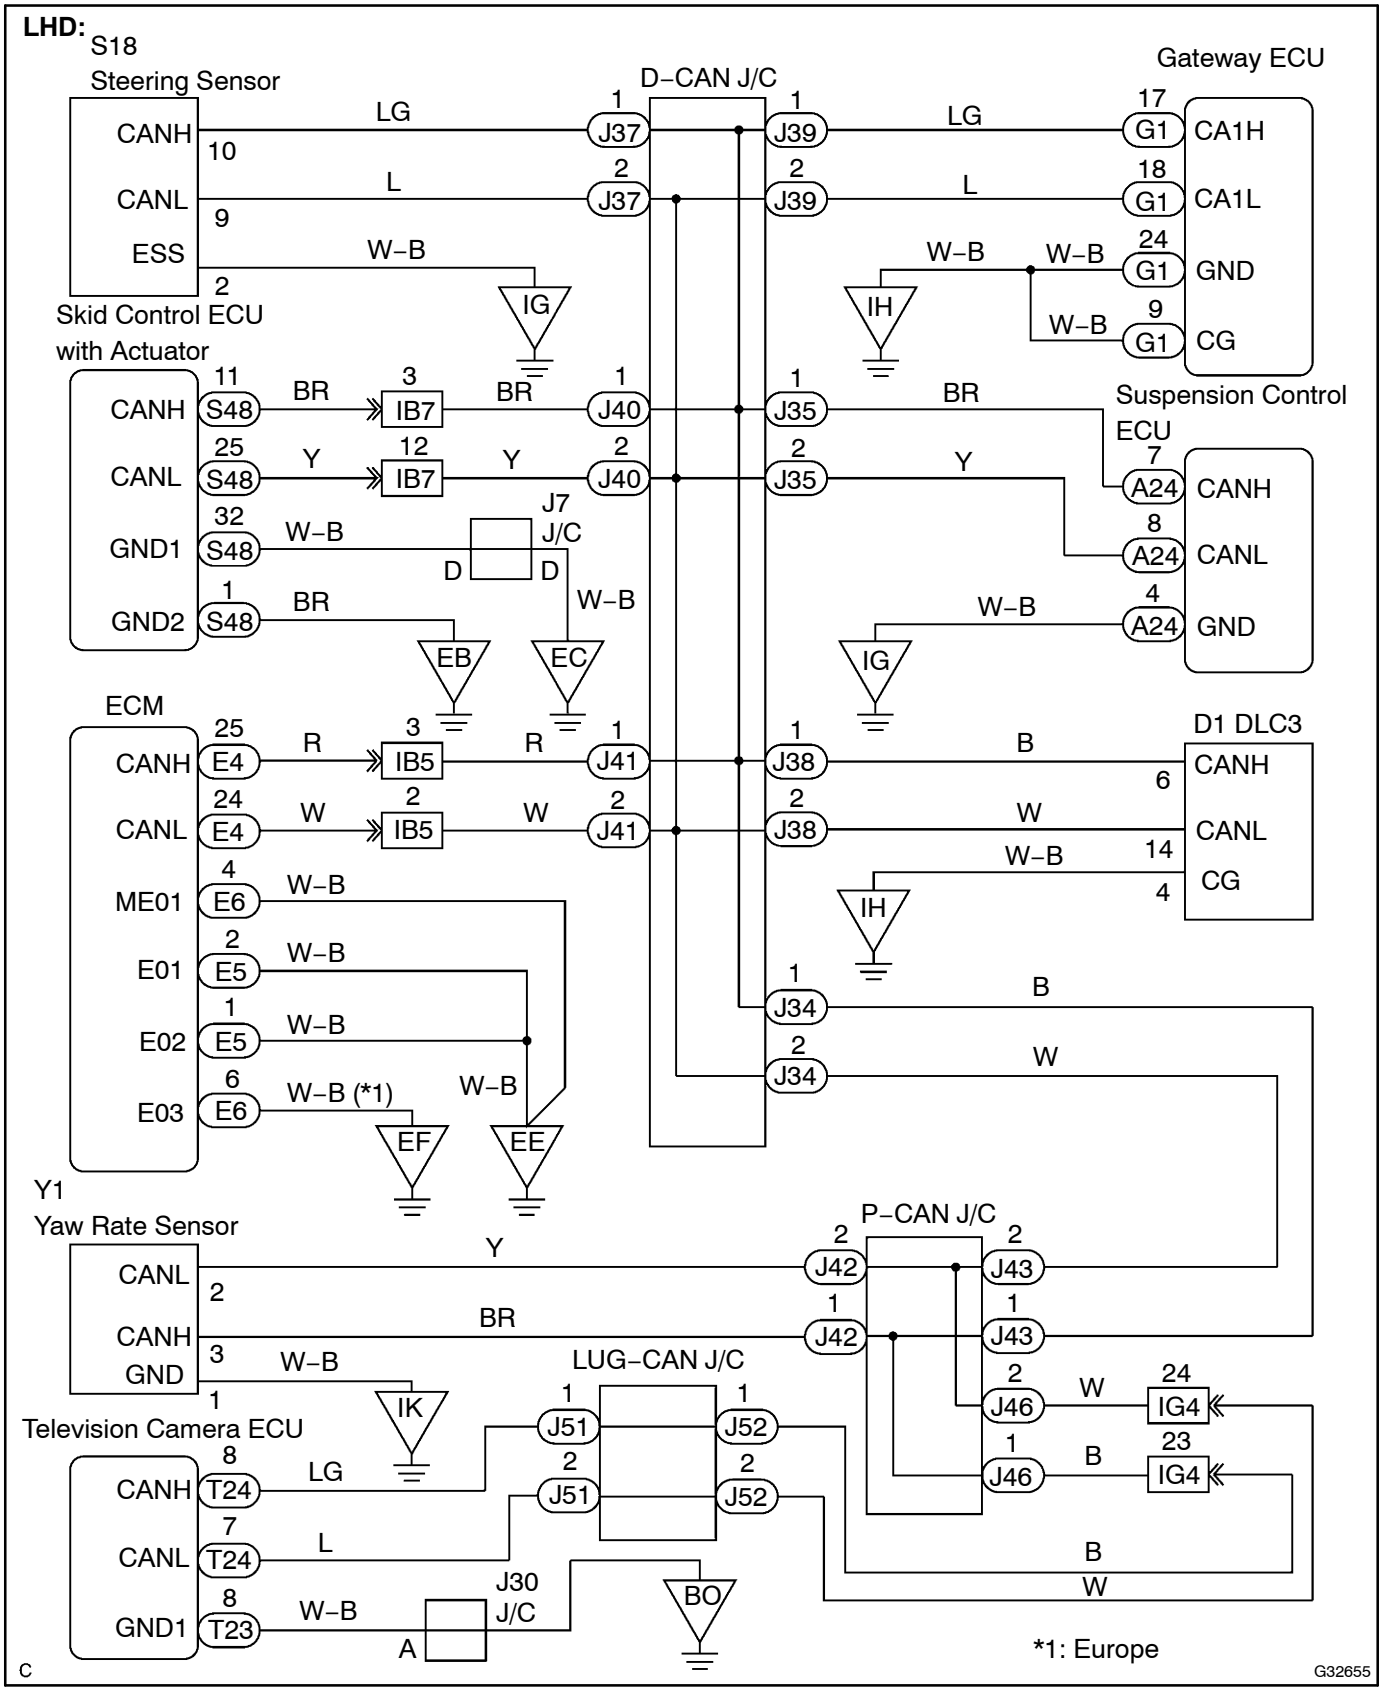

INSPECTION PROCEDURE

1 CHECK CAN BUS LINE FOR SHORT TO GND(DLC3 SUB BUS LINE)

D–CAN J/C B Side (w/o Earth Terminal) Wire Harness View:

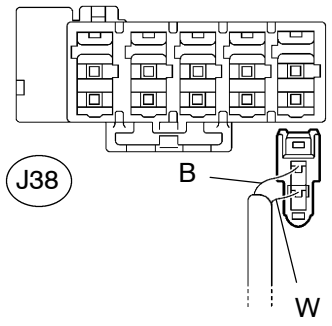

(a) Turn the ignition switch to the LOCK position.
(b) Disconnect the DLC3 sub bus line connector (J38) from the D–CAN J/C B side (w/o earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

DLC3:

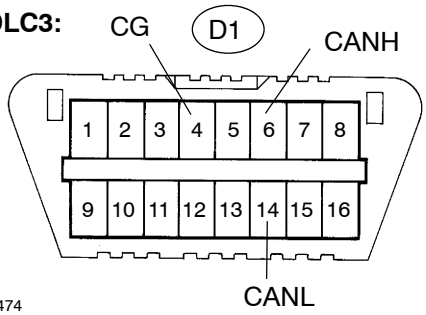

(c) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 MΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 MΩ or more

NG → **REPAIR OR REPLACE DLC3 SUB BUS LINE OR CONNECTOR (CAN–H, CAN–L)**

OK

2 CONNECT CONNECTOR

(a) Reconnect the DLC3 sub bus line connector (J38) to the D–CAN J/C B side (w/o earth terminal).

3 CHECK CAN BUS LINE FOR SHORT TO GND(CAN BUSES TO P–CAN J/C)

P–CAN J/C A Side (w/ Earth Terminal) Wire Harness View:

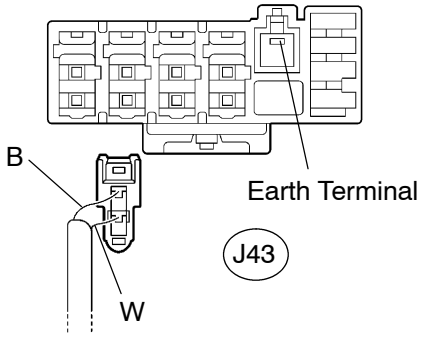

G25695 G31933

(a) Disconnect the CAN main bus line connector (J43) from the P–CAN J/C A side (w/ earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

DLC3:

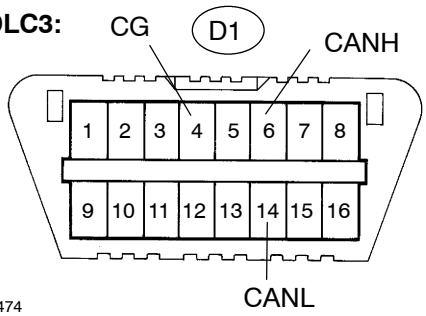

G25474
C81825 G26206

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **Go to step 26**

NG

4 CONNECT CONNECTOR

(a) Reconnect the CAN main bus line connector (J43) to the P–CAN J/C A side (w/ earth terminal).

5 CHECK CAN BUS LINE FOR SHORT TO GND(SUSPENSION CONTROL ECU SUB BUS LINE)

NOTICE:
For vehicles without electronic modulated air suspension, go to step 7.

D–CAN J/C A Side (w/ Earth Terminal) Wire Harness View:

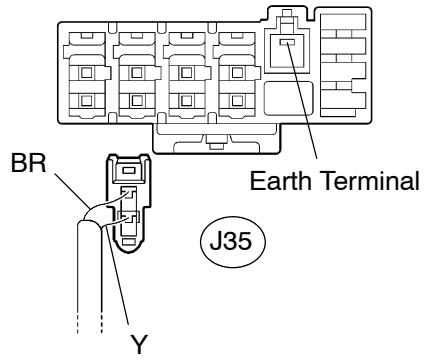

G25695 G31934

(a) Disconnect the suspension control ECU sub bus line connector (J35) from the D–CAN J/C A side (w/ earth terminal).

NOTICE:
- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

DLC3:

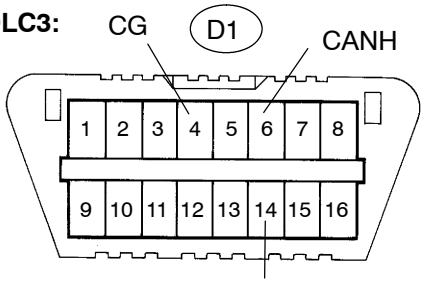

G25474
C81825 G26206

(b) Measure the resistance according to the value(s) in the table below.
Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **Go to step 16**

NG

6 CONNECT CONNECTOR

(a) Reconnect the suspension control ECU sub bus line connector (J35) to the D–CAN J/C A side (w/ earth terminal).

7 CHECK CAN BUS LINE FOR SHORT TO GND(GATEWAY ECU SUB BUS LINE)

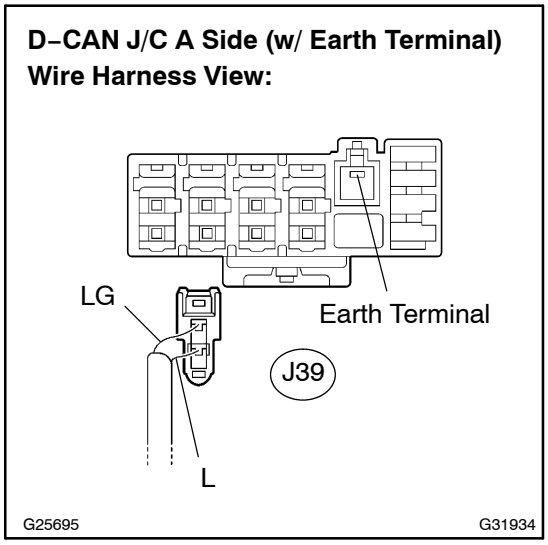

(a) Disconnect the gateway ECU sub bus line connector (J39) from the D–CAN J/C A side (w/ earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

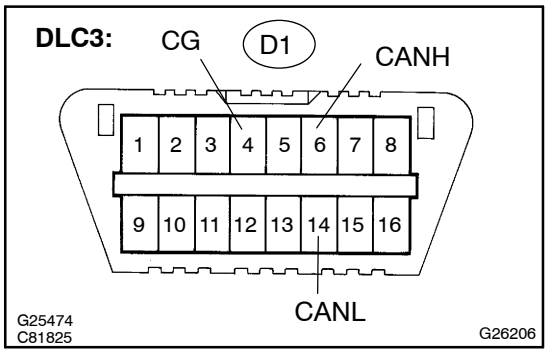

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **Go to step 18**

NG

8 CONNECT CONNECTOR

(a) Reconnect the gateway ECU sub bus line connector (J39) to the D–CAN J/C A side (w/ earth terminal).

9 CHECK CAN BUS LINE FOR SHORT TO GND(ECM SUB BUS LINE)

D–CAN J/C B Side (w/o Earth Terminal) Wire Harness View:

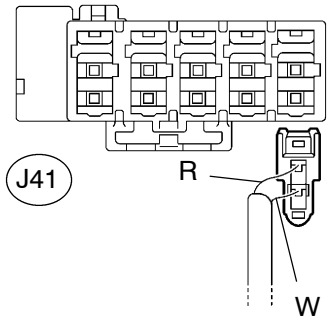

(a) Disconnect the ECM sub bus line connector (J41) from the D–CAN J/C B side (w/o earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

DLC3:

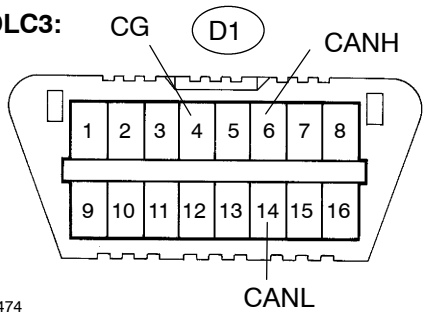

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **Go to step 20**

NG

10 CONNECT CONNECTOR

(a) Reconnect the ECM sub bus line connector (J41) to the D–CAN J/C B side (w/o earth terminal).

11 CHECK CAN BUS LINE FOR SHORT TO GND(SKID CONTROL ECU SUB BUS LINE)

D–CAN J/C B Side (w/o Earth Terminal) Wire Harness View:

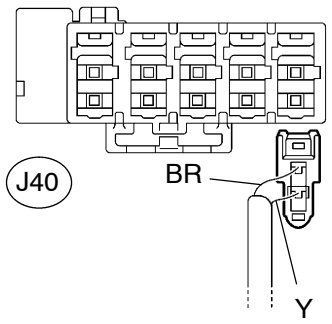

(a) Disconnect the skid control ECU sub bus line connector (J40) from the D–CAN J/C (w/o earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

DLC3:

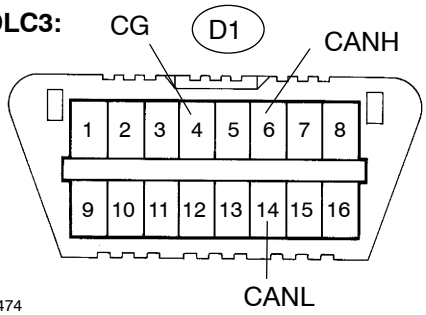

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OKI → **Go to step 22**

NG

12 CONNECT CONNECTOR

(a) Reconnect the skid control ECU sub bus line connector (J40) to the D–CAN J/C B side (w/o earth terminal).

13 CHECK CAN BUS LINE FOR SHORT TO GND(STEERING SENSOR SUB BUS LINE)

D–CAN J/C B Side (w/o Earth Terminal) Wire Harness View:

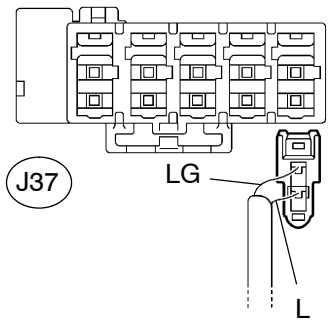

(a) Disconnect the steering sensor sub bus line connector (J37) from the D–CAN J/C B side (w/o earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

DLC3:

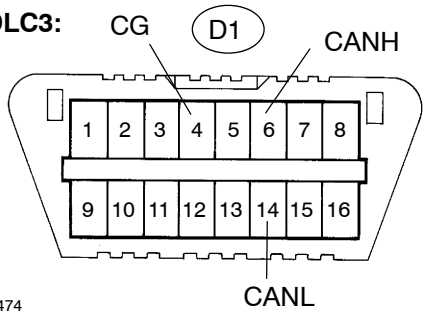

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **Go to step 24**

NG

14 CONNECT CONNECTOR

(a) Reconnect the steering sensor sub bus line connector (J37) to the D–CAN J/C B side (w/o earth terminal).

15 CHECK CAN BUS LINE FOR SHORT TO GND(D–CAN J/C)

D–CAN J/C A Side (w/ Earth Terminal) Wire Harness View:

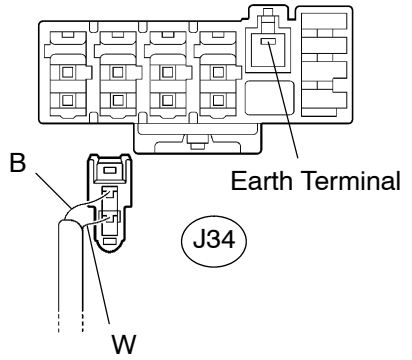

(a) Disconnect the CAN main bus line connector (J34) from the D–CAN J/C A side (w/ earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

DLC3:

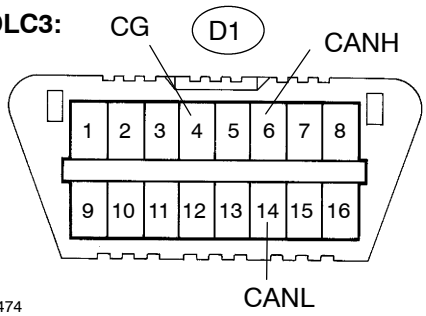

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

NG → **REPLACE JUNCTION CONNECTOR (D–CAN J/C)**

OK

REPAIR OR REPLACE CAN MAIN BUS LINE OR CONNECTOR (D–CAN J/C – P–CAN J/C)

16 CONNECT CONNECTOR

(a) Reconnect the suspension control ECU sub bus line connector (J35) to the D–CAN J/C A side (w/ earth terminal).

17 CHECK CAN BUS LINE FOR SHORT TO GND(SUSPENSION CONTROL ECU SUB BUS LINE)

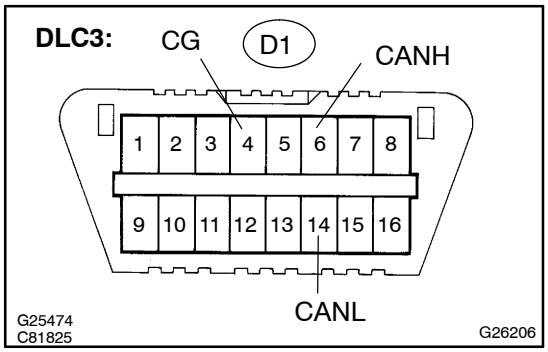

(a) Disconnect the suspension control ECU connector (A24).
(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **REPLACE SUSPENSION CONTROL ECU (SEE PAGE 25–20)**

NG

REPAIR OR REPLACE SUSPENSION CONTROL ECU SUB BUS LINE OR CONNECTOR (CAN–H, CAN–L)

18 CONNECT CONNECTOR

(a) Reconnect the gateway ECU sub bus line connector (J39) to the D–CAN J/C (w/ earth terminal).

19 CHECK CAN BUS LINE FOR SHORT TO GND(GATEWAY ECU SUB BUS LINE)

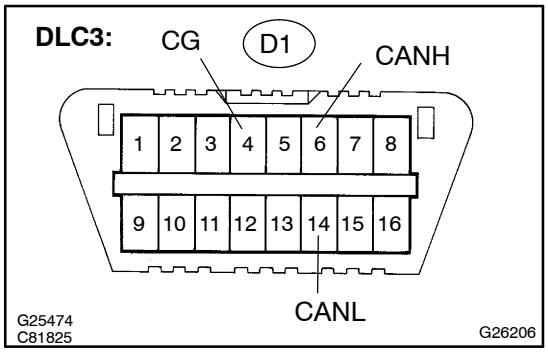

(a) Disconnect the gateway ECU connector (G1).
(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **REPLACE GATEWAY ECU**

NG

REPAIR OR REPLACE GATEWAY ECU SUB BUS LINE OR CONNECTOR (CAN–H, CAN–L)

20 CONNECT CONNECTOR

(a) Reconnect the ECM sub bus line connector (J41) to the D–CAN J/C B side (w/o earth terminal).

21 CHECK CAN BUS LINE FOR SHORT TO GND(ECM SUB BUS LINE)

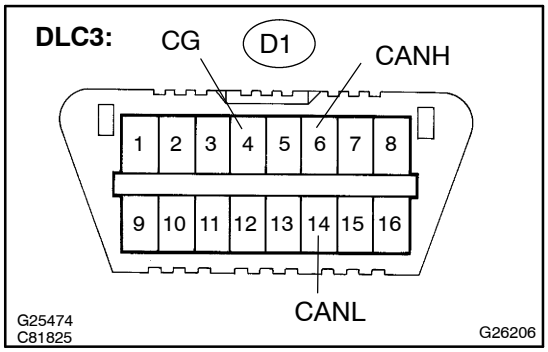

(a) Disconnect the ECM connector (E4).
(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **REPLACE ECM (SEE PAGE 10–21)**

NG

REPAIR OR REPLACE ECM SUB BUS LINE OR CONNECTOR (CAN–H, CAN–L)

22 CONNECT CONNECTOR

(a) Reconnect the skid control ECU sub bus line connector (J40) to the D–CAN J/C B side (w/o earth terminal).

23 CHECK CAN BUS LINE FOR SHORT TO GND(SKID CONTROL ECU SUB BUS LINE)

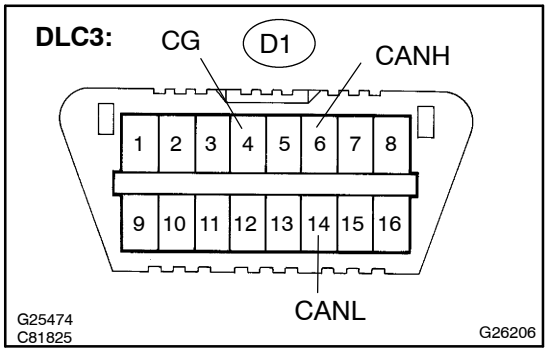

(a) Disconnect the skid control ECU connector (S48).
(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **REPLACE SKID CONTROL ECU WITH ACTUATOR (SEE PAGE 32–53)**

NG

REPAIR OR REPLACE SKID CONTROL ECU SUB BUS LINE OR CONNECTOR (CAN–H, CAN–L)

24	CONNECT CONNECTOR

(a) Reconnect the steering sensor sub bus line connector (J37) to the D–CAN J/C B side (w/o earth terminal).

25	CHECK CAN BUS LINE FOR SHORT TO GND(STEERING SENSOR SUB BUS LINE)

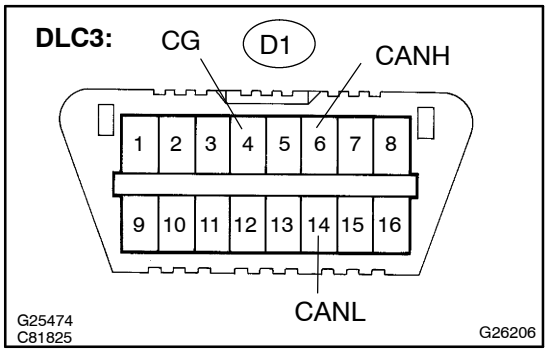

(a) Disconnect the steering sensor connector (S18).

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **REPLACE STEERING SENSOR (SEE PAGE 32–65)**

NG

REPAIR OR REPLACE STEERING SENSOR SUB BUS LINE OR CONNECTOR (CAN–H, CAN–L)

26 CONNECT CONNECTOR

(a) Reconnect the CAN main bus line connector (J43) to the P–CAN J/C A side (w/ earth terminal).

27 CHECK CAN BUS LINE FOR SHORT TO GND(LUB–CAN J/C)

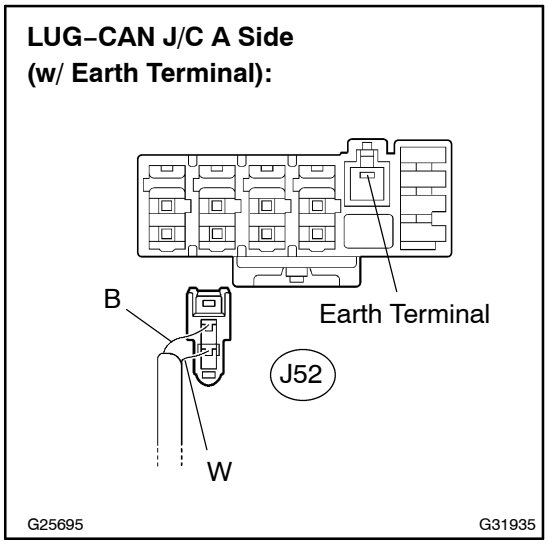

(a) Disconnect the CAN main bus line connector (J52) from the LUG–CAN J/C A side (w/ earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

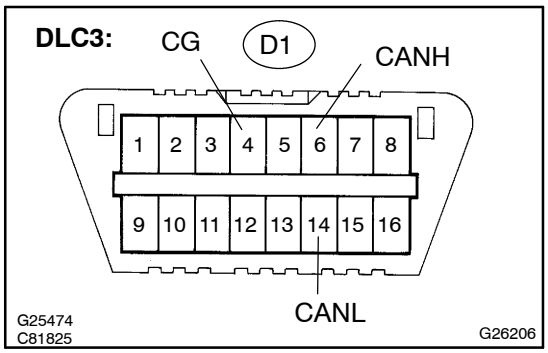

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **Go to step 34**

NG

28 CONNECT CONNECTOR

(a) Reconnect the CAN main bus line connector (J52) to the LUG–CAN J/C A side (w/ earth terminal).

29 CHECK CAN BUS LINE FOR SHORT TO GND(YAW RATE SENSOR SUB BUS LINE)

P–CAN J/C A Side (w/ Earth Terminal) Wire Harness View:

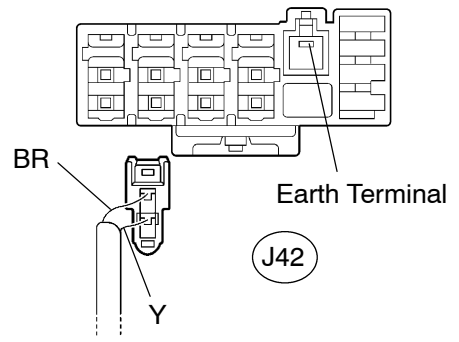

G25695 G31933

(a) Disconnect the yaw rate sensor sub bus line connector (J42) from the P–CAN J/C A side (w/ earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

DLC3:

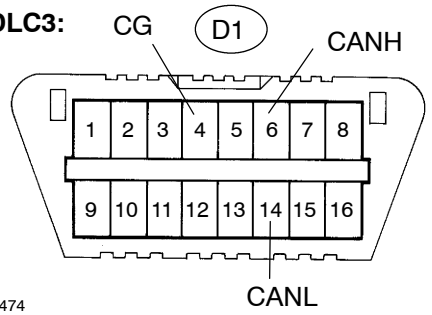

G25474
C81825 G26206

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **Go to step 32**

NG

30 CONNECT CONNECTOR

(a) Reconnect the yaw rate sensor sub bus line connector (J42) to the P–CAN J/C A side (w/ earth terminal).

31 CHECK CAN BUS LINE FOR SHORT TO GND(P–CAN J/C)

P–CAN J/C B Side (w/o Earth Terminal) Wire Harness View:

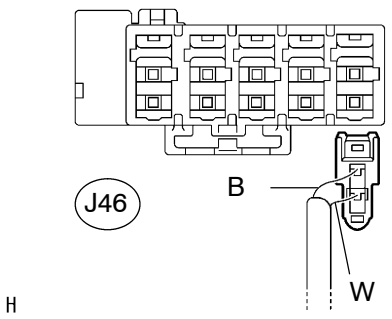

(a) Disconnect the CAN main bus line connector (J46) from the P–CAN J/C B side (w/o earth terminal).

NOTICE:

- **Before disconnecting the connector, make a note of where it is connected.**
- **Reconnect the connector to its original position.**

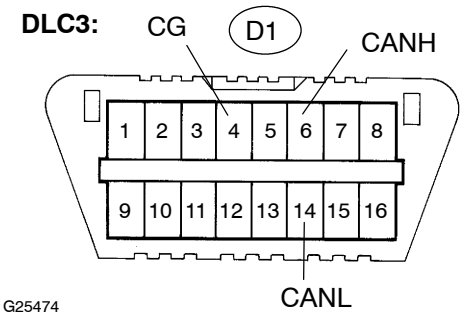

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **REPAIR OR REPLACE CAN MAIN BUS LINE OR CONNECTOR (P–CAN J/C – LUG–CAN J/C)**

NG

REPLACE JUNCTION CONNECTOR (P–CAN J/C)

32	CONNECT CONNECTOR

(a) Reconnect the yaw rate sensor sub bus line connector (J42) to the P–CAN J/C A side (w/ earth terminal).

33	CHECK CAN BUS LINE FOR SHORT TO GND(YAW RATE SENSOR SUB BUS LINE)

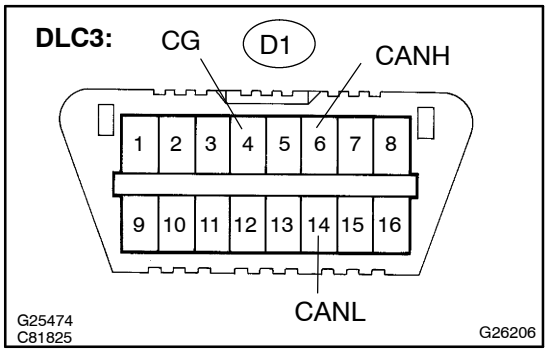

(a) Disconnect the yaw rate sensor connector (Y1).
(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **REPLACE YAW RATE SENSOR**

NG

REPAIR OR REPLACE YAW RATE SENSOR SUB BUS LINE OR CONNECTOR (CAN–H, CAN–L)

34 CONNECT CONNECTOR

(a) Reconnect the CAN main bus line connector (J52) to the LUG–CAN J/C A side (w/ earth terminal).

35 CHECK CAN BUS LINE FOR SHORT TO GND(TELEVISION CAMERA ECU SUB BUS LINE)

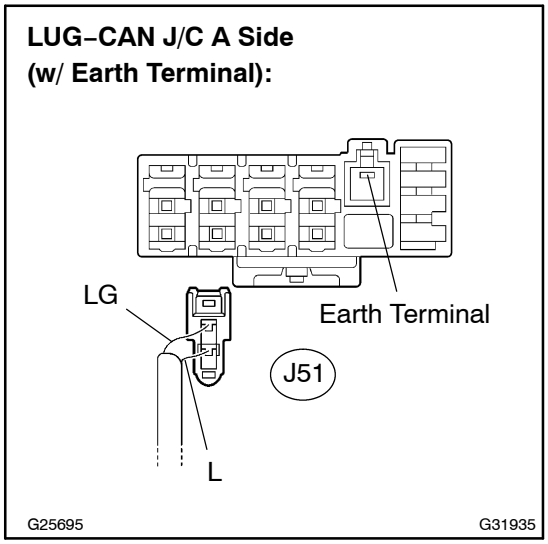

(a) Disconnect the television camera ECU sub bus line connector (J51) from the LUG–CAN J/C A side (w/ earth terminal).

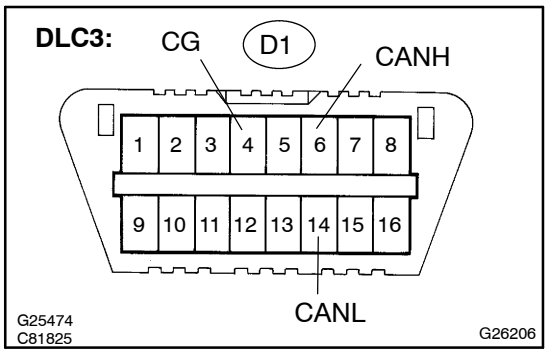

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

NG → **REPLACE JUNCTION CONNECTOR (LUG–CAN J/C)**

OK

36 CONNECT CONNECTOR

(a) Reconnect the television camera ECU sub bus line connector (J51) to the LUG–CAN J/C A side (w/ earth terminal).

37	CHECK CAN BUS LINE FOR SHORT TO GND(TELEVISION CAMERA ECU SUB BUS LINE)

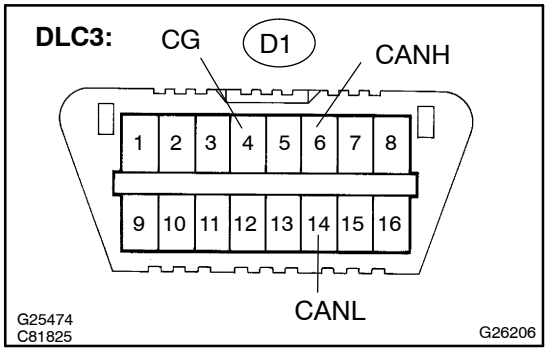

(a) Disconnect the television camera ECU connector (T24).

(b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified value
D1–6 (CANH) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more
D1–14 (CANL) – D1–4 (CG)	Ignition Switch OFF	1 kΩ or more

OK → **REPLACE TELEVISION CAMERA ECU (SEE PAGE 67–15)**

NG

REPAIR OR REPLACE TELEVISION CAMERA ECU SUB BUS LINE OR CONNECTOR (CAN–H, CAN–L)