OIL PUMP

COMPONENTS

LU05Q–04

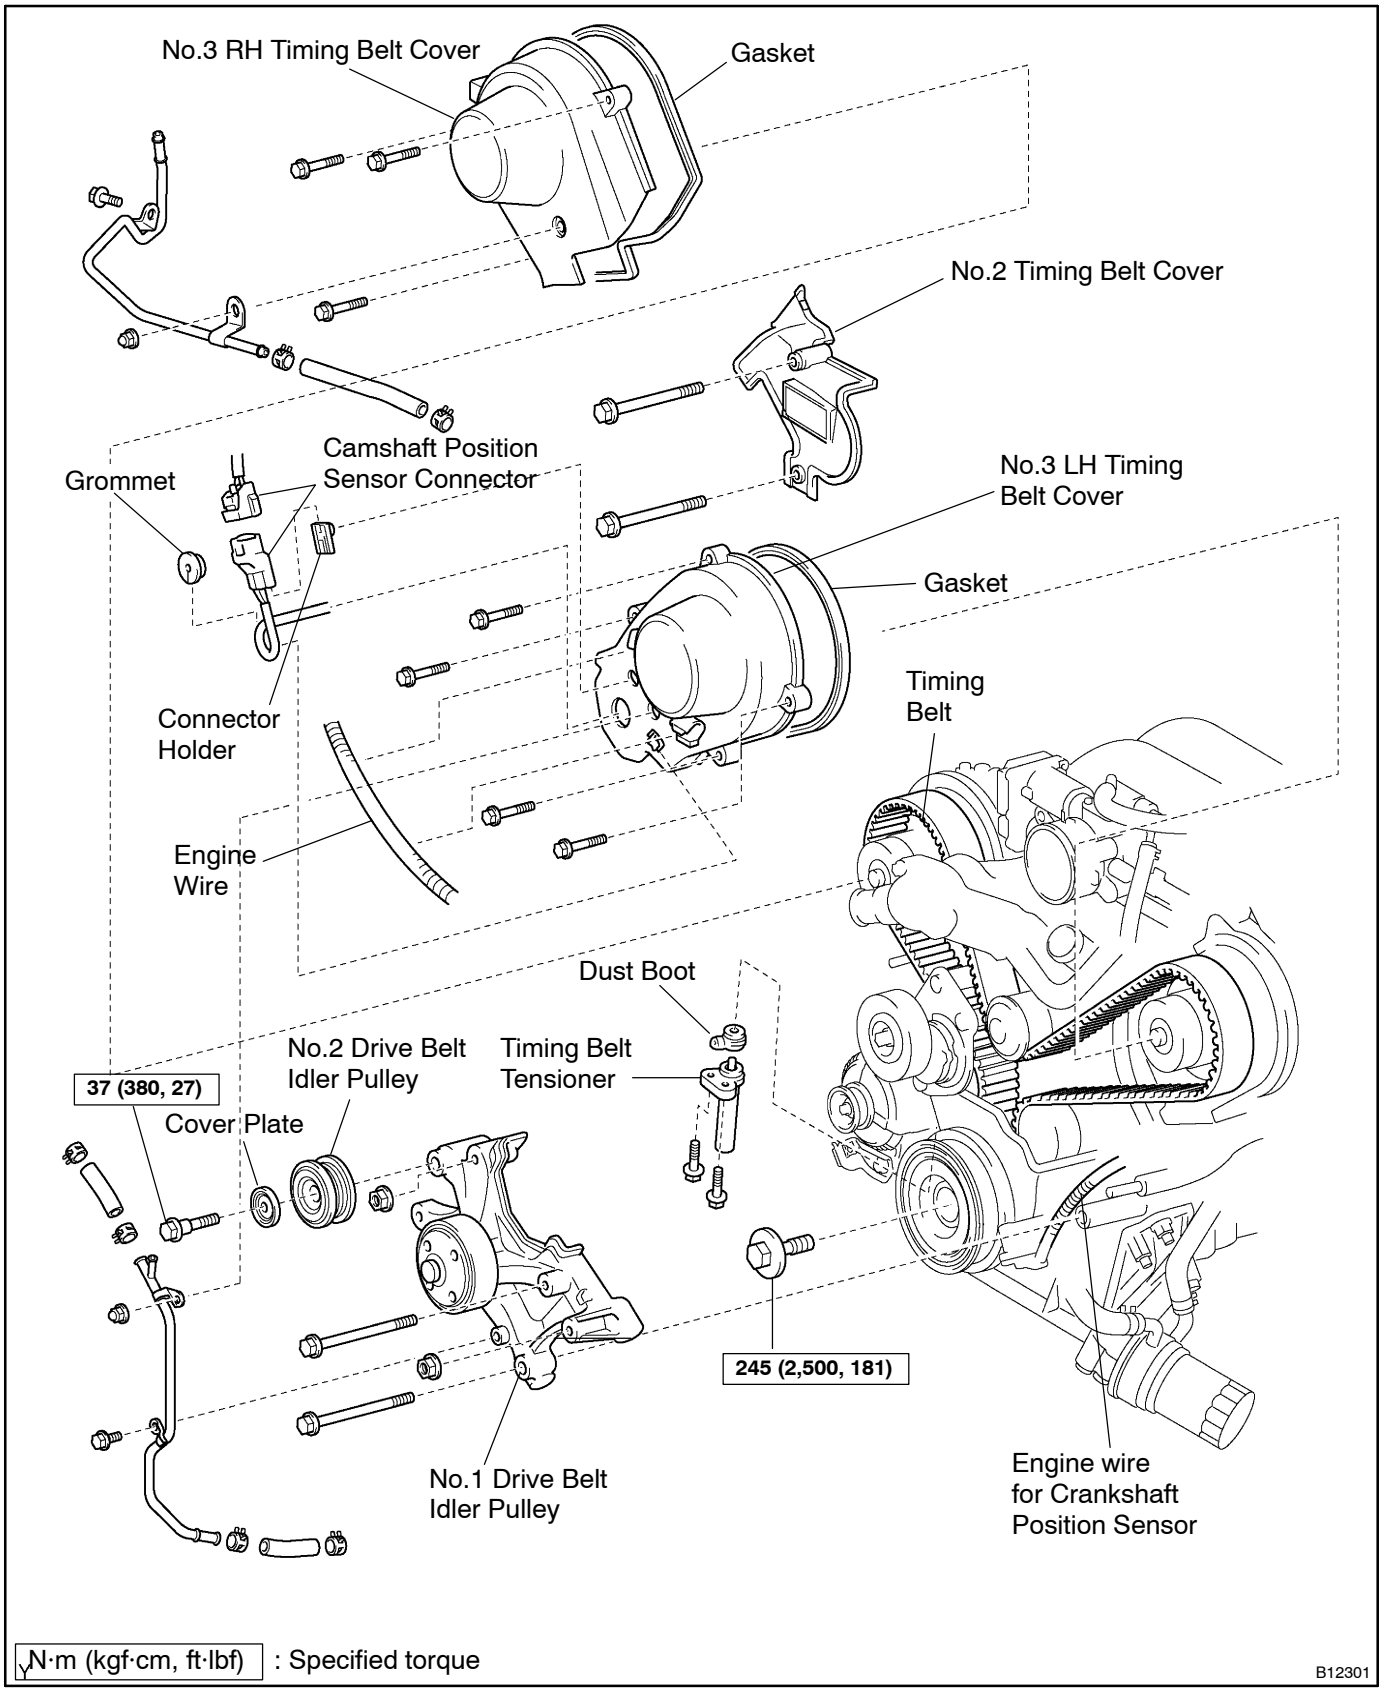

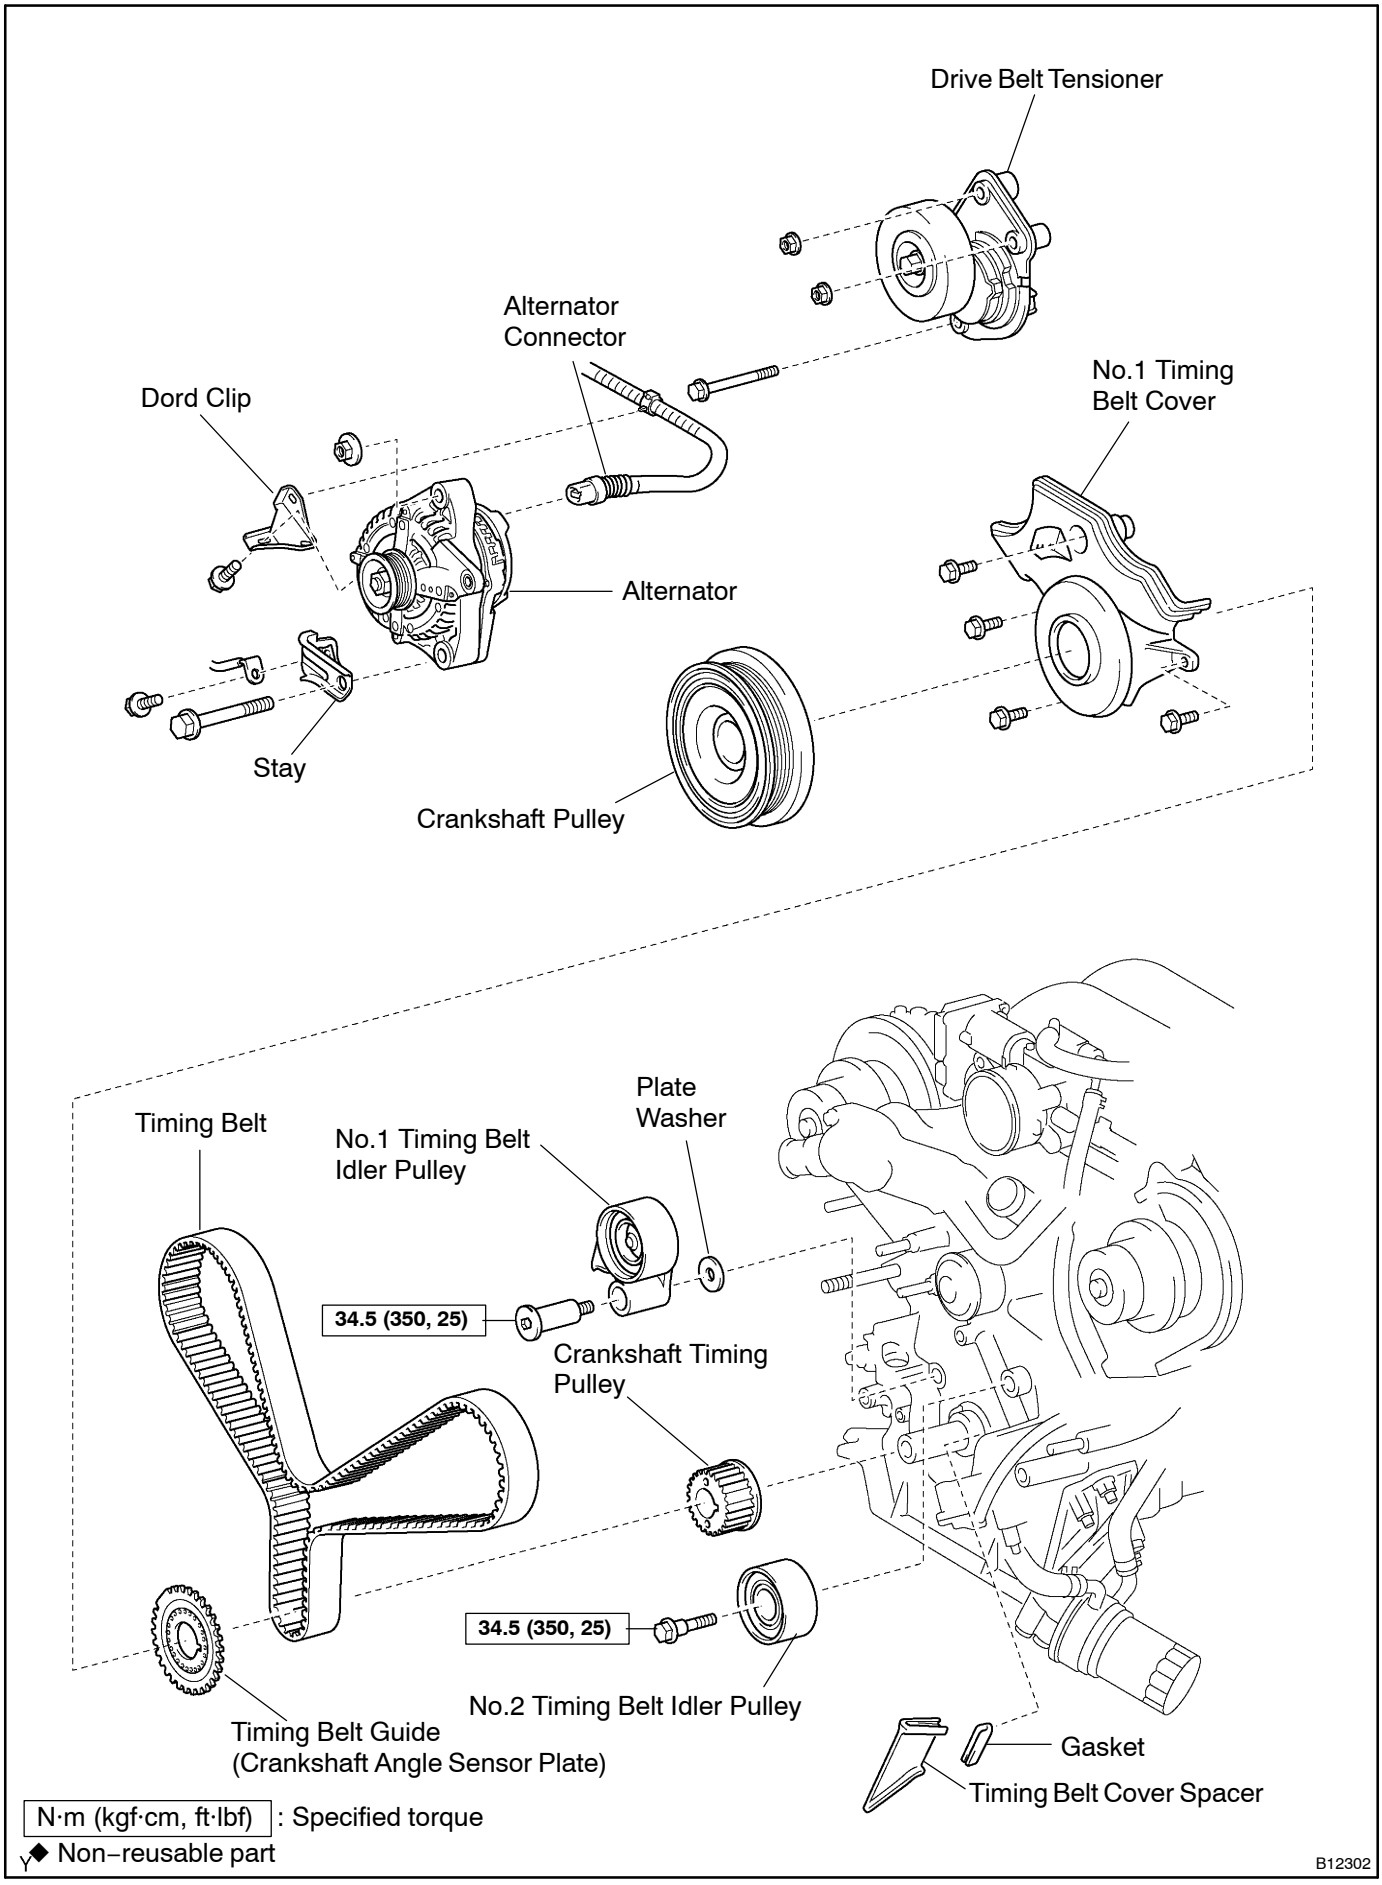
Drive Belt Tensioner
Alternator Connector
Dord Clip
No.1 Timing Belt Cover
Alternator
Stay
Crankshaft Pulley
Timing Belt
No.1 Timing Belt Idler Pulley
Plate Washer
34.5 (350, 25)
Crankshaft Timing Pulley
34.5 (350, 25)
No.2 Timing Belt Idler Pulley
Timing Belt Guide (Crankshaft Angle Sensor Plate)
Gasket
Timing Belt Cover Spacer
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
B12302

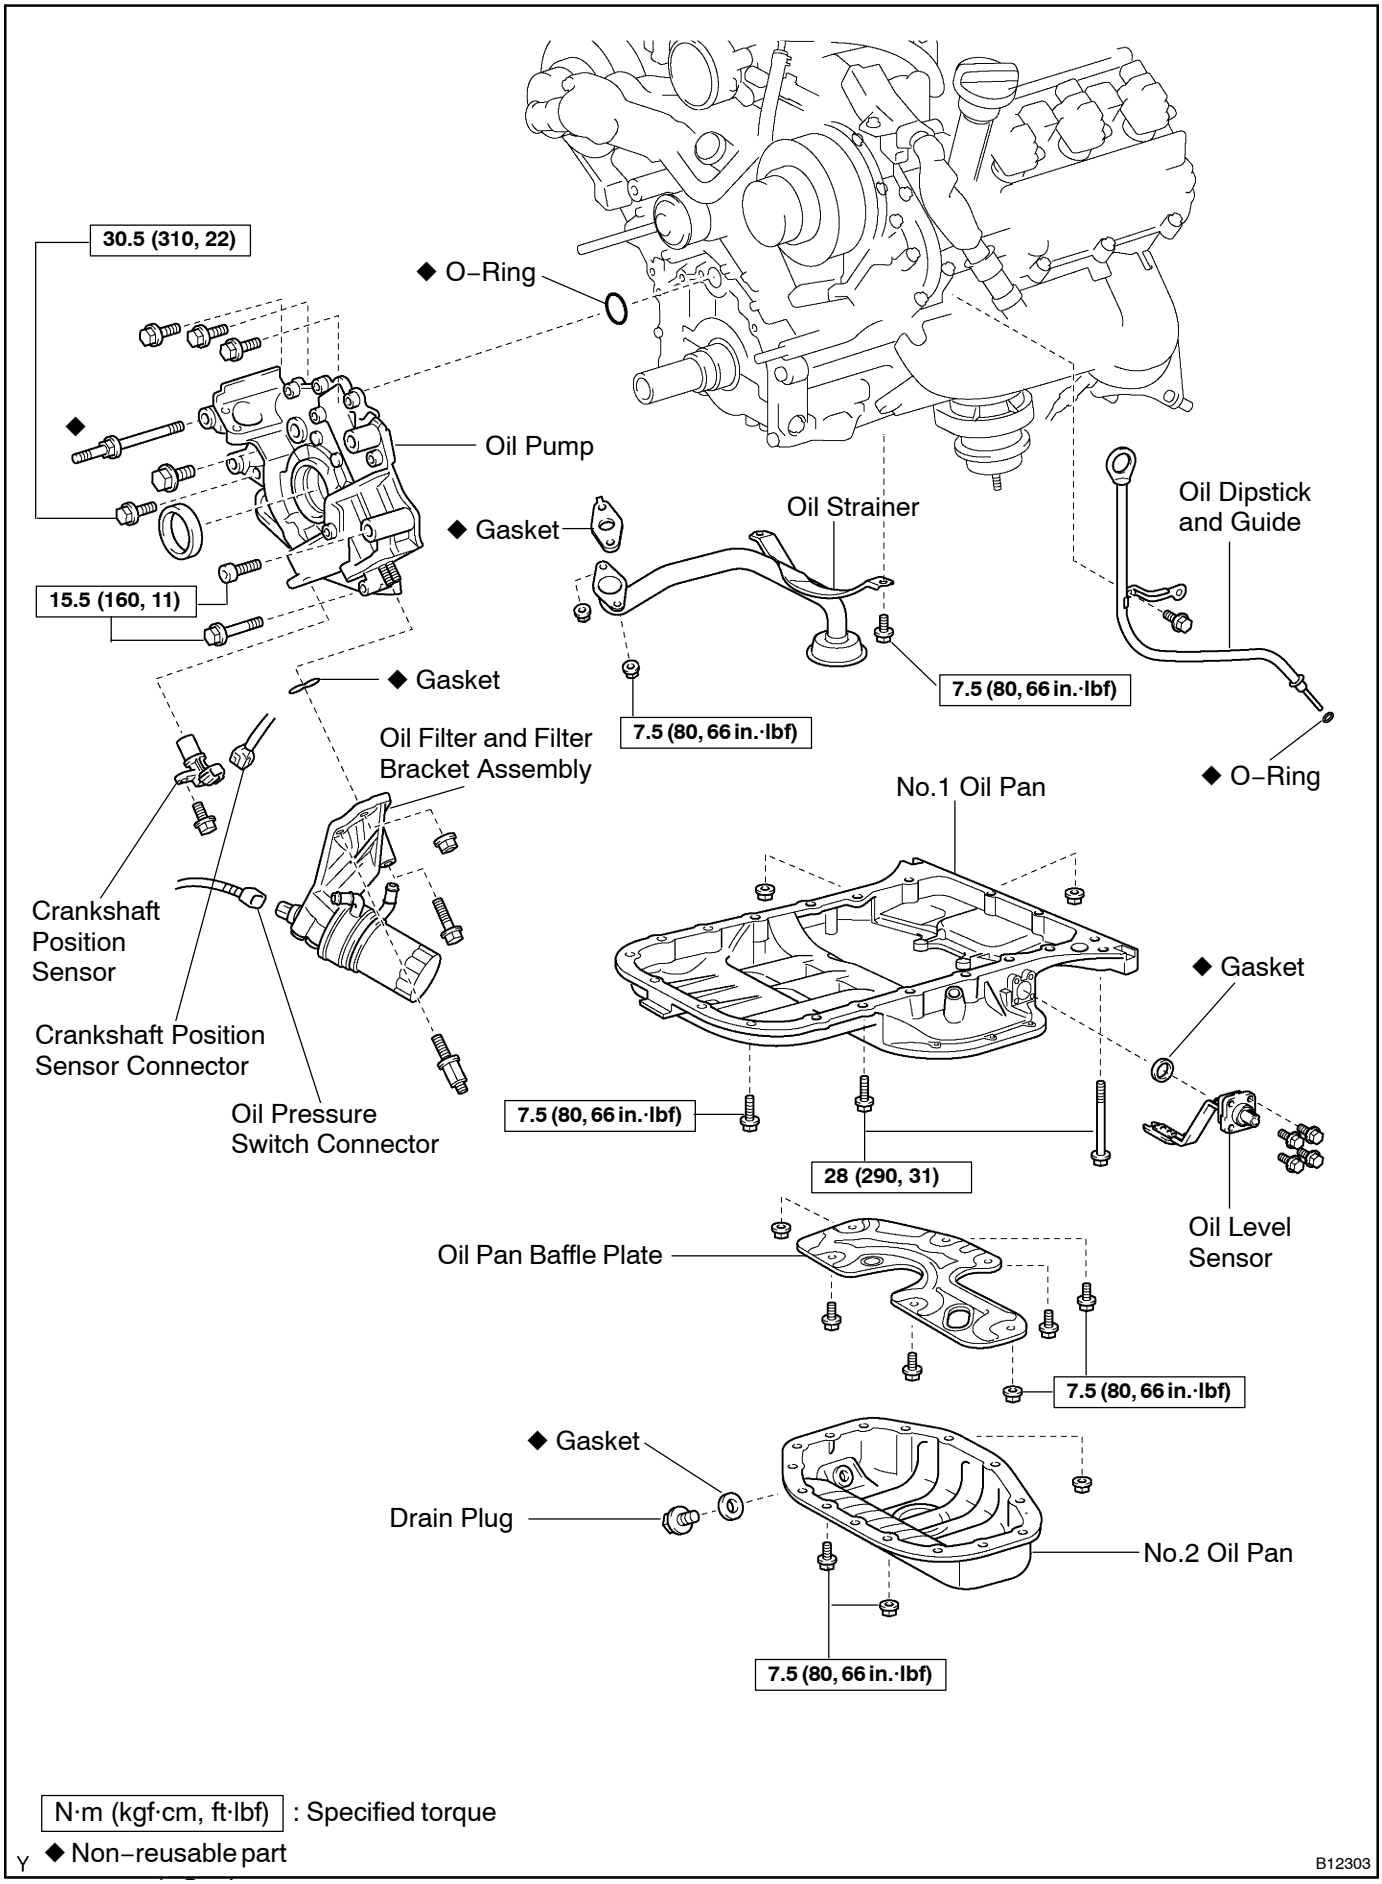
30.5 (310, 22)
◆ O–Ring
◆
Oil Pump
◆ Gasket
Oil Strainer
Oil Dipstick and Guide
15.5 (160, 11)
7.5 (80, 66 in.·lbf)
◆ Gasket
7.5 (80, 66 in.·lbf)
Oil Filter and Filter Bracket Assembly
◆ O–Ring
No.1 Oil Pan
Crankshaft Position Sensor
◆ Gasket
Crankshaft Position Sensor Connector
Oil Pressure Switch Connector
7.5 (80, 66 in.·lbf)
28 (290, 31)
Oil Level Sensor
Oil Pan Baffle Plate
7.5 (80, 66 in.·lbf)
◆ Gasket
Drain Plug
No.2 Oil Pan
7.5 (80, 66 in.·lbf)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
B12303

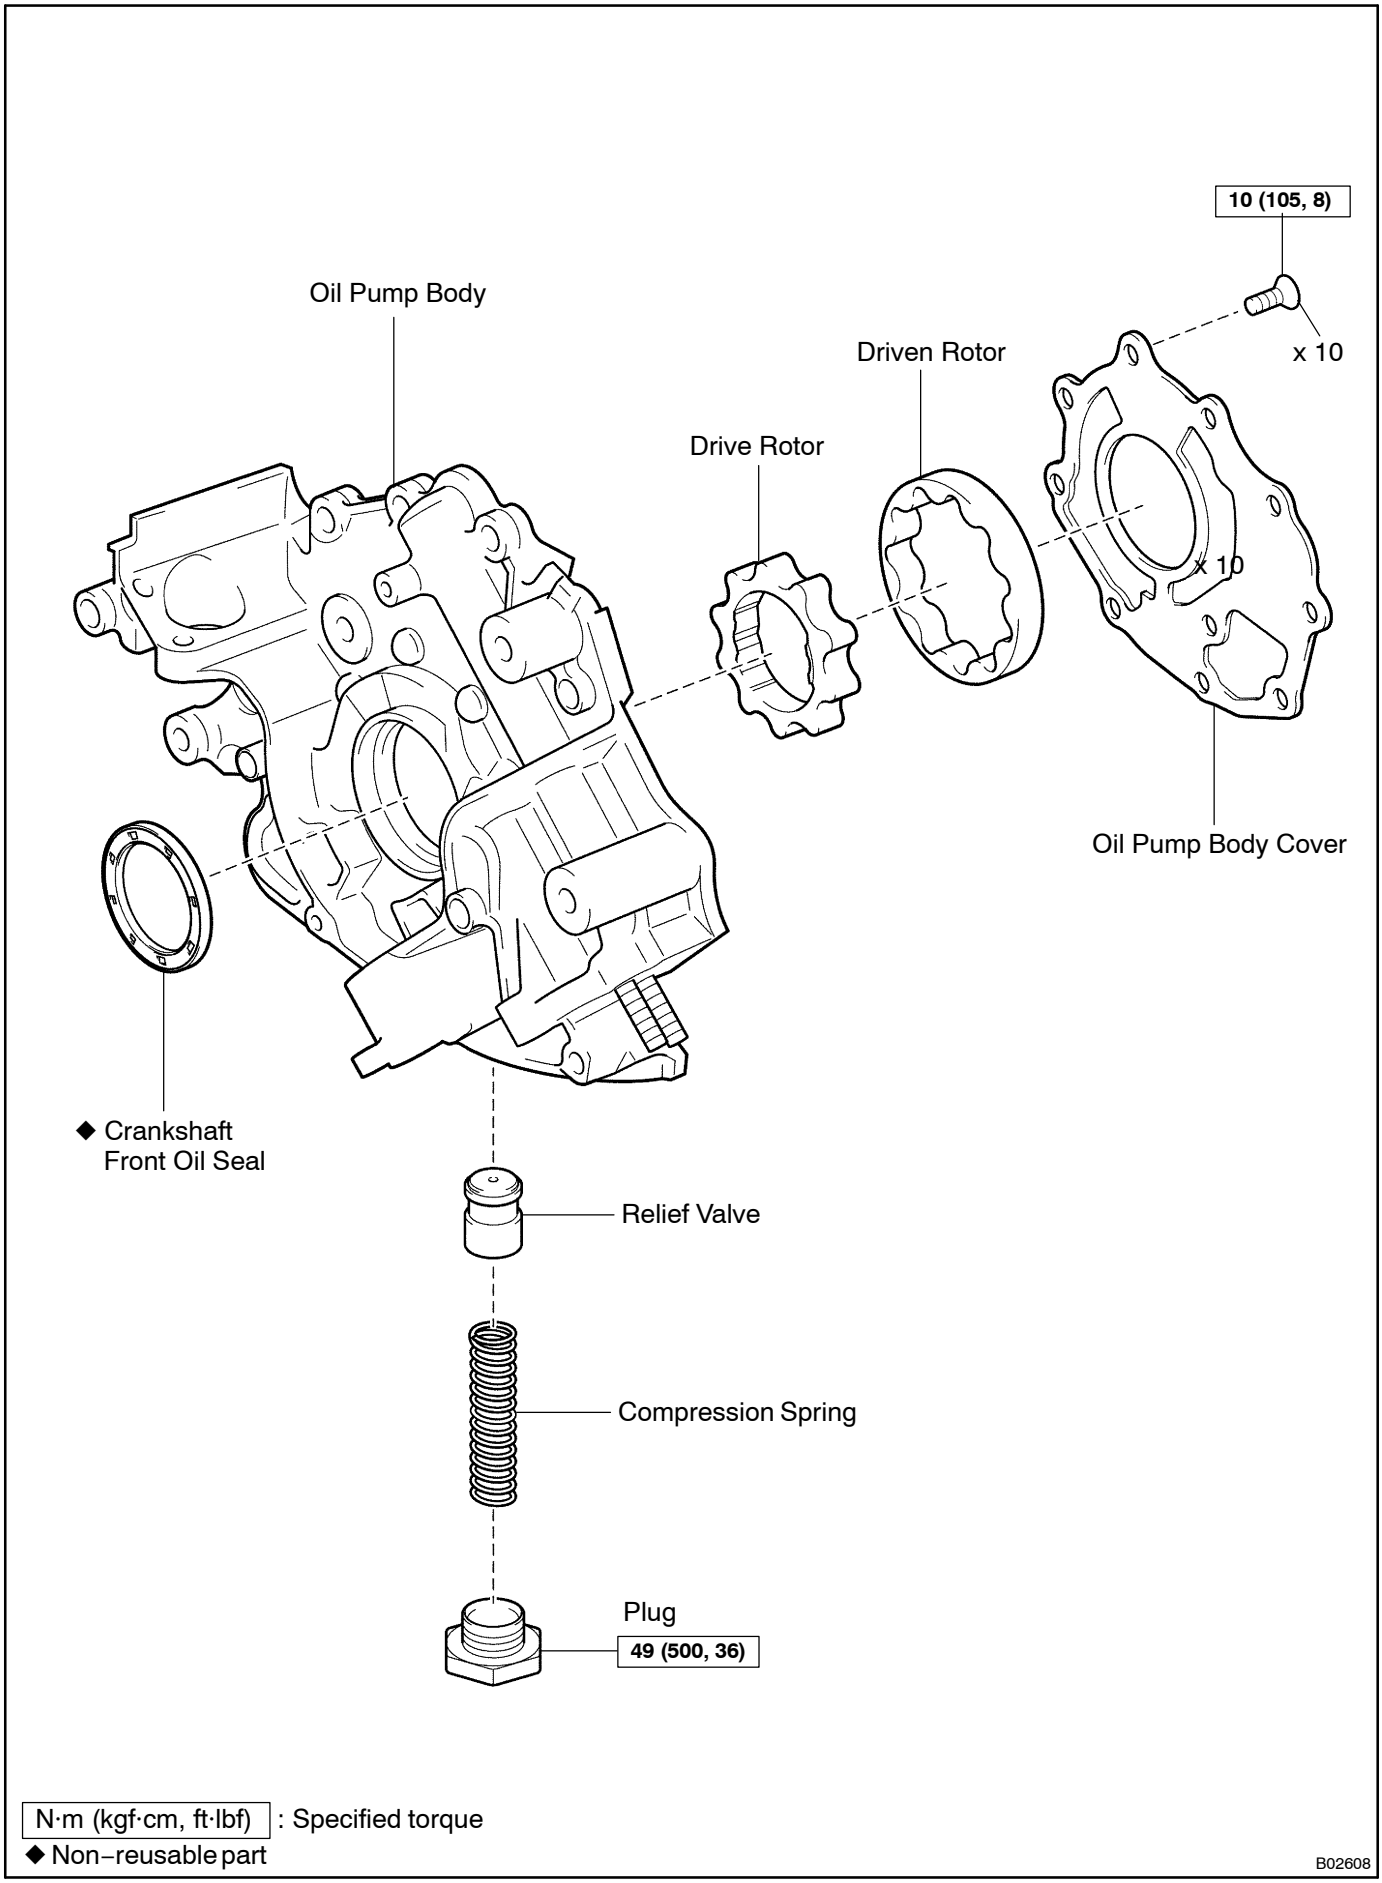
10 (105, 8)
x 10
Oil Pump Body
Driven Rotor
Drive Rotor
x 10
Oil Pump Body Cover
◆ Crankshaft
Front Oil Seal
Relief Valve
Compression Spring
Plug
49 (500, 36)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
B02608