Power door locking switches (if equipped)

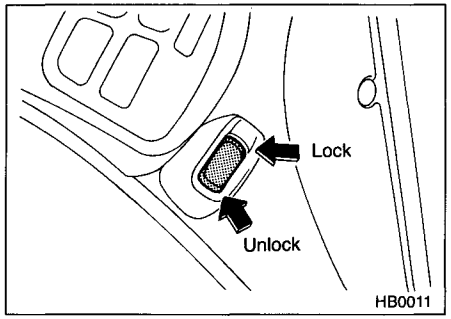

All doors and the rear gate (for wagon) can be locked and unlocked by the power door locking switches at the driver's side and the front passenger's side doors.

To lock the doors, press the upper part of the switches.
To unlock the doors, press the lower part of the switches.

When you close the doors after you set the door locks, the doors remain locked.

NOTE
Make sure that you do not leave the key inside the vehicle before locking the doors from the outside using power door locking switches.