




## Motor, Drain Tube and Frame Replacement

**CAUTION:** Be careful not to damage the seats, dashboard and other interior trim.



1. Remove the glass (page 14-34) and the headliner (page 14-39).
2. Disconnect the motor wire harness. Remove the clips securing the dome light wire harness.
3. Remove the sunroof motor by removing the two bolts and three nuts.
4. Disconnect the drain tubes.
5. Remove the ten mounting bolts from the frame, and remove the frame from the car.

**NOTE:** You may require assistance when removing the frame.

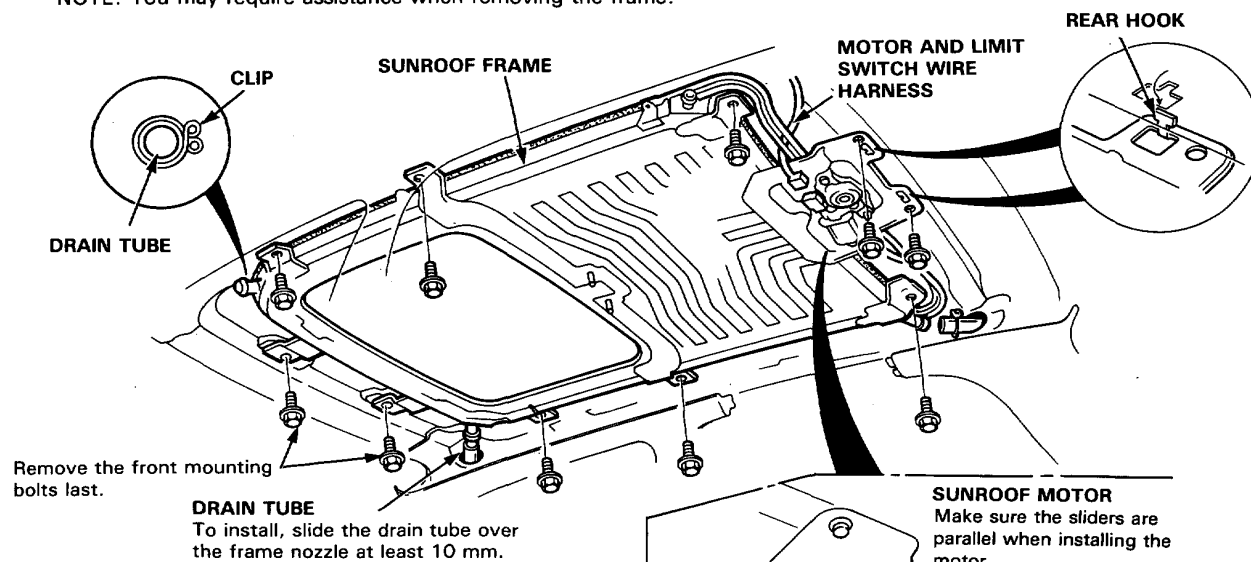

6. Pull the drain tubes out the front and rear pillars.

**NOTE:** Before pulling out the drain tube, tie a string to the end of it so it can be reinstalled.

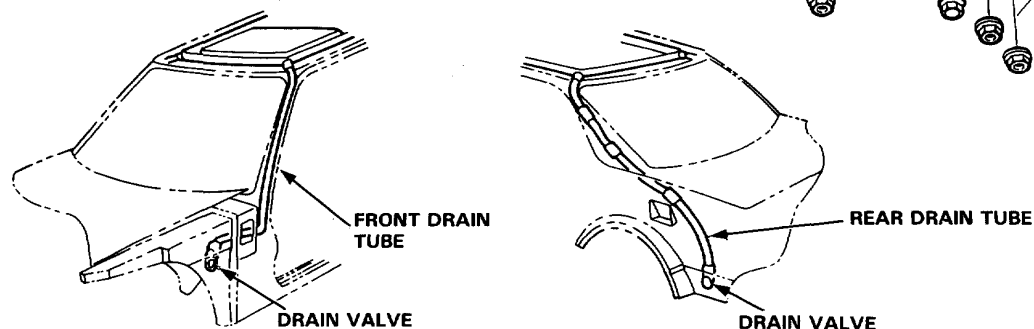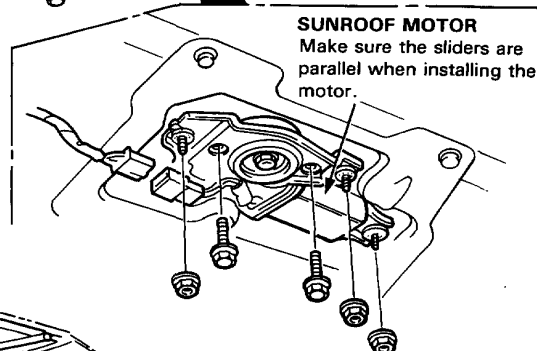

7. To install, insert the frame's rear hooks into the body holes, then install parts in the reverse order of removal.

**NOTE:**

- Insert over 10 mm of the drain tube onto the nozzle.
- Install the tube clips with the ends facing the side to ease installation of the headliner.
- Check the drain seal assembly.
- Check for water and air leaks.