

# Roof Molding


## Replacement

**CAUTION:** When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.


**NOTE:** Take care not to scratch the body and roof molding.

1. Pry the roof molding with a flat tip screwdriver as shown.


**CAUTION:** Use protective tape on the body.

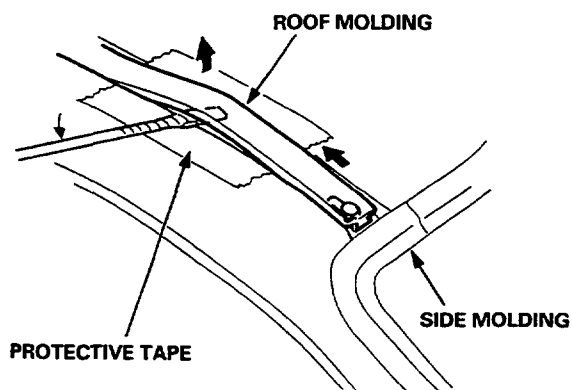

2. Pull and slide the roof molding, then detach the bracket on the end of the roof molding from the pin.

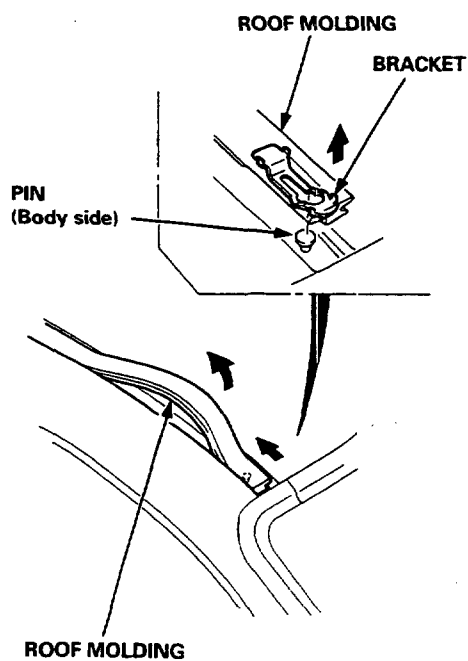

3. Pull the roof molding up, detach the bracket from the pin, then remove the roof molding.

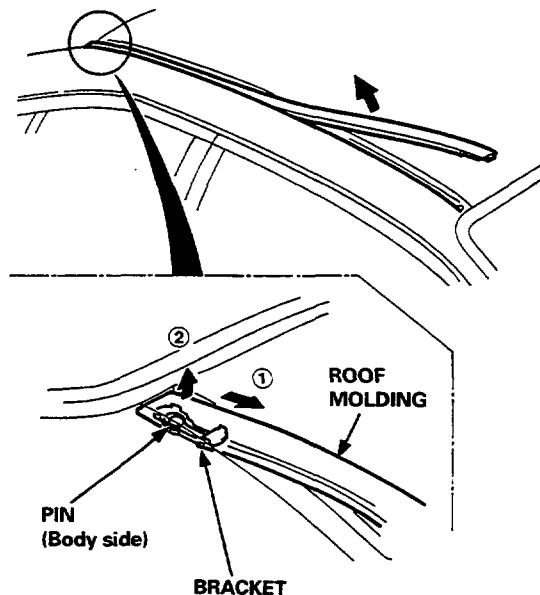

4. Installation is the reverse of the removal procedure.

**NOTE:**

- Take care not to damage the windshield side molding.
- Make sure the roof molding is installed securely.

