




## Installation

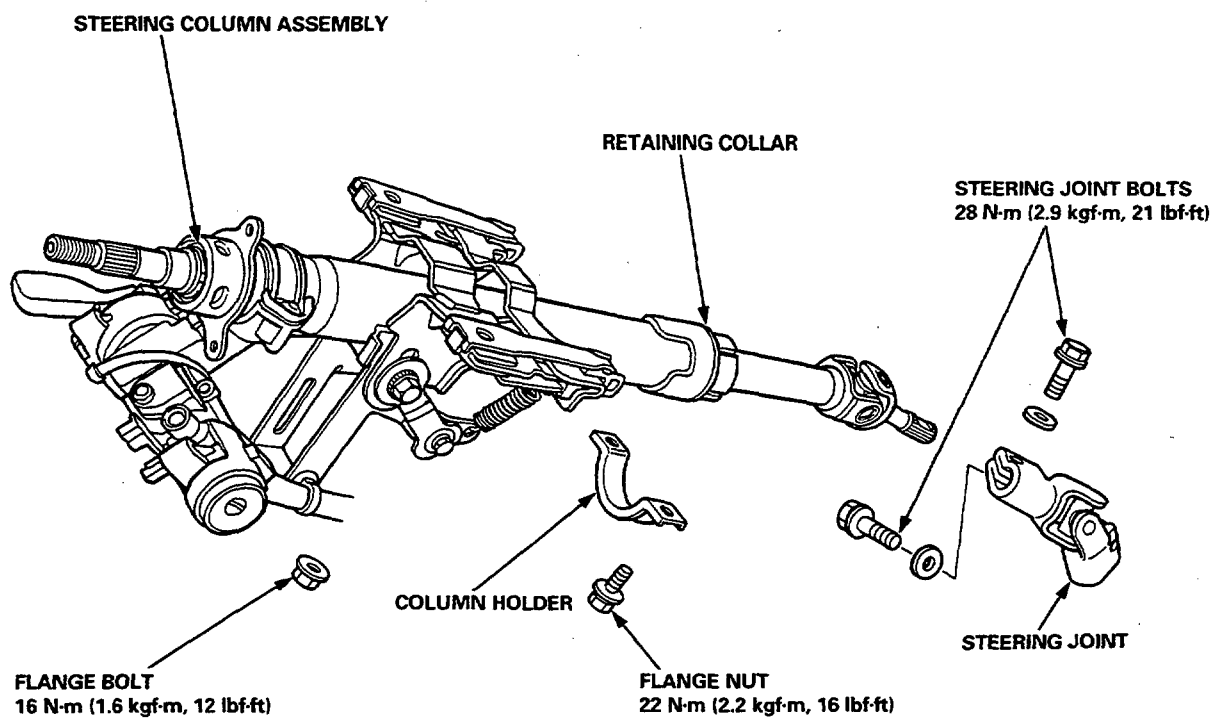

(cont'd)


# Steering Column

## Installation (cont'd)

### CAUTION:

- All SRS electrical wiring harnesses are covered with yellow insulation.
- When disconnecting the SRS wire harness, install the short connector on the airbag, then disconnect the wire harness.
- Replace the entire affected SRS harness assembly if there is an open circuit or damage to the wiring.


1. Slip the upper end of the steering joint onto the column shaft (line up the bolt hole with the flat on the shaft), and loosely install the upper steering joint bolt.

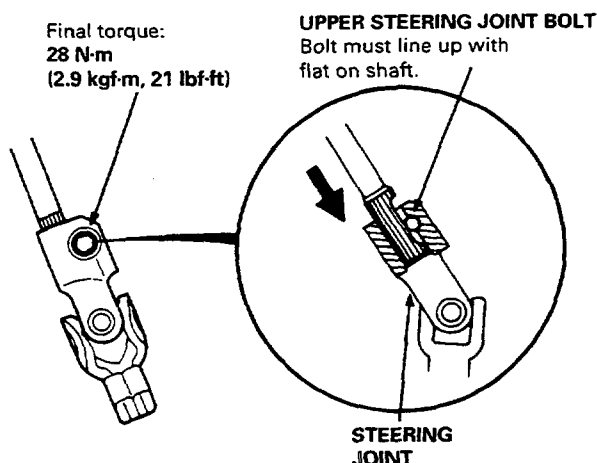

2. Slip the lower end of the steering joint onto the pinion shaft (line up the bolt hole with the groove around the shaft), and loosely install the lower bolt.


### NOTE:

- Be sure that the lower steering joint bolt, is securely in the groove in the steering gearbox pinion.
- Before tightening the steering joint bolts, pull on the steering joint to make sure that the steering joint is fully seated.

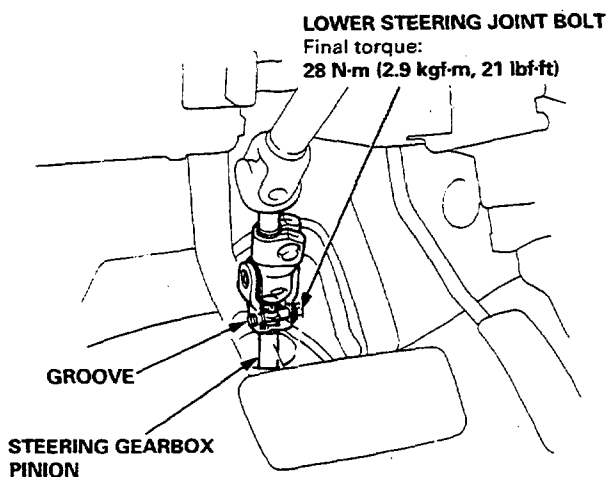


3. Install the steering column with the flange nuts, then install the column holder and flange bolts.
4. Tighten the upper and lower steering joint bolts loosely installed in step 2.

### STEERING COLUMN

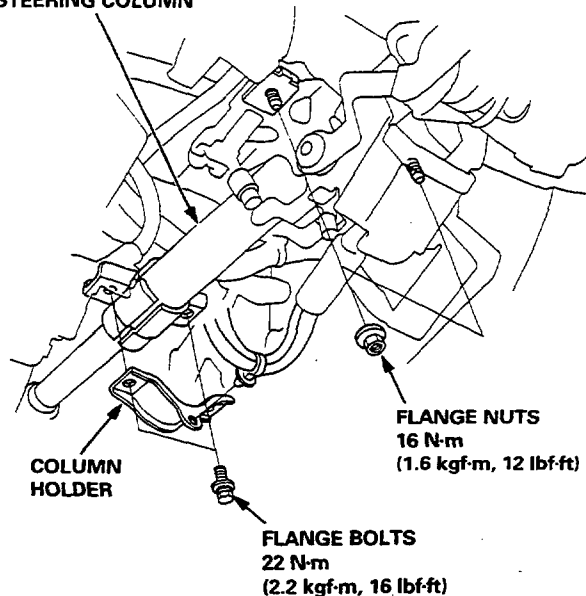


5. Install the steering joint cover with the clamps and clip.

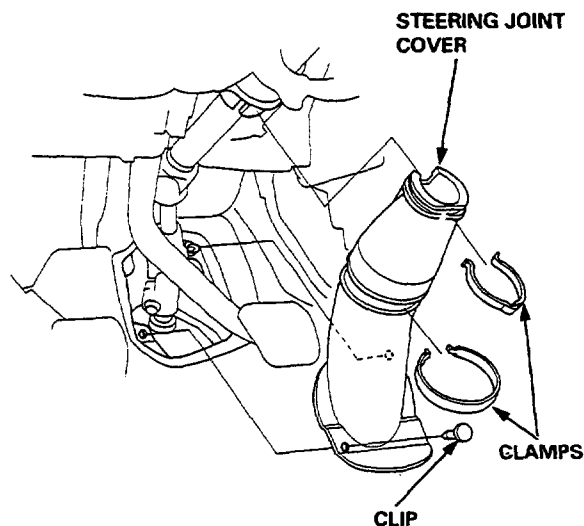




6. Connect the ignition switch wire connectors to the under-dash fuse/relay box.
7. Install the combination switch and turn signal canceling sleeve onto the steering column.

NOTE: Be sure the wires are not caught or pinched by any parts when installing the combination switch.

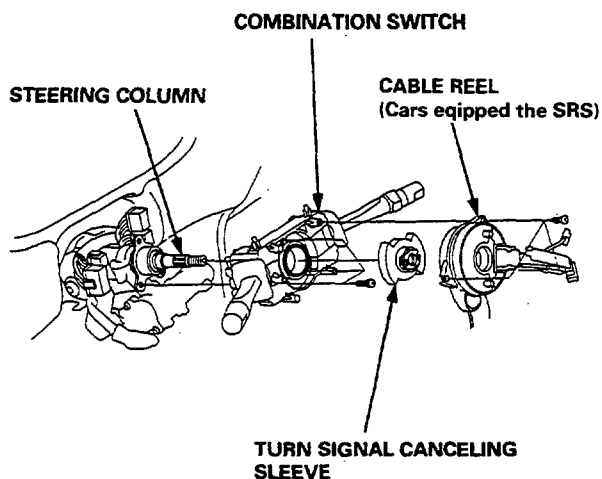


8. If cars equipped the SRS, install the cable reel onto the steering column, then connect the SRS main harness and cable reel wire harness and install the connector holder.

NOTE: Align the slot in the cable reel with the projection on the canceling sleeve.

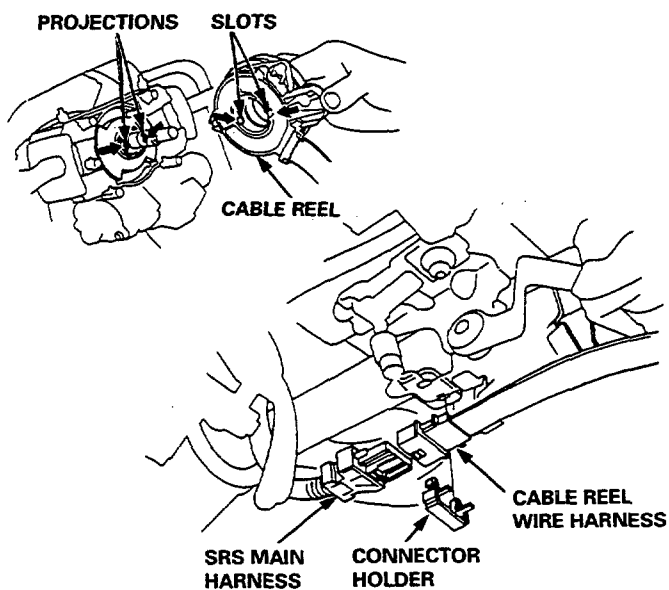

9. Install the column covers.

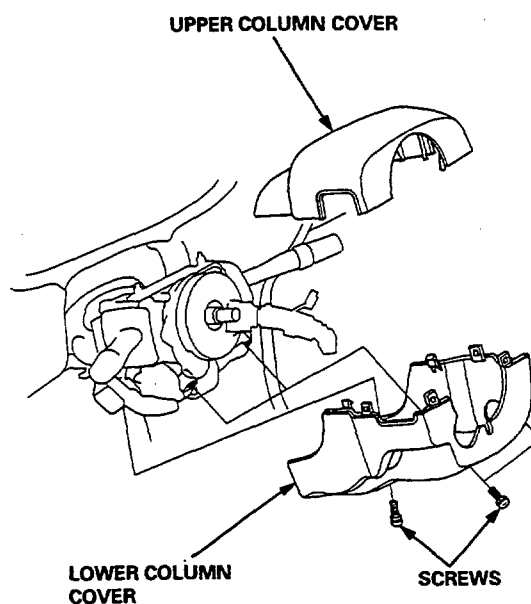

10. Install the lower cover.
11. Install the steering wheel (see page 17-25 and 27).

