


INSTALLATION


1. INSTALL THROTTLE BODY ASSEMBLY

- (a) Install a new gasket to the intake air connector.
- (b) TMC Made
 - (1) Install the throttle body with the 4 bolts.

Torque: 11 N*m (112 kgf*cm, 8 ft.*lbf)

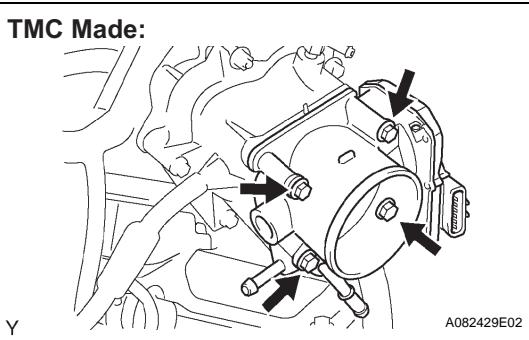


ES

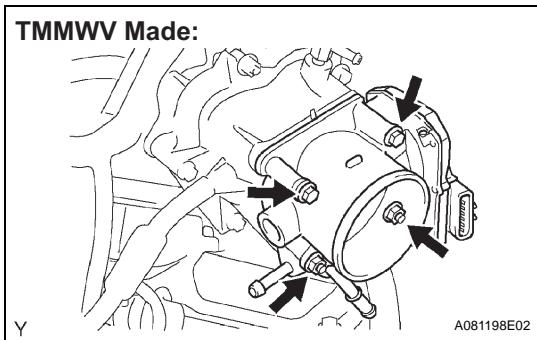

- (c) TMMWV Made

- (1) Install the throttle body with the 2 bolts and 2 nuts.

Torque: 11 N*m (112 kgf*cm, 8 ft.*lbf)

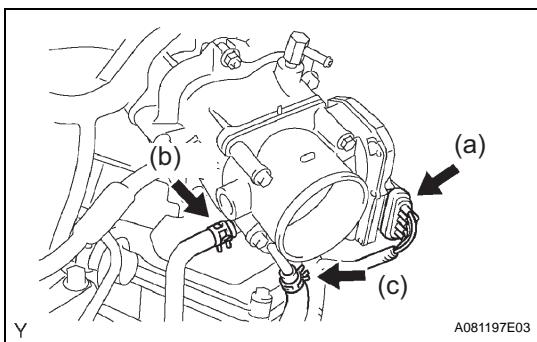

- (d) Connect the water by-pass hose No.3.
- (e) Connect the water by-pass hose No.2.
- (f) Connect the throttle motor connector.

2. INSTALL INTAKE AIR RESONATOR

3. INSTALL AIR CLEANER ASSEMBLY (See page [ST-12](#))

4. INSTALL AIR CLEANER INLET NO.2 (See page [ST-12](#))

5. CHECK CONNECTION OF VACUUM HOSE (See page [EM-127](#))

6. ADD ENGINE COOLANT (See page [CO-7](#))

7. CHECK FOR ENGINE COOLANT LEAKS (See page [CO-1](#))

8. INSTALL V-BANK COVER SUB-ASSEMBLY

- (a) Fit the 2 retainers and install the V-bank cover.
- (b) Using a socket hexagon wrench 5, tighten the 3 nuts.

Torque: 7.9 N*m (81 kgf*cm, 70 in.*lbf)