

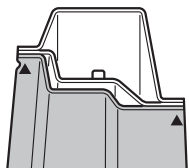


REPAIR WELDS


Cut the body side outer panel in alignment with new quarter panel outer.

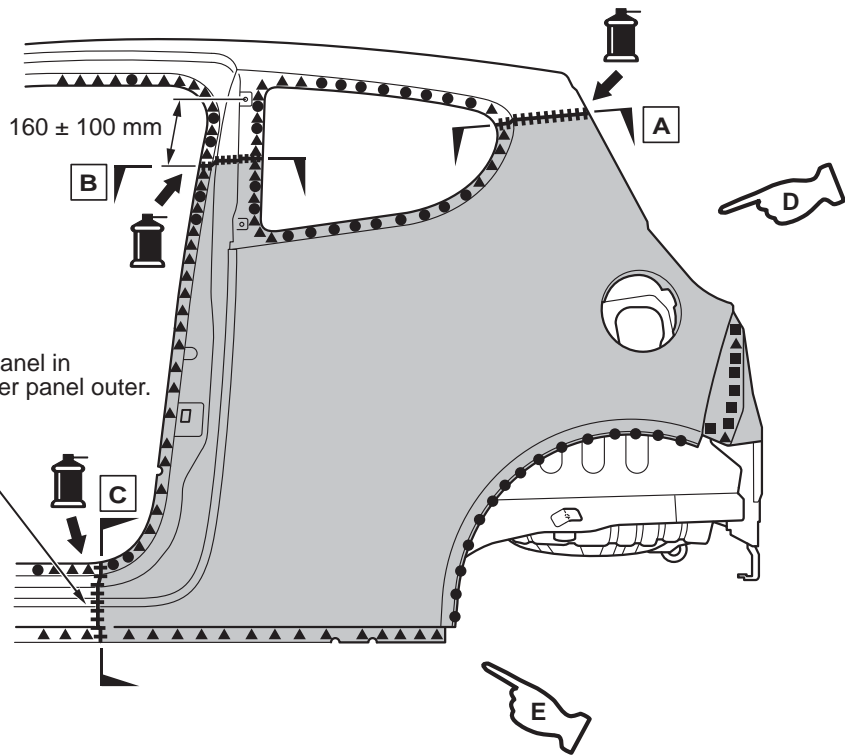

A

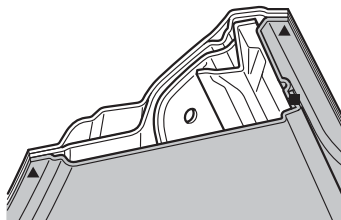

B

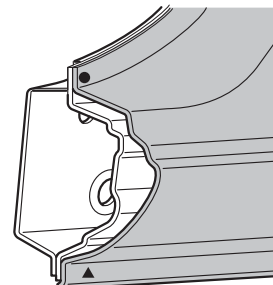

C