

GENERAL DESCRIPTION

Body Structure

1. General Description S906001


A: CAUTION S906001A03

Airbag system wiring harness is routed on and along body panels.

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
- Be careful not to damage Airbag system wiring harness when repairing the body panel.

B: PREPARATION TOOL S906001A17

Use a tram tracking gauge to measure all dimensions. If a measuring tape is used, be extremely careful because it tends to deflect or twist, which results in a false reading.

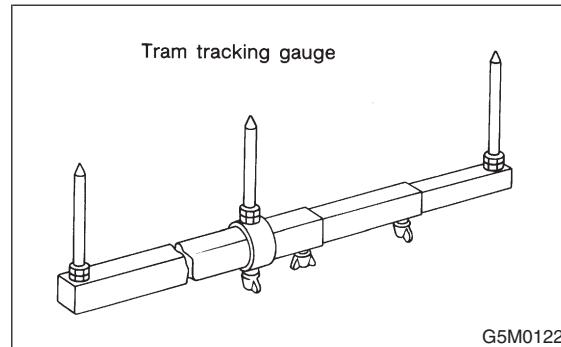

NOTE:

- A suffix character "R" or "L" refers to the right or the left.
- All dimensions refer to the distance between the centers of holes measured in a straight line
- Each dimension indicates a projected dimension between hole centers.

GENERAL DESCRIPTION

Body Structure

MEMO: