


SUNROOF LID

Sunroof/T-top/Convertible Top (Sunroof)


3. Sunroof Lid S910536

A: REMOVAL S910536A18


- 1) Open sunroof approx. 1/3.
- 2) Remove clips attached to front side of sunroof trim by pulling trim from inside of compartment.

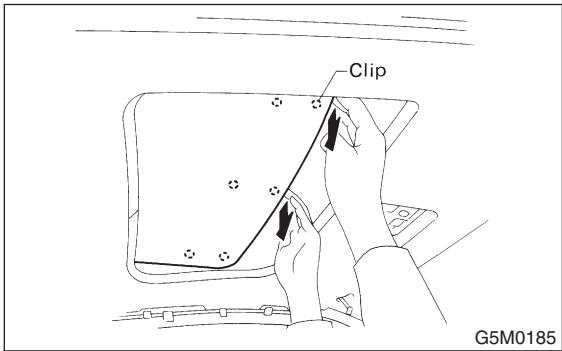


- 3) Move trim forward, and detach trim end from holder.

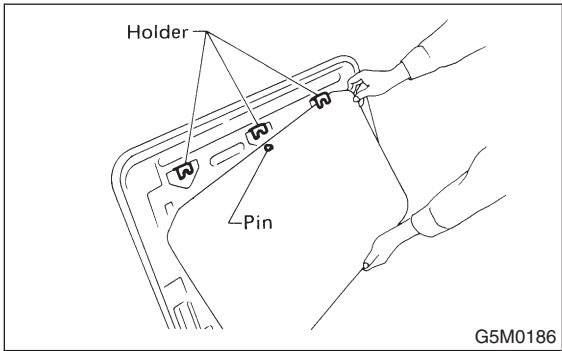

- 4) Detach trim.

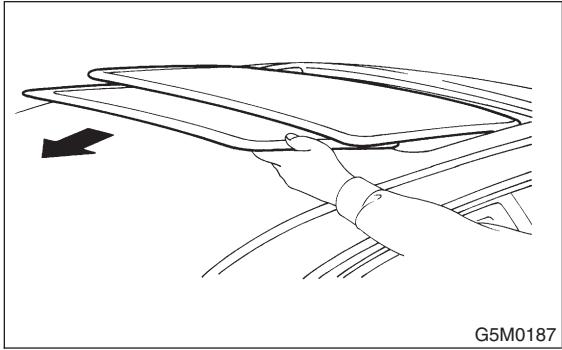

- 5) Close sunroof and remove nuts.

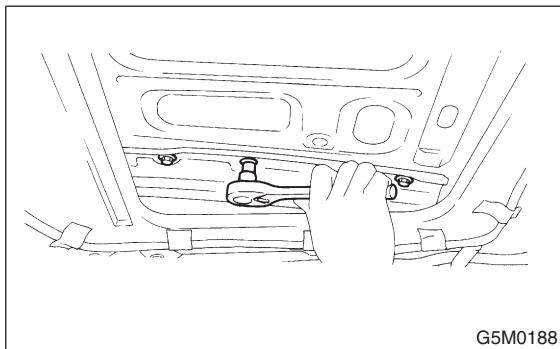

- 6) Remove sunroof panel.

B: INSTALLATION S910536A11

Install in the reverse order of removal.

NOTE:

Sunroof trim reference pin must be fitted in holder notch.