


## 12. Rear Window Glass

### A: REMOVAL

- 1) Disconnect the electrical connectors from the rear defogger terminals.
- 2) Remove the glass in the same procedure as for windshield glass. <Ref. to GW-18, REMOVAL, Windshield Glass.>

### B: INSTALLATION

- 1) Bond the dam rubber and matching pin.

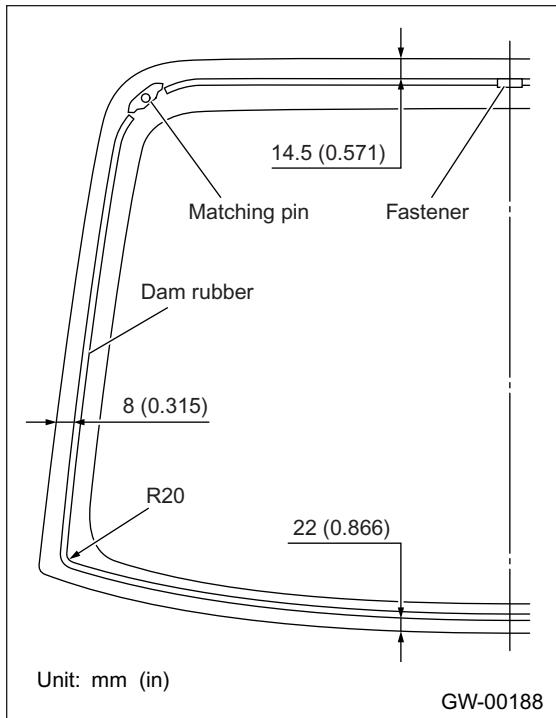

- 2) Install the glass in the same procedure as for windshield glass. <Ref. to GW-19, INSTALLATION, Windshield Glass.>

- 3) Connect the rear defogger terminals.

#### CAUTION:

- When door is opened/closed after glass is bonded, always lower door glass and then open/close door carefully.
- Move vehicle slowly.

- 4) After completion of all work, allow the vehicle to stand for about 24 hours.

#### NOTE:

For minimum drying time and time the vehicle must be left standing before driving after bonding, follow instructions or instruction manual from the adhesive manufacturer.

- 5) After curing of adhesive, pour the water on external surface of vehicle to check that there are no water leaks.

#### CAUTION:

When a vehicle is returned to the user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.