



FRONT FENDER FRONT APRON (ASSY) REPLACEMENT

1. REMOVE FRONT FENDER FRONT APRON

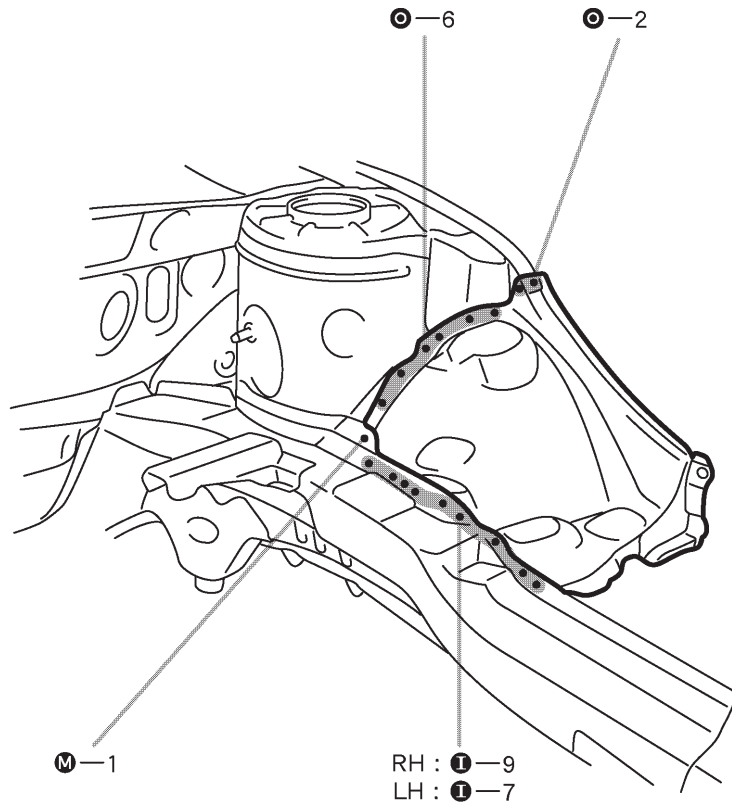

2. INSTALL FRONT FENDER FRONT APRON

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

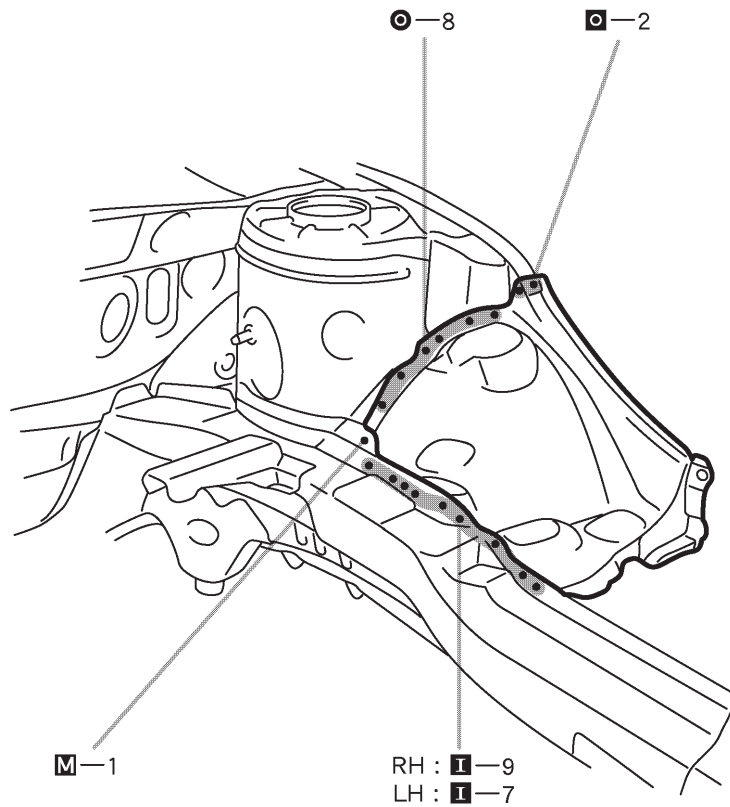

F10310

3. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)**4. APPLYING UNDERCOATING (See page PC-5)****5. APPLYING ANTI-RUST AGENT**

- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.