


## FRONT FENDER APRON (ASSY) REPLACEMENT

1. REMOVE COWL TOP SIDE PANEL ([See page BP-14](#))
2. REMOVE FRONT FENDER APRON

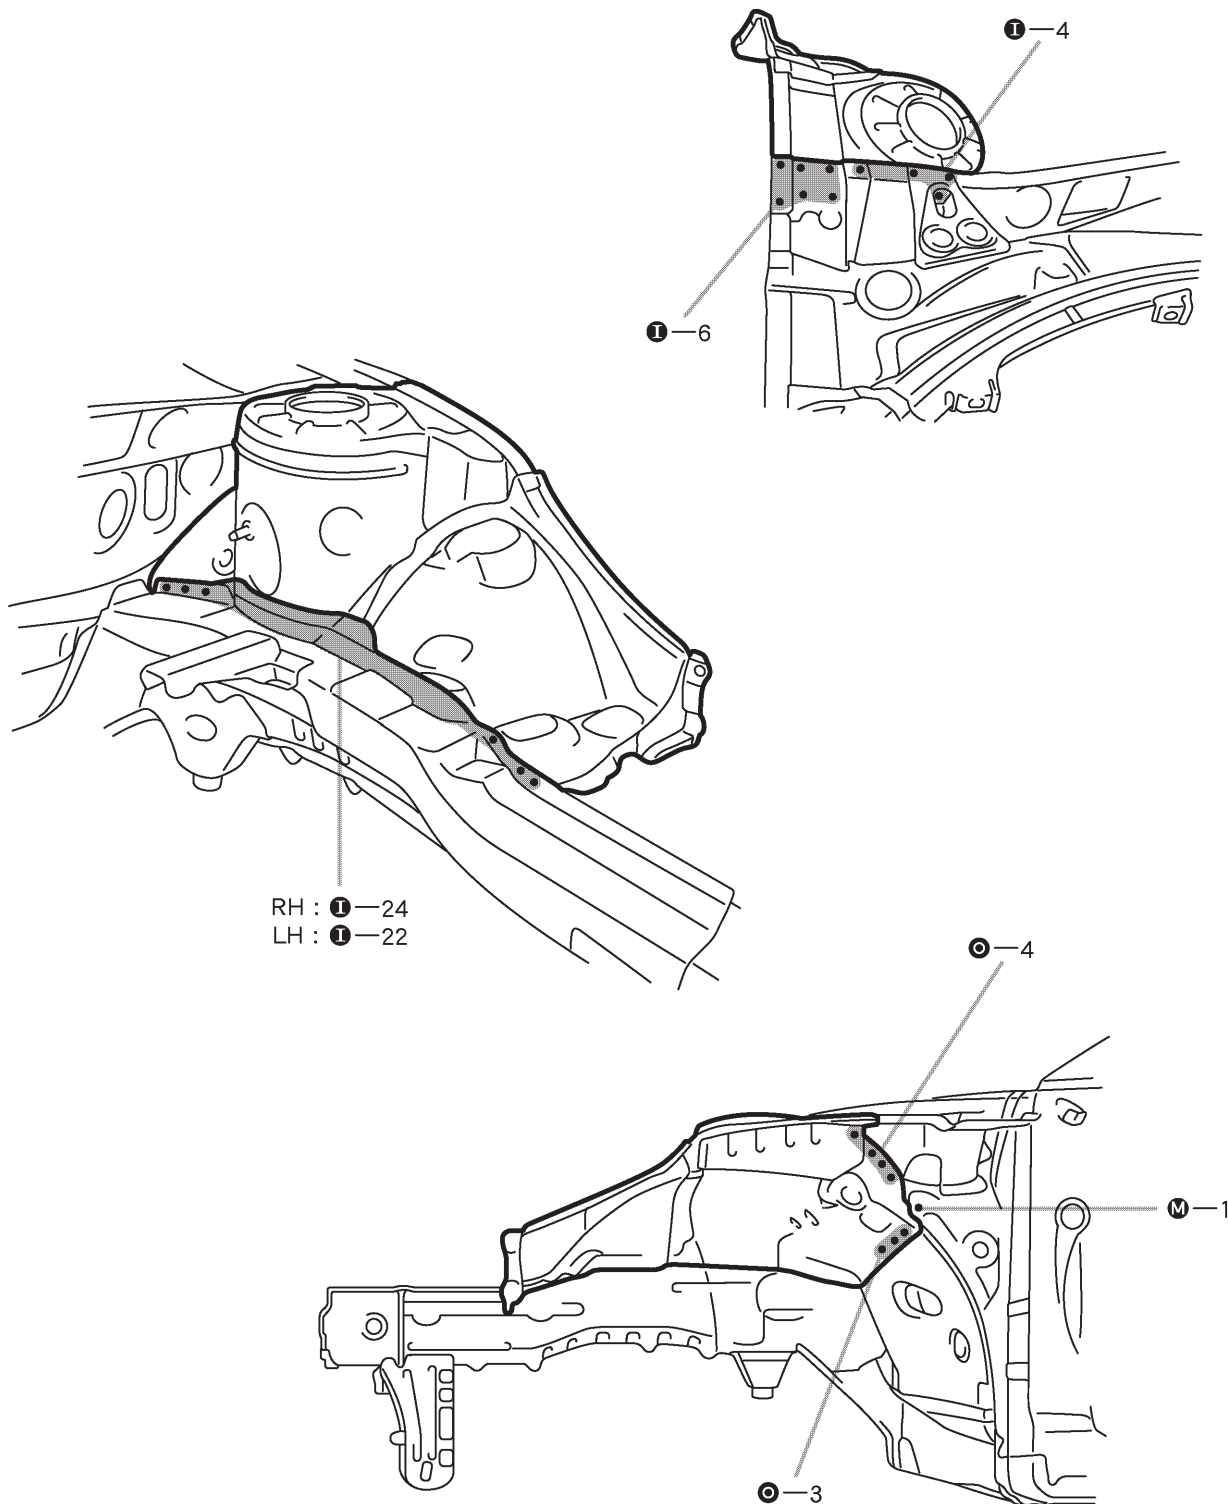

### 3. INSTALL FRONT FENDER APRON


**HINT:**

Inspect the fitting of the front fender and hood, etc. before welding, since this affects the appearance of the finish.

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

**HINT:**

Make sure each measurement is correct, as this parts affects the front wheel alignment.

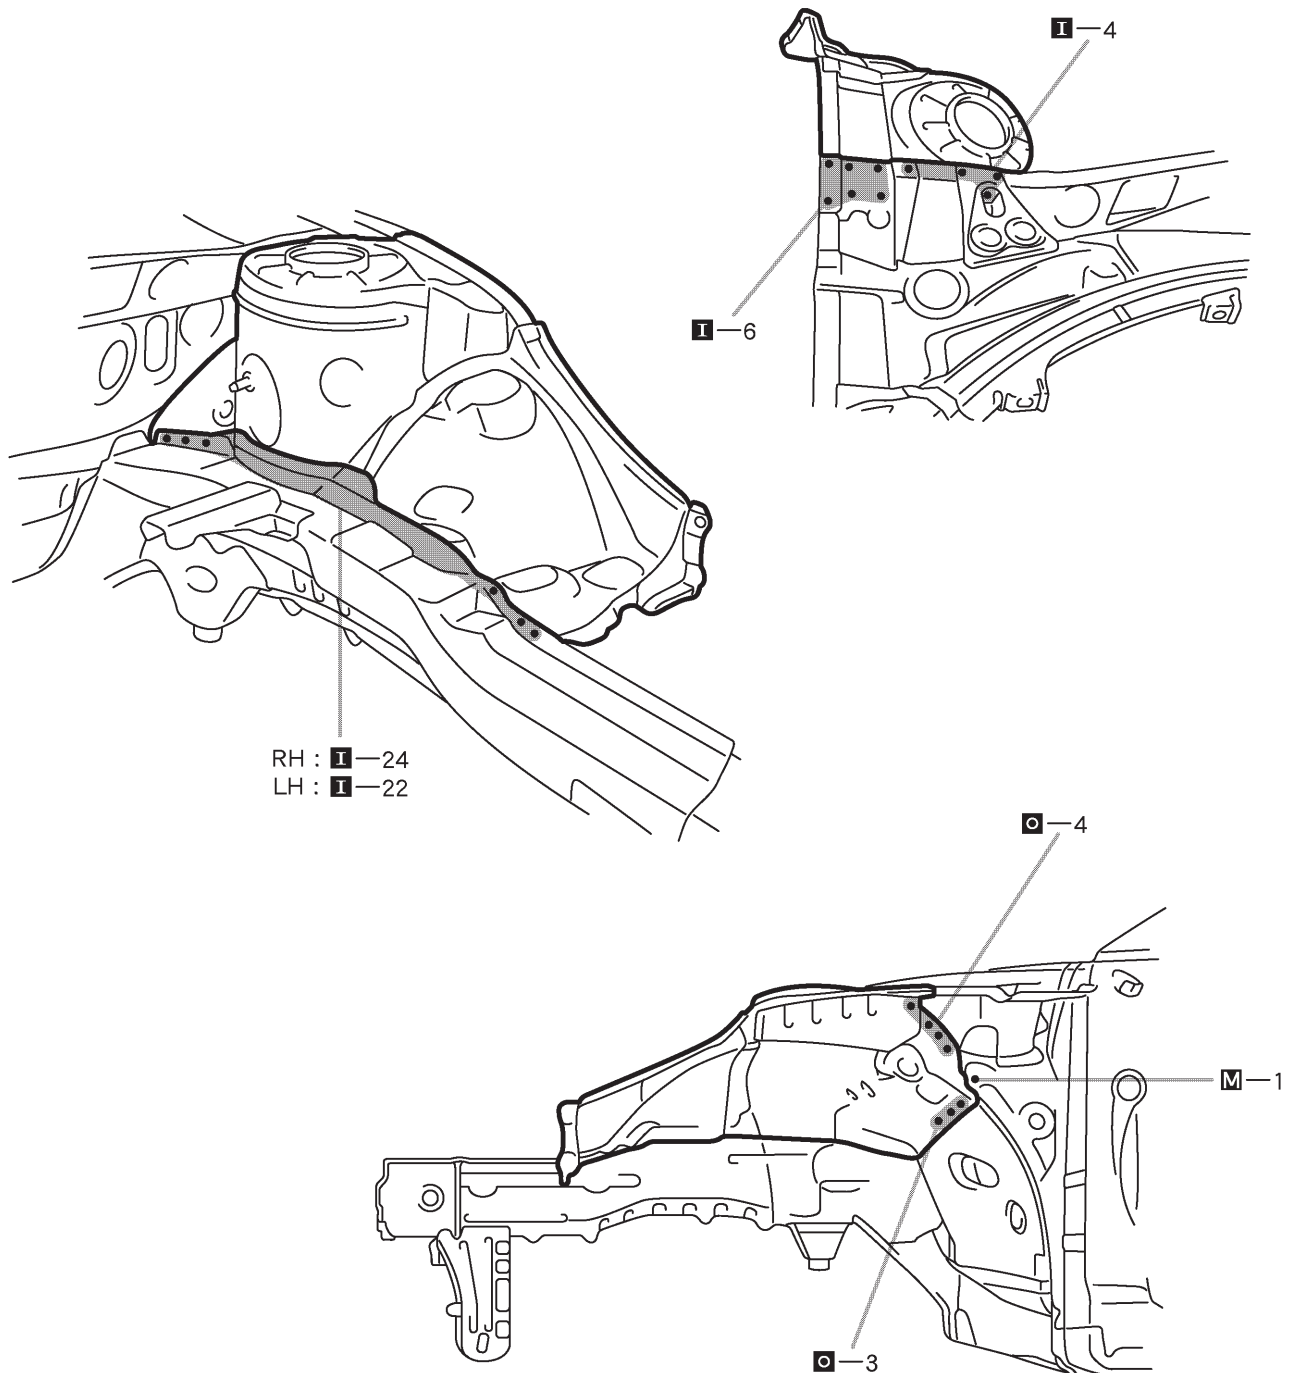

4. MEASURING THE ENGINE COMPARTMENT DIMENSIONS ([See page BP-72](#))
5. INSTALL COWL TOP SIDE PANEL ([See page BP-14](#))
6. APPLYING SEALER TO THE ENGINE COMPARTMENT ([See page PC-1](#))
7. APPLYING SEALER TO THE INSIDE OF THE VEHICLE ([See page PC-1](#))
8. APPLYING UNDER COATING ([See page PC-5](#))
9. APPLYING ANTI-RUST AGENT
  - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.