

INSTALLATION

1. CLEAN BODY MOUNTING SURFACE

- (a) Using a heat light, heat the body mounting surface to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the body excessively.

- (b) Remove the adhesive tape from the body.
- (c) Wipe off stains with cleaner.

2. If reusing the moulding:


CLEAN MOULDING

- (a) Using a heat light, heat the moulding to 20 – 30 °C (68 – 86 °F).

NOTICE:


Do not heat the moulding excessively.

- (b) Remove the adhesive tape from the moulding.
- (c) Wipe off stains with cleaner.
- (d) Apply a new adhesive tape to the moulding.

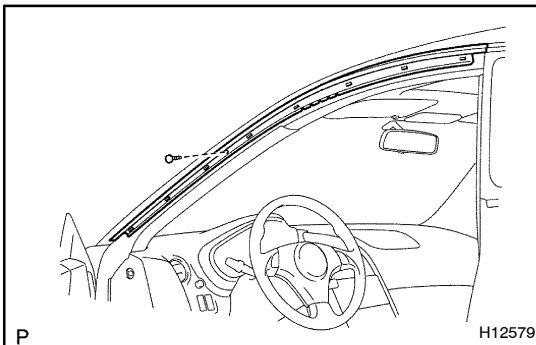

3. INSTALL ROOF DRIP SIDE MOULDING


- (a) If using a new moulding;
Secure the roof drip side moulding with the clip for temporary attachment.

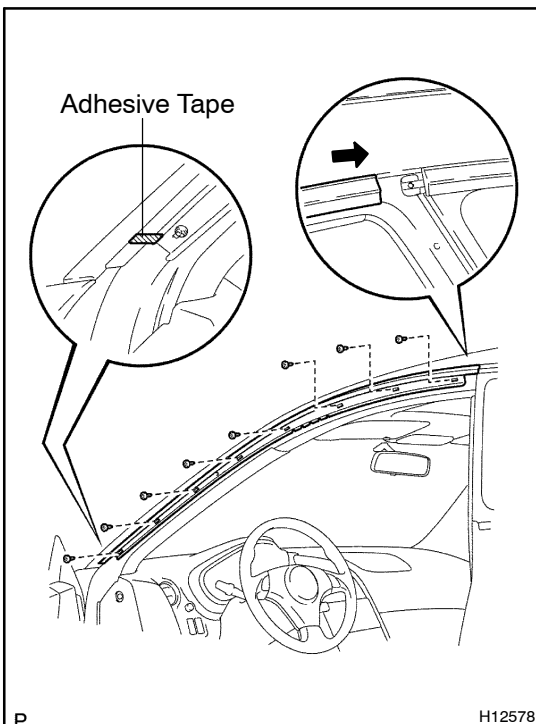

- (b) Install the roof drip side moulding with the 8 screws.

HINT:

When installing the moulding, tighten the screws from the rear side to the front side of the moulding.

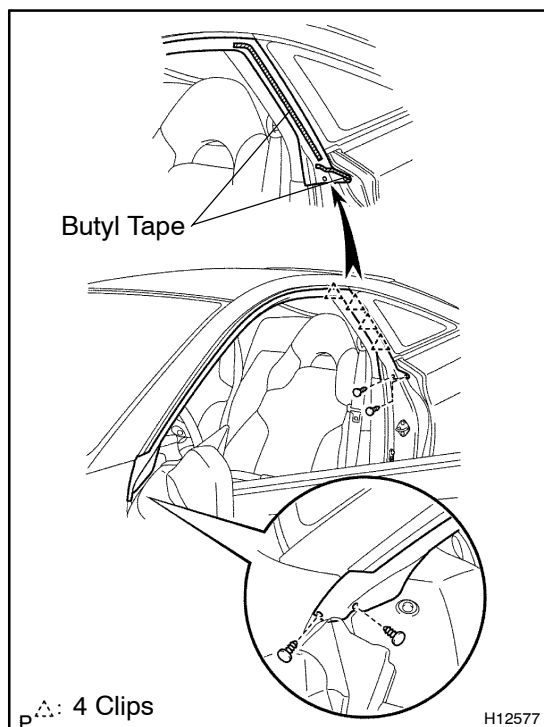

4. INSTALL ROOF SIDE RAIL WEATHERSTRIP

Install the roof side rail weatherstrip with the 4 clips as shown in the illustration.