


DISASSEMBLY

1. REMOVE SUNSHADE STOPPERS
Torque: 2.0 N·m (20 kgf·cm, 17 in·lbf)
2. REMOVE NO. 1 AND NO. 2 SUNSHADE TRIMS

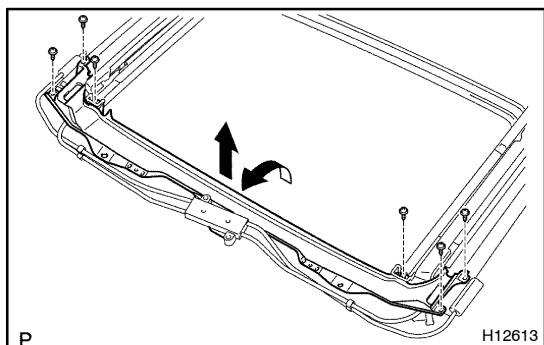


3. REMOVE FRONT HOUSING FRAME

Remove the 6 screws and front housing frame as shown in the illustration.

Torque: 2.0 N·m (20 kgf·cm, 17 in·lbf)


4. REMOVE REAR ROOF DRIP CANNEL

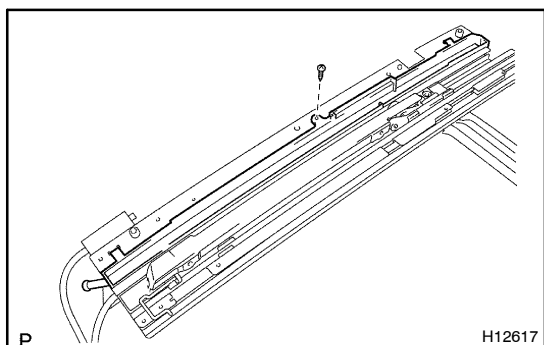

5. REMOVE LH AND RH ROOF DRIP CHANNEL

6. REMOVE CABLE GUIDE CASING

Torque: 2.0 N·m (20 kgf·cm, 17 in·lbf)

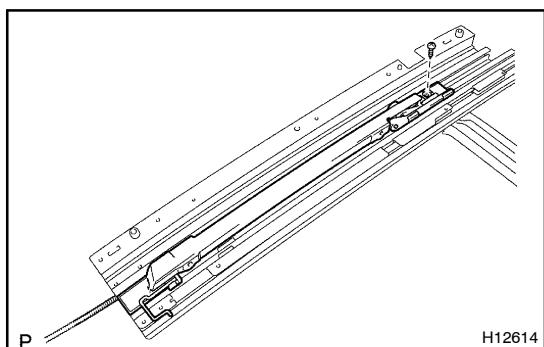

7. REMOVE DRIVE CABLE

- (a) Remove the screw.
- (b) Slide the drive cable rearward, then remove it.
- (c) Employ the same manner described above to the other side.

HINT:

At the time of reassembly, please refer to the following items.

- Adjust the drive cable to a closed and tilted down position.
- Slide the cable forward or backward to align the 2 marks as shown in the illustration.

