


INSTALLATION

1. INSTALL MASTER CYLINDER WITH 2 MOUNTING NUTS

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

2. INSTALL PIN AND CLIP

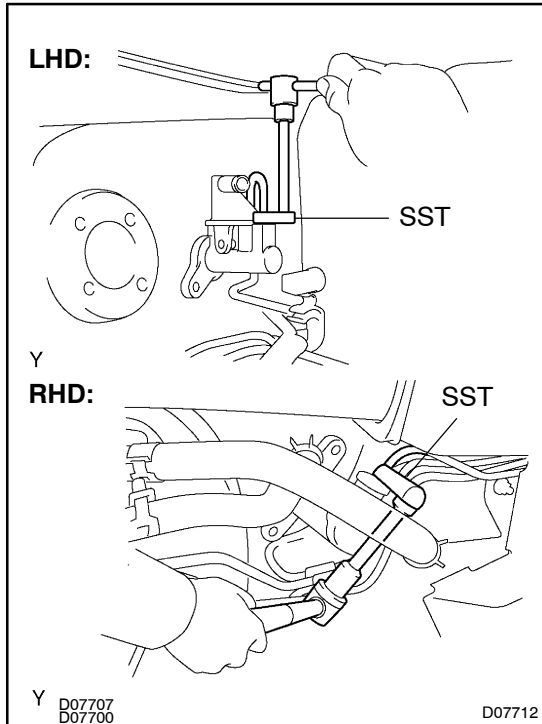


3. CONNECT CLUTCH LINE

Using SST, connect the clutch line.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

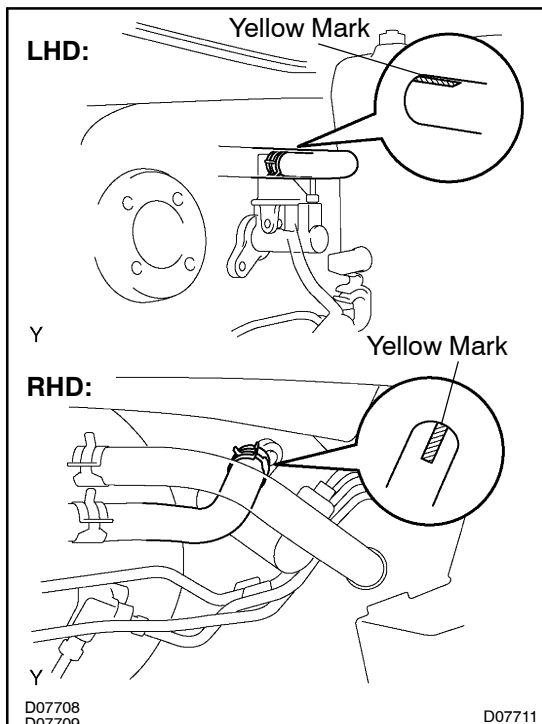

4. CONNECT RESERVOIR HOSE

(a) Connect the reservoir hose to the inlet union.

NOTICE:

Facing the yellow mark upwards.

(b) Using pliers, connect the clip.

5. LHD:

INSTALL BRAKE BOOSTER (See page BR-15)

6. FILL BRAKE RESERVOIR WITH BRAKE FLUID AND BLEED CLUTCH SYSTEM (See page BR-4)

7. ADJUST CLUTCH PEDAL (See page CL-2)

8. CHECK FOR LEAKS