


REASSEMBLY

1. INSTALL BLEEDER PLUG

Torque: 8.4 N·m (85 kgf·cm, 74 in.·lbf)

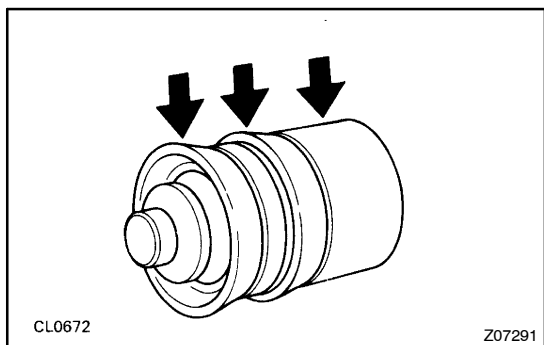

2. COAT PISTON WITH LITHIUM SOAP BASE GLYCOL GREASE, AS SHOWN

3. INSTALL PISTON AND SPRING INTO CYLINDER

4. INSTALL BOOT AND PUSH ROD

- (a) Install the push rod to the boot.
- (b) Install the boot with the push rod to the cylinder.